80445-109-01A
January 2001
Seneca, SC, USA

Instruction Bulletin

Model 6 OMNI-Center Enhanced
Using MOTOR LOGIC PLUS™
Class 8998

Retain for future use.

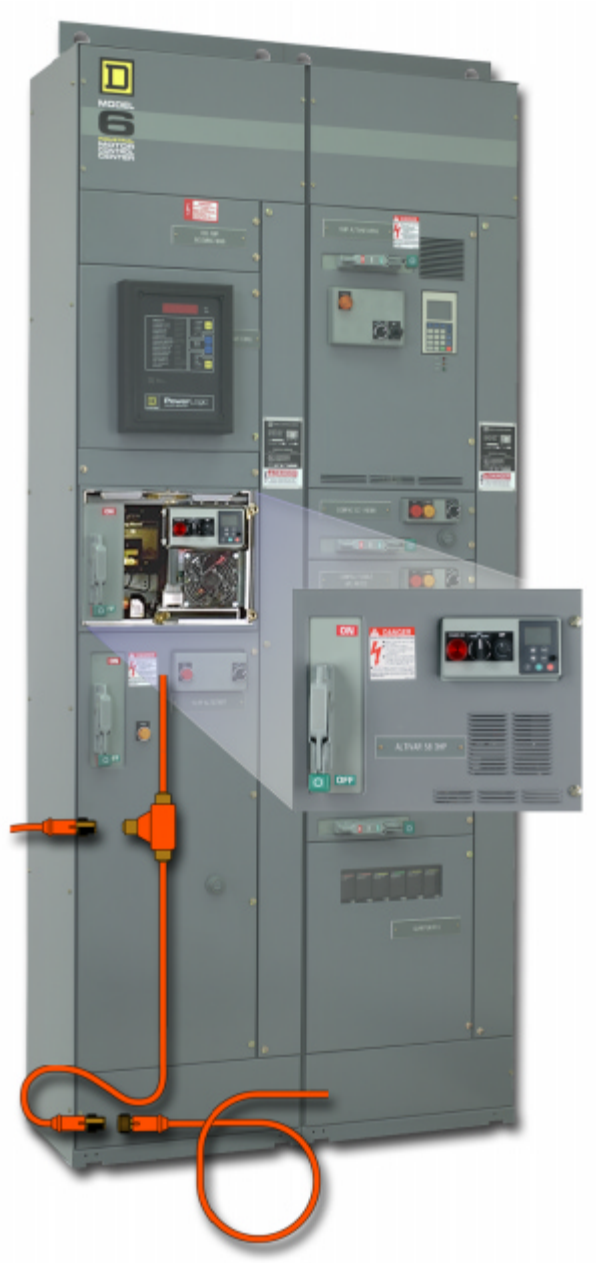

SQUARE D

NOTICE

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, or maintain it. The following special messages may appear throughout this bulletin or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.

The addition of either symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.

This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

⚠DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, **will result** in death or serious injury.

⚠WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, **can result** in death or serious injury.

⚠CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, **can result** in minor or moderate injury.

CAUTION

CAUTION, used without the safety alert symbol, indicates a potentially hazardous situation which, if not avoided, **can result** in property damage.

NOTE: Provides additional information to clarify or simplify a procedure.

PLEASE NOTE

Electrical equipment should be serviced only by qualified electrical maintenance personnel. No responsibility is assumed by Square D for any consequences arising out of the use of this material.

FCC NOTICE

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designated to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction material, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

DISCLAIMERS

Systems Integration

Unless performed by Square D, Square D disclaims liability for any systems integration work. Square D assumes no responsibility for application software and control systems designs supplied by a third party.

TABLE OF CONTENTS

SECTION 1—INTRODUCTION 9
Model 6 MCC Overview 9
OMNI-Center Overview 9
Networks/Communications Overview 10
Square D Literature List 11

SECTION 2—SAFETY PRECAUTIONS 15

SECTION 3–RECEIVING, HANDLING, AND STORAGE 17
Receiving 17
Handling 18
Storage 19

SECTION 4—INSTALLATION 21
Location 21
Space Requirements 21
Alignment 21
Joining NEMA Type 1 and Type 12 Sections 22
Position the MCC 22
Joining Corner Channels 23
Securing Structures to the Floor 24
Splice Gasket Installation for NEMA Type 1 Gasketed and NEMA Type 12 Enclosures 24
Standard Section Splicing 24
Special Section Splicing 25
Joining NEMA Type 3R Sections 26
Splicing Power Bus for NEMA Type 1 and Type 12 Enclosures 27
Splicing Power Bus in NEMA Type 3R Sections 29
Ground Bus Splicing for NEMA Type 1, Type 12, and Type 3R 30
Splicing Offset Horizontal Bus (Left Side of Structure Only) 31
Conductor Entry 32
Load and Control Wiring 32
Cable Connection Torque Values 33
Component Instructional Information 33
Fuse Clip Location 33
Connecting the MCC Cabling System 34
Network Cabling 34
Cables Between Shipping Splits 34
Load Cables 34
MODBUS PLUS® Communications Network 34
Bridges/Repeaters 34
Programmable Logic Controllers (PLCs) 35
Direct Cable Connection 36
Cable Type 36
Profibus® Communications Network 38
Bridges/Repeaters 38
Programmable Logic Controllers (PLCs) 39
Direct Cable Connection 39
Cable Length 39
DeviceNet® Communications Network 41
Bridges/Repeaters 41

© 2001 Schneider Electric All Rights Reserved

Programmable Logic Controllers (PLCs) 42
Direct Cable Connection 42
Cable Type 42
Cable Length 43

SECTION 5—OPERATION 45
Pre-operation Checklists 45
MCC Structure 45
OMNI-Center Communications with MODBUS PLUS 46
OMNI-Center Communications with Profibus 47
OMNI-Center Communications with DeviceNet 48
Energizing the MCC 49
MOTOR LOGIC PLUS™ Solid State Overload Relay (SSOLR) 50
Local Programming 50
Remote Programming 51
POWER LOGIC® Power Meter 57
POWER LOGIC® Circuit Monitor 57
ALTIVAR™ 58 57
ALTIVAR™ 66 58
ALTISTART® 46 58

SECTION 6—MAINTENANCE 65
Bus Bars and Incoming Line Compartments 65
Control Unit Maintenance 67
Control Unit Removal 68
Tests and Maintenance Performed with the Control Unit Removed 70
Reassembly 72
Insulation Test 72
Maintenance After a Fault Has Occurred 73

SECTION 7—EXPANSION 75
Ordering Information 75
Installing Additional MCC Units 75

SECTION 8—TROUBLESHOOTING 79
General MCC Troubleshooting 79
ALTISTART® 46 81
OMNI-Center Enhanced: MODBUS PLUS Troubleshooting 82
Installation/Media Verification 82
Troubleshooting Tips 82
OMNI-Center Enhanced: Profibus® Troubleshooting 84
Installation/Media Verification 84
Troubleshooting Tips 84
OMNI-Center Enhanced: DeviceNet® Troubleshooting 86
Installation/Media Verification 86
Power Supply Requirements 86
Troubleshooting Tips 86

SECTION 9—INSULATION RESISTANCE LOG 89

SECTION 10—CIRCUIT BREAKER AND FUSIBLE SWITCH SELECTION 91

© 2000 Schneider Electric All Rights Reserved

APPENDIX A—TYPICAL SPECIFICATIONS 93
General 93
Communication Cabling System 93
Starters 94
Overloads 94
Mains and Branches 95
Drives 95
Testing 95

APPENDIX B—OMNI-CENTER CABLING REPLACEMENT PARTS . . . 96

APPENDIX C—OMNI-CENTER CABLING SYSTEM SPECIFICATIONS 97

APPENDIX D—TECHNICAL SUPPORT 98

© 2001 Schneider Electric All Rights Reserved

LIST OF FIGURES

Figure 1: Packaged Motor Control Center 17
Figure 2: Moving the MCC with a Fork Truck 18
Figure 3: Proper Use of a Sling to Lift the MCC. 19
Figure 4: Motor Control Center 22
Figure 5: Top Horizontal Wire Trough Covers and Main Lug Unit Door Removed 22
Figure 6: Two-piece Bus Barriers Removed (splice connection made) 22
Figure 7: Base Channel Notch. 23
Figure 8: Bolting Sections Together. 23
Figure 9: Base Channel Mounting 24
Figure 10: Model 6 on the Right Splicing to a Model 5 (manufactured after May, 1992) or a Model 6 25
Figure 11: Model 5 or Model 6 on the Right Splicing to an Existing Model 4 or Model 5 (manufactured before May, 1992) 25
Figure 12: Special Section Splicing (special section on left) 25
Figure 13: Remove Mid and End Deflector Caps from the Top of the MCC 26
Figure 14: Attach the Multi-section Bracket 26
Figure 15: Secure the Vertical Channels 26
Figure 16: Replace Lifting Angle Hardware 26
Figure 17: Removing the Left Bolts and Loosening the Right Bolts on the Splice Assembly 27
Figure 18: Place a Conical Washer under the Bolt Head 27
Figure 19: Aligning the Splice and Bus Holes 28
Figure 20: Torquing the Bolts. 28
Figure 21: Bus Covers Removed. 29
Figure 22: Loosen Bolts 29
Figure 23: Optional 85,000 A Bus Bracing. 29
Figure 24: Slide the Splice Assembly to the Left 29
Figure 25: Place a Conical Washer Under the Bolt Head 30
Figure 26: Ground Bar Bolt Removed 30
Figure 27: Ground Bar Bolt Replaced 30
Figure 28: Splicing Offset Horizontal Bus 31
Figure 29: Wiring in the Top Horizontal Wire Trough. 32
Figure 30: Vertical Wire Trough Grommet. 32
Figure 31: Pull-apart Type Terminal Blocks. 32
Figure 32: Size 1 and 2 Fuse Clip Location. 33
Figure 33: Typical Cabling for MODBUS PLUS. 37
Figure 34: Typical Cabling for Profibus 40
Figure 35: Typical Cabling for DeviceNet 44
Figure 36: MOTOR LOGIC PLUS Communication Module Terminals 51
Figure 37: Typical Bus Connection Points. 66
Figure 38: Top-located Main Lug Compartment 66
Figure 39: Operating Mechanism in the Off Position 68
Figure 40: Loosening Captive Quarter-turn Fasteners 68
Figure 41: Releasing the Lock-in Device (when supplied) 68
Figure 42: Disconnected Terminal Blocks 68

© 2001 Schneider Electric All Rights Reserved

Figure 43: Power Leads and Top of Terminal Blocks Fed through Wiring Port 68
Figure 44: Pulling the Twin Handle Cam Mechanism Forward 69
Figure 45: Operating the Mechanism-to-Structure Interlock 69
Figure 46: Locked Out Device 69
Figure 47: Control Unit Bottom Plate Folded Down 69
Figure 48: Driving Out Hinge Pin 69
Figure 49: Stab Assembly 70
Figure 50: Operator Mechanism in the Tripped Position 71
Figure 51: Inspecting Fuses 71
Figure 52: Starter Contacts 71
Figure 53: Control Devices 71
Figure 54: Tightening Electrical Connections 71
Figure 55: Manual Bus Shutter 72
Figure 56: Operating the Door Interlock Defeat Mechanism 73
Figure 57: Shelf and Door Installation 76
Figure 58: Cutting the Vertical Wire Trough Grommet (when supplied) 76
Figure 59: Removing the Manual Bus Shutter 76
Figure 60: Pulling the Twin Handles of the Cam Mechanism Forward 76
Figure 61: Tightening the Control Unit Lock-in Device (when supplied) 77
Figure 62: Power Leads Connected to Power Terminals 77
Figure 63: Connecting Control Leads to the Terminal Blocks 77
Figure 64: Typical Schematic for MODBUS PLUS Communications to a MODICON PLC System (not drawn to scale) 83
Figure 65: Typical Schematic for Profibus Communication to a MODICON PLC System (not drawn to scale) 85
Figure 66: Typical Schematic for DeviceNet Communications to an SLC-500 PLC System (not drawn to scale) 87

© 2001 Schneider Electric All Rights Reserved

LIST OF TABLES

Table 1: Approximate MCC Shipping Weights 18
Table 2: Connection Torque Values for Main Lug Compartments 33
Table 3: Connection Torque Values for Main and Branch Feeders. 33
Table 4: Recommended Bridges/Repeaters for MODBUS PLUS 35
Table 5: MODBUS PLUS Drop Cables. 36
Table 6: MODBUS PLUS Trunk Cables 36
Table 7: Recommended Repeater for Profibus 38
Table 8: Profibus Maximum Network Length 39
Table 9: Recommended Repeater for DeviceNet. 41
Table 10: DeviceNet Maximum Network Length 43
Table 11: Local Error Display 51
Table 12: MOTOR LOGIC PLUS™ Address Descriptions 52
Table 13: Command Line Codes 54
Table 14: Read Only Registers. 54
Table 15: Read/Write Registers 56
Table 16: ALTISTART 46 Function Index Table. 58
Table 17: ALTISTART 46 Function Index Table by Address 60
Table 18: Bus Connection Torque Values 65
Table 19: Motor Control Center Troubleshooting Chart 79
Table 20: Model 6 OMNI-Center Cabling System Specifications 97

© 2001 Schneider Electric All Rights Reserved

SECTION 1—INTRODUCTION

This bulletin includes setup and troubleshooting instructions for Model 6 Open Multi-Network Integration (OMNI) Centers manufactured by Square D. Because various communication protocols are used, and because your specific application may require a unique combination of components, we recommend that you use this bulletin primarily as a setup and troubleshooting guide.

The OMNI-Center is a fully integrated Model 6 MCC. The OMNI-Center is shipped with various other bulletins, each pertaining to the components specified by your order. Use these for additional information and troubleshooting.

For component repair, modification, or replacement, contact the Square D Customer Information Center by calling 1-888-Square D (1-888-778-2733).

Model 6 MCC Overview

Motor control centers provide the most suitable method for grouping electrical motor control and other related devices in a compact, economical, free-standing installation. A motor control center (MCC) is made of standardized vertical sections consisting of totally enclosed, dead front, free-standing structures bolted together. These sections support and house control units, a common bus bar for distributing power to the control units, and a network of wire trough and conductor entrance areas to accommodate outgoing load and control wires.

The control units consist of components such as combination motor starters, branch feeder devices, and lighting panelboards. Each is mounted in an individual, isolated compartment having its own cover. When front-of-board unit arrangement is selected, all units are mounted on the front side of the MCC. A 15 in. (381 mm) or 20 in. (508 mm) deep section is provided for front-of-board mounting. The standard MCC width is 20 in. (508 mm) with a 4 in. (102 mm) wide vertical wireway.

An optional 25 in. (635 mm) wide section with a 9 in. (229 mm) wide wireway is also available. Larger sections are available for mounting larger equipment. When a back-to-back arrangement is selected, the units are mounted on both the front and rear of 31 in. (787 mm) or 41 in. (1041 mm) deep structures. Approximately 1 in. (25 mm) of space is between back-to-back sections. The standard height of all MCC structures is 91.5 in. (2324 mm) without the 3 in. (76 mm) lifting angle.

OMNI-Center Overview

The Model 6 OMNI-Center is an MCC that provides a means of data acquisition and control. It consists of a wide range of intelligent components that may be part of a network, depending on your configuration.

Four distinct OMNI-Center wiring categories are available:

OMNI-Center Flex

Uses SERIPLEX™ control bus only

OMNI-Center Basic

- *Standard*: Programmable Logic Control (PLC) only
- *With MODBUS®:* PLC with MODBUS data acquisition

OMNI-Center with MODBUS Data Acquisition

- Standalone option
- Uses MOTOR LOGIC PLUS™, drives, soft starts, and POWERLOGIC® components

© 2001 Schneider Electric All Rights Reserved

OMNI-Center Enhanced

- Uses MOTOR LOGIC PLUS™ with MOMENTUM® base, drives, soft starts, and POWERLOGIC® components
- An OMNI-Center Enhanced MCC features one of three network options:
  - — MODBUS PLUS®
  - — Profibus®
  - — DeviceNet®

This bulletin includes instructions for the OMNI-Center Enhanced MCC.

Networks/Communications Overview

OMNI-Center Enhanced MCCs contain Schneider Electric devices that have communication ports. These ports provide control and data acquisition. Following is a list of devices with communication ports:

- Full Voltage Non-Reversing (FVNR) starters with MOTOR LOGIC PLUS Overloads and MOMENTUM MCC I/O base
- Full Voltage Reversing (FVR) starters with MOTOR LOGIC PLUS Overloads and MOMENTUM MCC I/O base
- Reduced Voltage Auto Transformers (RVAT) starters with MOTOR LOGIC PLUS Overloads and MOMENTUM MCC I/O base
- Part winding starters with MOTOR LOGIC PLUS Overloads and MOMENTUM MCC I/O base
- Two speed starters with MOTOR LOGIC PLUS Overloads and MOMENTUM MCC I/O base
- Wye-delta open and wye-delta closed starters with MOTOR LOGIC PLUS Overloads and MOMENTUM MCC I/O base
- ALTISTART® 46 Soft Starters via the keypad communication port and Momentum MCC I/O base
- ALTIVAR® 58 Drives with appropriate communications interface module
- ALTIVAR® 66 Drives with appropriate communications interface module
- Drive with barriered bypass and appropriate communications interface module
- Power meters (Class 3020 Type PM-600/620/650) with MOMENTUM MCC I/O base

Each of these devices has a unique internal register map (see “Square D Literature List” on page 11 for the individual device instruction bulletins). These devices may be linked together to a single monitoring point.

© 2001 Schneider Electric All Rights Reserved

Square D Literature List

The following Square D publications may be useful in the setup, maintenance, and regular operation of your Model 6 OMNI-Center MCC. These documents are provided on the CD-ROM included with shipment. Upon request, your local Square D or Schneider Canada field office can provide them to you in print. Or, you can download these documents from the Technical Library at www.SquareD.com.

Product Type	Publication No.★	Title	Publication Type
Motor Control Centers Seneca, SC	80438-069-01_	ALTISTART®46 Soft Start Units in MCCs	Instruction Bulletin
	80442-291-01_	ALTIVAR® 66 Adjustable Speed Drive Controllers in Motor Control Centers (NEMA 1 and 1A)	Instruction Bulletin
	80442-507-1	ALTIVAR® 66 Drive Controller Units in Motor Control Centers (Size 5–7)	Instruction Bulletin
	80442-772-01_	ALTIVAR® 66 NEMA Type 12 Enclosures	Instruction Bulletin
	80444-035-01_	ALTIVAR® 58 Adjustable Speed Drive	Instruction Bulletin
	80445-108-01A	Model 6 OMNI-Center with MODBUS® Data Acquisition	Instruction Bulletin
	80445-109-01A	Model 6 OMNI-Center Enhanced	Instruction Bulletin
	80459-641-01_	Model 6 Motor Control Centers	Instruction Bulletin
	8998BR0001	Model 6 OMNI-Center—Open Multi-Network Integration in MCCs	Brochure
	8998CT9701	Motor Control Centers, Model 6	Catalog
	8998CT9801	Model 6 OMNI-Center with FLEX Control Bus Option	Catalog
	8998HO0001	Model 6 OMNI-Center—Flex Control Bus for the Model 6 MCC	Handout
	8998HO0002	MOTOR LOGIC PLUS™ Overload Relay in Model 6 Motor Control Centers	Handout
	8998HO9902	Model 6 OMNI-Center—Programmable Logic Controllers and Distributed I/O for MCCs	Handout
SERIPLEX® Raleigh, NC	30298-035-01_	SERIPLEX® Design, Installation, and Troubleshooting Manual	Instruction Bulletin
	8330CT9601R4/99	SERIPLEX® Control Bus Version 2	Catalog
	SERIPLEX Toolbox	www.squared.com/us/internet/software.nsf	Software

★ Represents the current revision level of the documents, and may vary from the document number shipped with your equipment.

© 2001 Schneider Electric All Rights Reserved

Product Type	Publication No.★	Title	Publication Type
MODICON® Automation N. Andover, MA	840USE10000 VER.6	MODICON® TSX Quantum Automation Series	User Manual
	840USE11300 VER.3.0	MODICON® XMIT Function Block	User Manual
	840USE11600 VER.1.0	Quantum NOE 771 X0 Ethernet Modules User Guide	User Manual
	870USE00200 VER.2	TSX Momentum I/0 Base User Guide	User Manual
	870USE10100 VER.3	MODICON® TSX Momentum M1 Processor Adapter and Option Adapter User Manual	User Manual
	890USE10000 VER.3	MODICON® MODBUS PLUS® Network Planning/Installation Guide	User Manual
	890USE10300 REV.1.0	MODICON® MODBUS PLUS® Network BM85 Bridge Multiplexer User's Guide	User Manual
	MODICON® TSX Quantum Automation Series	www.modicon.com/ specguide98/	Specifier's Guide
	PI-MBUS-300 REV.J	MODICON® – MODBUS® Protocol Reference Guide	User Manual
MOTOR LOGIC PLUS™ Overload Raleigh, NC	30072-013-98_	MOTOR LOGIC PLUS™ Programmable Solid-State Overload Relay	Instruction Bulletin
	30072-013-99_	Solutions Software for MOTOR LOGIC PLUS™ SSOL, Version 1.2	Instruction Bulletin
	30072-013-101_	MOTOR LOGIC PLUS™ Lug-Lug Kit	Instruction Bulletin
	30072-013-102_	MOTOR LOGIC PLUS™ Network Communication Module	Instruction Bulletin
ALTISTART® 46 Raleigh, NC	VD0C32S301_	ALTISTART® 46 Soft Start Controller User's Manual	Instruction Bulletin
	VD0C32S303	ALTISTART® 46 Communication Option	Instruction Bulletin
ALTIVAR™ 58 Raleigh, NC	VVDED397044US R12/00	ALTIVAR™ 58 MODBUS® PLUS Communication Option VW3A58302U	Instruction Bulletin
	VVDED397047US R7/00	ALTIVAR™ 58 Drive Controllers Keypad Display VW3A58101	Instruction Bulletin
	VVDED397048US R6/00	ALTIVAR™ 58 Adjustable Speed Drive Controllers Installation Guide, Type H Controllers	Instruction Bulletin
	VVDED397054US	ALTIVAR™ 58 MODBUS®/ JBUS/UNITELWAY User's Guide	Instruction Bulletin
ALTIVAR™ 66 Raleigh, NC	VD0C06S304_	ALTIVAR™ 66 Adjustable Speed Drive Controllers for Asynchronous Motors User's Manual	Instruction Bulletin
	VD0C06S305_	ALTIVAR™ 66 User's Manual	Instruction Bulletin
	VD0C06S308	PCMCIA Communication Card Kit	Instruction Bulletin
	VD0C60S309	ALTIVAR™ 66 MODBUS PLUS® PCMCIA Communication Card Kit VW3A66305U	Instruction Bulletin

★ Represents the current revision level of the documents, and may vary from the document number shipped with your equipment.

© 2001 Schneider Electric All Rights Reserved

Product Type	Publication No.★	Title	Publication Type
POWERLOGIC® LaVergne, TN	3000DB0001	POWERLOGIC® System Architecture and Application Guide	Data Bulletin
	3020IB9818R11/99	POWERLOGIC® Ethernet Communication Module, Models ECM-2000 and ECM-RM	Instruction Bulletin
	3020IM9503R6/98	POWERLOGIC® Power Meter	Instruction Bulletin
	3020IM9807	POWERLOGIC® Circuit Monitor Installation and Operation	Instruction Bulletin
	3050IM9601R2/99	POWERLOGIC® Ethernet Gateway	Instruction Bulletin
	3080HO9601R10/98	System Manager™ Software SMS-3000	Handout
	3080IB9803	PL, POWERLOGIC® System Manager 3000	Instruction Bulletin
	3080IM9603R8/97	Ethernet Driver for System Manager	Instruction Bulletin
	63230-300-200	POWERLOGIC® Circuit Monitor Series 4000	Instruction Bulletin

★ Represents the current revision level of the documents, and may vary from the document number shipped with your equipment.

© 2001 Schneider Electric All Rights Reserved

© 2001 Schneider Electric All Rights Reserved

SECTION 2—SAFETY PRECAUTIONS

Carefully read and follow the safety precautions outlined below before attempting to lift, move, install, use, or maintain Model 6 OMNI-Centers and their components.

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, BURN, OR EXPLOSION

- This equipment must be installed and serviced only by qualified electrical personnel.
- Qualified electrical personnel must perform work in accordance with all applicable national and local electric codes.
- Perform such work only after reading and understanding all of the instructions contained in this bulletin.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Beware of potential hazards, wear personal protective equipment, and take adequate safety precautions.
- Before performing visual inspections, tests, or maintenance on the equipment, disconnect all sources of electric power. Assume that all circuits are live until they have been completely de-energized, tested, locked out, and/or tagged out. Pay particular attention to the design of the power system. Consider all sources of power, including the possibility of backfeeding.
- Replace all devices, doors, and covers before turning on power to this equipment.

Failure to follow these instructions will result in death or serious injury.

⚠ WARNING

HAZARD OF LOSS OF CONTROL

- Carefully consider the potential failure modes of control paths. For certain critical control functions—such as Emergency Stop and Overtravel Stop—you must provide a means to achieve a de-energized state both during and after a path failure.
- The control paths of a system may include communication links. Give careful consideration to the possibility of unanticipated transmission delays or link failures.

Failure to follow these instructions can result in death or serious injury.

© 2001 Schneider Electric All Rights Reserved

© 2001 Schneider Electric All Rights Reserved

SECTION 3–RECEIVING, HANDLING, AND STORAGE

MCCs are constructed in shipping blocks of up to three vertical sections. This allows for ease of handling during transportation and installation. The main horizontal bus of all shipping blocks is spliced together at the job site with the use of captive horizontal splice bars.

Before shipment from the factory, the MCC is inspected visually, electrically, and mechanically by professional quality control analysts. Certification of quality control testing is available upon request.

After leaving Quality Control, each shipping block is carefully packaged and attached to a skid (see Figure 1).

8998-9830

Figure 1: Packaged Motor Control Center

Receiving

Inspect the MCC for damage as soon as it is received. Delivery of the equipment to a carrier at any of the Square D plants or other shipping point constitutes delivery to the purchaser. Title and all risk of loss or damage in transit shall pass to the purchaser at that time, regardless of freight payment. All claims for loss and damage must be made by the purchaser to the carrier.

If the packaging material is removed, replace it for protection until installation.

© 2001 Schneider Electric All Rights Reserved

Handling

⚠ WARNING

HAZARD OF BODILY INJURY OR EQUIPMENT DAMAGE

- Use extreme caution when moving sections. The MCC has a high center of gravity, which may cause it to tilt.
- Do not attempt to lift or attach lifting means to sections equipped with pull boxes.

Failure to follow these instructions can result in death or serious injury.

Adequate equipment, such as a fork truck, crane, or rods and pipe rollers, must be available for handling MCCs. Table 1 shows approximate shipping weights of single sections equipped with typical units; use it to determine the type of handling equipment needed.

Table 1: Approximate MCC Shipping Weights

Enclosure Type	Depth	1 Section	2 Sections	3 Sections
NEMA Type 1, 1A, 12	15 in (381 mm)	600 lb (272 kg)	1200 lb (544 kg)	1800 lb (816 kg)
NEMA Type 3R Non-Walk-In	15 in (381 mm) (26.6 [676] overall)	900 lb (408 kg)	1800 lb (816 kg)	2700 lb (1225 kg)
NEMA Type 1, 1A, 12	20 in (508 mm)	750 lb (340 kg)	1500 lb (680 kg)	2250 lb (1021 kg)
NEMA Type 3R Non-Walk-In	20 in (508 mm) (31.6 [803] overall)	1050 lb (476 kg)	2100 lb (953 kg)	3150 lb (1429 kg)

Weights vary by enclosure type and depth. Up to three vertical sections are shipped on a single skid. To minimize the risk of injury and equipment damage while moving the MCC, review these guidelines:

- Use caution when moving heavy equipment.
- Verify that the moving equipment is rated to handle the weight.
- Fork trucks, when available, provide a convenient method of moving MCCs (see Figure 2). When removing an MCC from a shipping pallet, carefully balance and secure it using a safety strap.

8998-9831

Figure 2: Moving the MCC with a Fork Truck

© 2001 Schneider Electric All Rights Reserved

- Lifting angles are provided on each shipping block for handling the MCC with overhead cranes. Take the following precautions when using a crane:
  a. Handle in the upright position only.
  b. Select rigging lengths to compensate for any unequal weight distribution.
  c. Do not exceed the 45° maximum angle between the vertical and lifting cables (see Figure 3).
  d. Use only slings with safety hooks or shackles. Do not pass ropes or cables through the holes in the lifting angle.

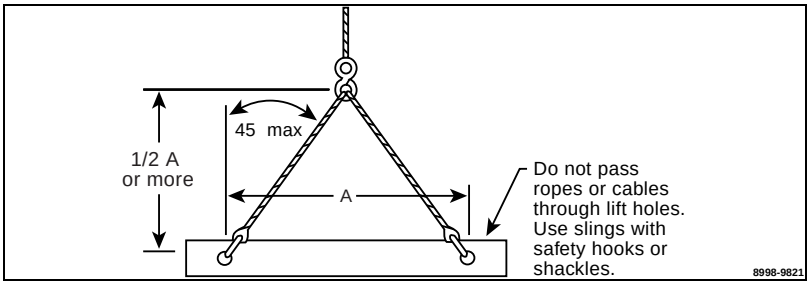

Figure 3: Proper Use of a Sling to Lift the MCC

After the shipping section is in place, its lifting angle may be removed and discarded. To prevent the entrance of foreign materials, replace all hardware that secured the lifting angle.

NOTE: Do not attempt to lift or attach lifting means to sections equipped with pull boxes.

Storage

CAUTION

EQUIPMENT DAMAGE HAZARD

Never store MCCs outdoors. Outdoor storage is inadequate, even with the protection of a tarpaulin.

Failure to follow this instruction can result in equipment damage.

If the MCC cannot be placed into service upon receipt, store it in a clean, dry, ventilated building free from temperature extremes. Acceptable storage temperatures are from 0° C (32° F) to 40° C (104° F).

If the storage area is cool and/or damp, provide enough heat to prevent condensation inside the MCC. Contact your local Square D representative for specific requirements.

© 2001 Schneider Electric All Rights Reserved

© 2001 Schneider Electric All Rights Reserved

SECTION 4—INSTALLATION

This section explains how to locate, install, and join Model 6 MCC enclosures, and how to splice power and ground bus. For information related to removing and installing existing and new units, see “Section 7—Expansion” on page 75 or the information included with the shipment of the new device.

Location

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, BURN, OR EXPLOSION

- This equipment must be installed and serviced only by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Replace all devices, doors, and covers before turning on power to this equipment.
- When moving MCC sections, follow the instructions in “Handling” on page 18. The MCC has a high center of gravity, which may cause it to tilt.

Failure to follow these instructions will result in death or serious injury.

MCCs are designed for use in non-hazardous locations. Choose a location for installation that is well ventilated and free from excess humidity, dust, and dirt. The temperature of the area should be no less than 0 °C (32 °F) and no greater than 40 °C (104 °F). The enclosure must be protected from water or any moisture entering it.

Space Requirements

Install MCCs in an area with a minimum of 3 ft. (914 mm) of free space in front of front-of-board construction. An additional 3 ft. (914 mm) is necessary in the rear of back-to-back construction. This free space provides adequate room to remove and install units. (More space may be required for some applications; refer to applicable national standards). Provide at least 0.5 in. (13 mm) of space between the back of front-of-board MCCs and a wall. For damp locations, provide at least 6 in. (152 mm).

When selecting a location for the installation of an MCC, carefully consider accessibility, overhead clearances, and future expansions. Considering these factors will eliminate many difficulties during this and future MCC installations.

Alignment

MCCs are assembled in the factory on a smooth, level surface to ensure proper alignment of all sections. A similar smooth, level surface should be provided for installation. An uneven foundation may cause misalignment of shipping blocks, units, and doors. The surface under an MCC must be made of a non-combustible material, unless bottom plates are installed in each vertical section.

© 2001 Schneider Electric All Rights Reserved

Joining NEMA Type 1 and Type 12 Sections

Before positioning the MCC sections (see Figure 4), check for damaged bus bars and insulators. If the bus is bent or insulators are broken, do not install the MCC. Report any damage to the carrier.

NOTE: A joining hardware kit is provided in the top horizontal wireway cover on the right side of each shipping split. Captive splice bars are pre-assembled on the horizontal bus on the left side of each shipping split.

NOTE: For gasket installation instructions, see "Splice Gasket Installation for NEMA Type 1 Gasketed and NEMA Type 12 Enclosures" on page 24 before joining sections.

Position the MCC

To mount and splice a new MCC section to an existing Model 6 section, or to join factory shipping splits, follow these steps:

1. Remove the top and bottom horizontal wire trough covers in all sections, providing access to the ground bus and section splicing bolts (see Figure 5).
2. Remove the two-piece bus barriers (see Figure 6) in the sections adjacent to a splice connection (section L and section R).

Figure 4: Motor Control Center

Figure 5: Top Horizontal Wire Trough Covers and Main Lug Unit Door Removed

Figure 6: Two-piece Bus Barriers Removed (splice connection made)

© 2001 Schneider Electric All Rights Reserved

3. Make provisions for fastening the structure(s) to the floor. See page 24 for fastener locations.
4. Supporting the MCC by its base channels and/or lifting angles, lift it into place. Align the front edges of the base channels to form a continuous front.
5. Using the notches in the base channels, gradually move the sections into alignment with a crowbar (see Figure 7).

   NOTE: Use caution when moving MCC sections, as they are top heavy. See "Handling" on page 18 before moving the MCC.

Figure 7: Base Channel Notch

Joining Corner Channels

1. Open the wire trough door on section L. Remove the section joining hardware kit that is bagged and tied to the right front corner channel.
2. Locate the six rectangular notches on the inside surface of the corner channels (see Figure 8).
3. Using six of the 3/4 in. x 1/4-20 hex head thread-forming screws supplied in the hardware kit, join the front vertical corner channels. To do so, insert the screws through the clearance holes located within the rectangular notches and into the mating thread-forming hole. Insert the screws from either the left or right, depending on ease of access to the holes according to equipment configuration; either side will join properly.
4. Repeat Steps 2 and 3 for connecting rear corner channels.

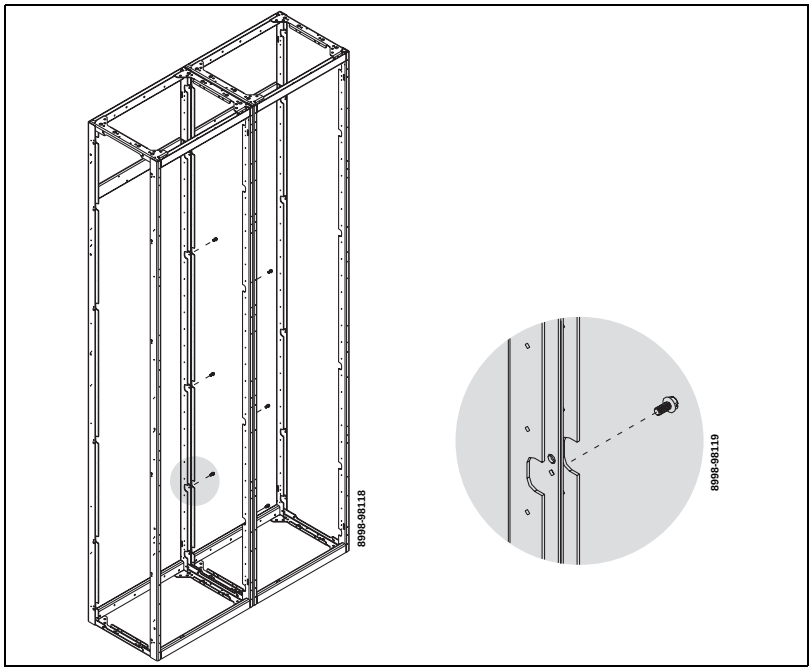

Figure 8: Bolting Sections Together

© 2001 Schneider Electric All Rights Reserved

Securing Structures to the Floor

Fasten each section to the floor (see Figure 9) using 3/4 in. or 1/2 in. grade 5 or higher bolts and flat washers (not provided). The two 0.88 in. (22 mm) diameter base channel mounting holes provide clearance for bolt expansion anchors for 1/2 in. bolts.

NOTE: Although sections are free-standing, floor fastening inhibits movement, thereby avoiding conduit connection damage.

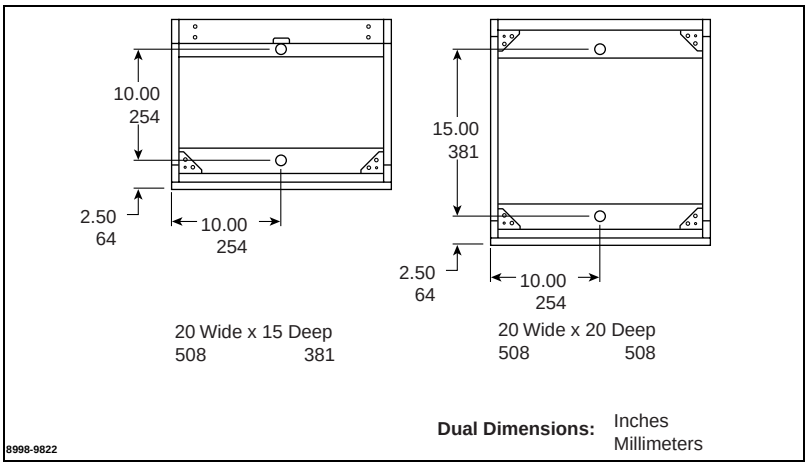

Figure 9: Base Channel Mounting

NOTE: For Seismic Zone 4 mounting requirements, contact your local Square D Field Sales Office.

Splice Gasket Installation for NEMA Type 1 Gasketed and NEMA Type 12 Enclosures

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, BURN, OR EXPLOSION

- This equipment must be installed and serviced only by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Replace all devices, doors, and covers before turning on power to this equipment.

Failure to follow these instructions will result in death or serious injury.

Standard Section Splicing

1. If splicing to an existing MCC, remove the end plate and any gasketing from the existing MCC.

   NOTE: If splicing to the right of an existing relay section, refer to the "Special Section Splicing" on page 25.
2. Remove the white paper backing from the new gasket to expose the adhesive. This adhesive temporarily holds the gasket in place while the sections are being positioned.
3. Apply the gasket to the front vertical corner channel with the adhesive side (Item 2, Figures 10 and 11) toward the new MCC section. Position the gasket as shown in Figure 10 for existing MCCs manufactured *after* May, 1992 (D gasket), or Figure 11 for existing MCCs manufactured *before* May, 1992 (P gasket).

© 2001 Schneider Electric All Rights Reserved

4. Verify that the gasket edge is flush with the top of the corner channel.
5. Using thumb pressure, firmly press the gasket in place from top to bottom. Ensure that the gasket is flat along the entire length.
6. Join sections together, following the appropriate steps beginning in "Joining NEMA Type 1 and Type 12 Sections" on page 22 and continuing through page 24.

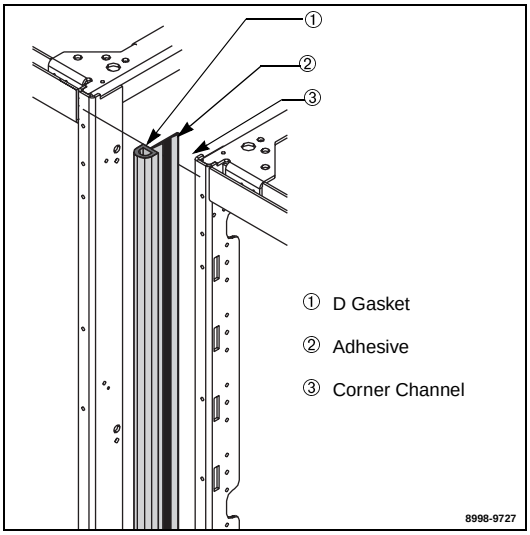

Figure 10: Model 6 on the Right Splicing to a Model 5 (manufactured after May, 1992) or a Model 6

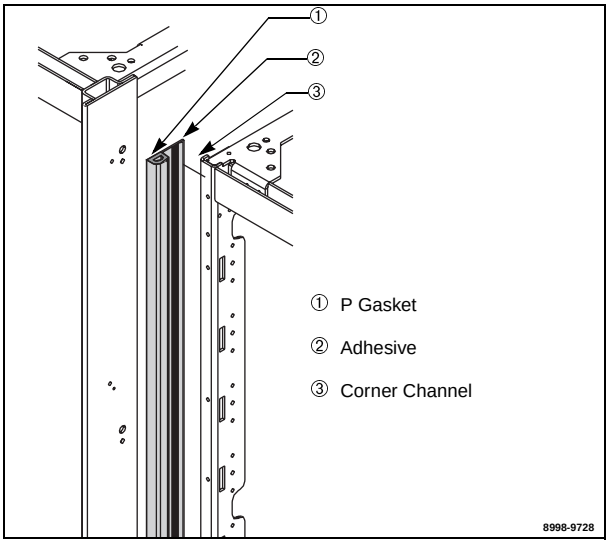

Figure 11: Model 5 or Model 6 on the Right Splicing to an Existing Model 4 or Model 5 (manufactured before May, 1992)

Special Section Splicing

For purposes of this instruction bulletin, a special section is an MCC section without vertical bus mounted in it. A special section may contain a main device, a branch device, a starter unit, or a removable relay mounting pan.

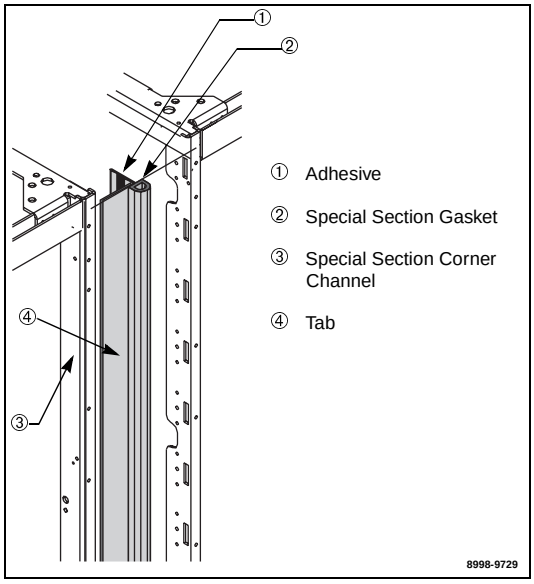

Figure 12: Special Section Splicing (special section on left)

To splice an existing MCC to a special section, follow these instructions:

1. Remove the side plate, gasketing, and top and bottom front covers from the existing MCC.
2. Remove the white paper backing from the new relay gasket to expose the adhesive. This adhesive temporarily holds the gasket in place while the sections are being positioned.
3. Apply the gasket to the front right vertical corner channel of the special section as shown in Figure 12.
4. Verify that the gasket edge is flush with the top of the corner channel and that the tab is flat on the front of the existing corner channel.
5. Using thumb pressure, firmly press the gasket in place from top to bottom. Verify that the gasket is flat along the entire length.
6. Join sections together following the appropriate steps beginning in "Joining NEMA Type 1 and Type 12 Sections" on page 22 and continuing through page 24.

© 2001 Schneider Electric All Rights Reserved

Joining NEMA Type 3R Sections

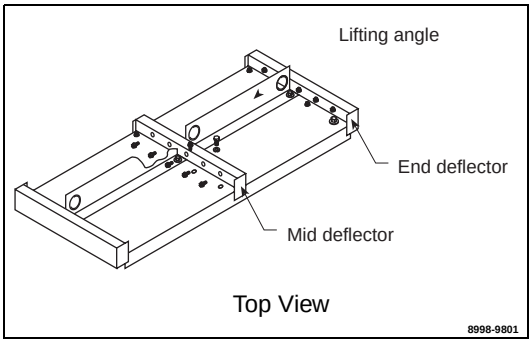

Figure 13: Remove Mid and End Deflector Caps from the Top of the MCC

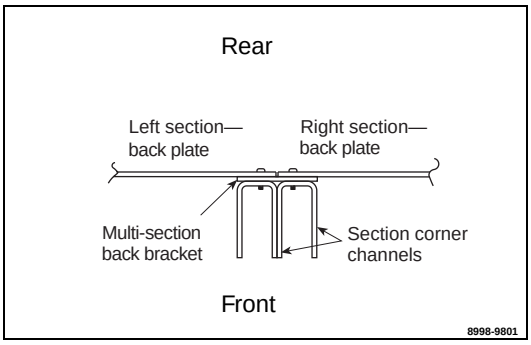

Figure 14: Attach the Multi-section Bracket

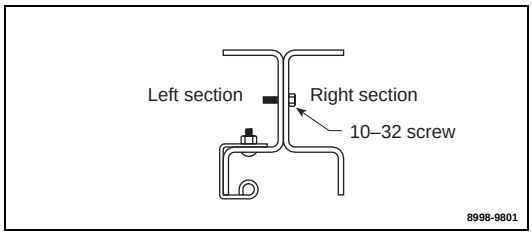

Figure 15: Secure the Vertical Channels

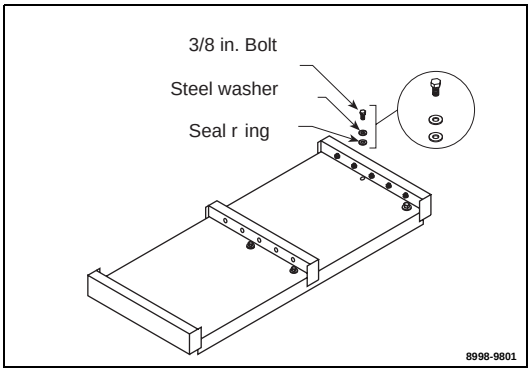

Figure 16: Replace Lifting Angle Hardware

This section provides instructions for joining NEMA Type 3R MCC sections (manufactured after February 1998), to the right of the existing MCC line-up.

NOTE: All NEMA Type 3R sections manufactured after February 1998 are approximately 93 inches (2362 mm) from the bottom of the section to the top of the deflector. Consult your local Square D Field Sales Office if adding to an existing NEMA Type 3R MCC manufactured before February 1998.

1. Remove the right section (see Figure 14) back plate.

   NOTE: Steps 2 and 3 apply only if a new section is being added to an existing MCC line-up. If installing a new line-up, skip to Step 4.

2. Remove the end deflector cap from the right side of the existing NEMA Type 3R section (see Figure 13). Also, remove the mid deflector cap from the section being added to the right.
3. Remove the end closing plate from the right side of the existing section.
4. After placing the structures side-by-side, join them as described in "Joining NEMA Type 1 and Type 12 Sections" on page 22.
5. Re-attach the back plate (removed in step 1) to the right section using the additional hardware supplied. Attach the right side to the multi-section bracket (see Figure 14).
6. Install the mid deflector, ensuring both top plate flanges are covered (see Figure 13).
7. Using the six 10-32 screws supplied, secure the left front vertical channel of the NEMA Type 3R extension to the right front vertical channel of the NEMA Type 3R extension (see Figure 15).
8. If the lifting angle will be removed from the sections after installation, replace all hardware in the order shown (see Figure 16).

© 2001 Schneider Electric All Rights Reserved

Splicing Power Bus for NEMA Type 1 and Type 12 Enclosures

To splice the power bus, follow these steps:

1. Remove the horizontal bus covers and barriers from sections L and R (see Figure 6 on page 22).

   NOTE: On the integral splice assembly, located on the left side of each phase bus, the number of bus links is one greater than the number of horizontal bus bars. This creates a sandwich splice. The far rear splice link contains the captive nuts.
2. Remove the two left bolts. Loosen, but do not remove, the two right bolts on the splice assembly (see Figure 17).

   NOTE: Do not remove the two right bolts from the splice assemblies. Doing so will permit spacers to fall from the splice assembly. If this occurs, re-assemble the splice bars and spacers (if applicable) in the proper order before continuing.

Figure 17: Removing the Left Bolts and Loosening the Right Bolts on the Splice Assembly

3. Slide the splice assembly to the left until the two left holes are in line with the corresponding holes in the horizontal bus on the left section (see Figure 19 on page 28).
4. Reinstall the two left bolts through the splice links and into the horizontal bus; make sure the original conical washers are reinstalled with the concave side facing the splice bus (see Figure 18 and Figure 20 on page 28). Torque all bolts, on both ends, to 31–32 lb-ft (41.87–43.22 N•m).

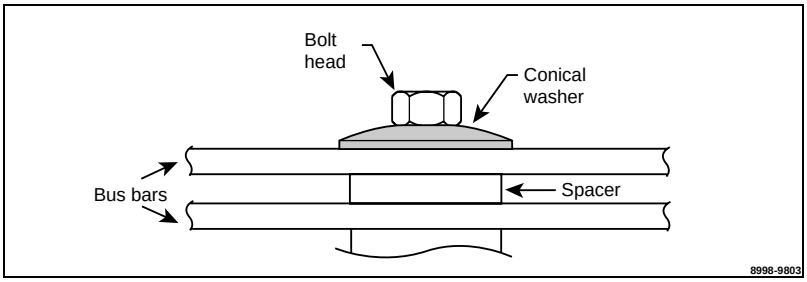

Figure 18: Place a Conical Washer under the Bolt Head

© 2001 Schneider Electric All Rights Reserved

5. Repeat Steps 1 through 4 for all phases and the neutral bus (if supplied).
6. Before energizing the equipment, replace all covers and barriers.

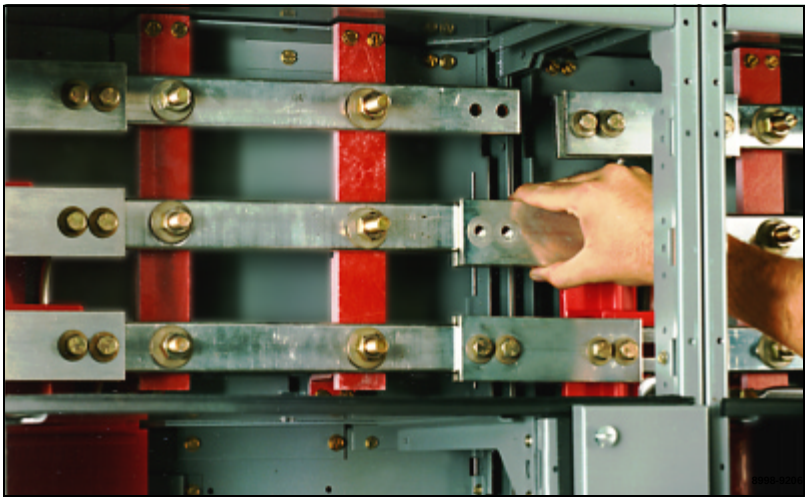

Figure 19: Aligning the Splice and Bus Holes

Figure 20: Torquing the Bolts

© 2001 Schneider Electric All Rights Reserved

Splicing Power Bus in NEMA Type 3R Sections

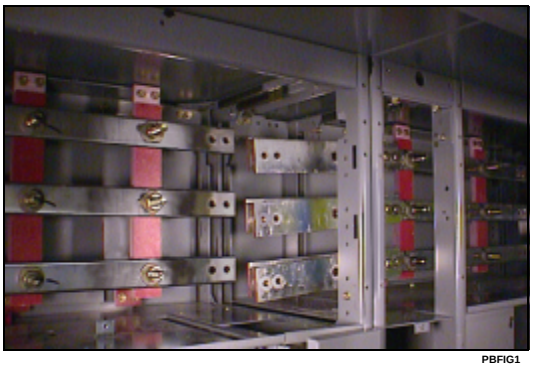

PBFIG1

Figure 21: Bus Covers Removed

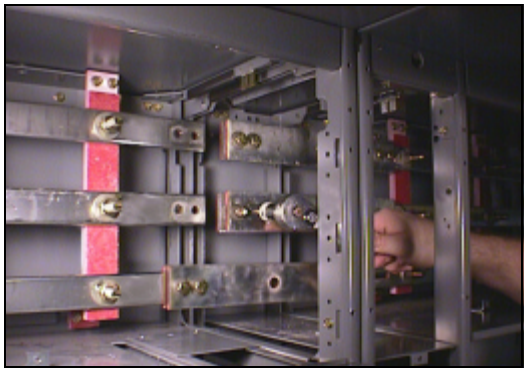

PBFIG2

Figure 22: Loosen Bolts

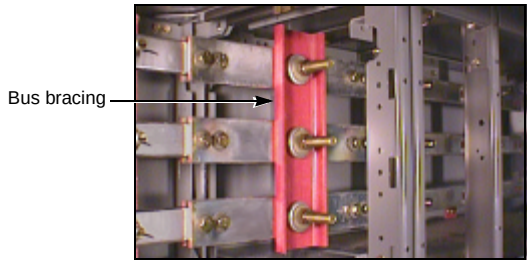

PBFIG5

Figure 23: Optional 85,000 A Bus Bracing

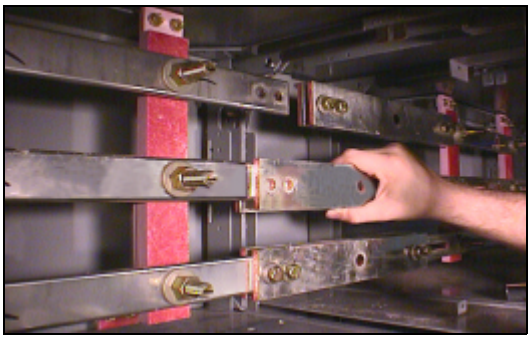

PBFIG3

Figure 24: Slide the Splice Assembly to the Left

This section describes how to splice the power bus of a NEMA Type 3R section (manufactured after February 1998) to the power bus of another NEMA Type 3R section. Bus splicing material is not captive if the section is equipped with offset bus. Refer to bulletin # 80453-649-01_ for instructions for splicing offset power bus in NEMA Type 3R enclosures.

⚠DANGER

HAZARD OF ELECTRIC SHOCK, BURN, OR EXPLOSION

- This equipment must be installed and serviced only by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Replace all devices, doors, and covers before turning on power to this equipment.

Failure to follow these instructions will result in death or serious injury.

To splice power bus, follow these steps.

1. Remove the horizontal bus covers from the left and right sections (see Figure 21).

   NOTE: All splice connections have one more splice bar than the number of laminations of the horizontal bus. The far rear splice bar contains captive nuts.
2. Remove the two left bolts from each splice assembly. Then loosen, but do not remove, the two right bolts of each splice assembly (see Figure 22). If the bus has optional 85,000 A bus bracing supplied (see Figure 23), also loosen the center nut of each splice assembly.

   NOTE: Do not remove the two right bolts or the center bolt (if applicable) from the splice assemblies. Doing so will permit spacers to fall from the splice assembly. If this occurs, re-assemble the splice bars and spacers (if applicable) in the proper order before continuing.
3. Slide the splice assembly to the left until the two left holes are in line with the corresponding holes in the horizontal bus in the left section (see Figure 24).
4. Re-install the two left bolts through the splice assembly and into the horizontal bus. Make sure the original conical washers are re-installed with the concave side facing the splice bus (see Figure 25 on page 30).
5. Torque the bolts to 31–32 lb-ft (41.87–43.22 N•m) (see Figure 20 on page 28). If the optional 85,000 A bus bracing is supplied, torque the center nut to 70 lb-ft (94.92 N•m). Repeat steps 1–4 for all phases and the neutral bus (if supplied).

© 2001 Schneider Electric All Rights Reserved

6. Before energizing the equipment, replace all covers and barriers.

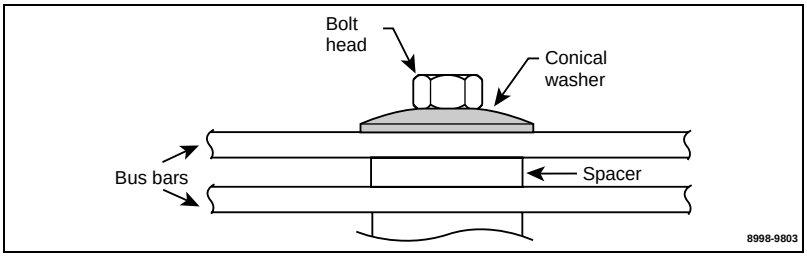

Figure 25: Place a Conical Washer Under the Bolt Head

Ground Bus Splicing for NEMA Type 1, Type 12, and Type 3R

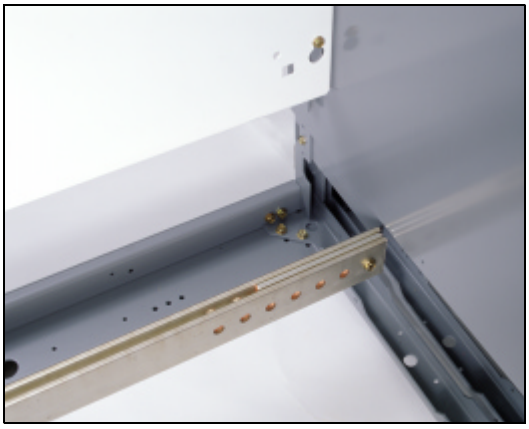

Figure 26: Ground Bar Bolt Removed

Figure 27: Ground Bar Bolt Replaced

⚠DANGER

HAZARD OF ELECTRIC SHOCK, BURN, OR EXPLOSION

- This equipment must be installed and serviced only by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm that the power is off.
- Replace all devices, doors, and covers before turning on the power to this equipment.

Failure to follow these instructions will result in death or serious injury.

To splice the ground bus, follow these steps:

1. Remove the ground bar bolt from section R and loosen the bolt in section L (see Figure 26).
   NOTE: Do not remove the bolt in section L. Doing so will permit the spacers to fall from the assembly.
2. Position the ground splice bar into section R, aligning the mounting holes.
3. Replace the ground bar bolt in section R (see Figure 27). Torque both bolts to 60–75 lb-in (6.75–8.44 N•m).
4. Replace all covers and barriers and close all doors.

© 2001 Schneider Electric All Rights Reserved

Splicing Offset Horizontal Bus (Left Side of Structure Only)

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, BURN, OR EXPLOSION

- This equipment must be installed and serviced only by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Replace all devices, doors, and covers before turning on power to this equipment.

Failure to follow these instructions will result in death or serious injury.

NOTE: In all structures with an offset horizontal bus, splice bars are provided as a kit. This kit is packaged in a carton and shipped inside the structure. The kit contains all splice bars and mounting hardware necessary for horizontal bus splicing.

Use the splice kit only if splicing will be done on the left (while facing the structure). If the splice is not on the left, remove the kit before energizing and retain it for future expansion. If a structure is to be spliced to another structure on the right, follow splicing instructions provided for that structure application.

NOTE: All splice connections have one more splice bar than the number of horizontal bus bars. The far rear splice bar contains captive nuts.

To splice a horizontal bus on the left side of the structure, follow these steps:

1. Join sections together, following the appropriate steps beginning with “Location” on page 21 and continuing through page 26. This provides proper alignment of the horizontal bus.
2. Position the rear splice bar (bar with captive nuts; see Figure 28) against the back face of the rear horizontal bus bar.
3. Install a plain splice bar between each lamination of horizontal bus; install the last bar against the front face of the horizontal bus (see Figure 28).
4. Align the four mounting holes in the splice bus and the horizontal bus.
5. Re-install the two left bolts through the splice assembly and into the horizontal bus. Make sure the original conical washers are re-installed with the concave side facing the splice bus (see Figure 25 on page 30). Torque these bolts to 31–32 lb-ft (41.87–43.22 N•m) (see Figure 20 on page 28). If the optional 85,000 A bus bracing is supplied, torque the center nut to 70 lb-ft (94.92 N•m).
6. Repeat steps 1–6 for each of the three horizontal bus phases.
7. Before energizing the equipment, replace all covers and barriers.

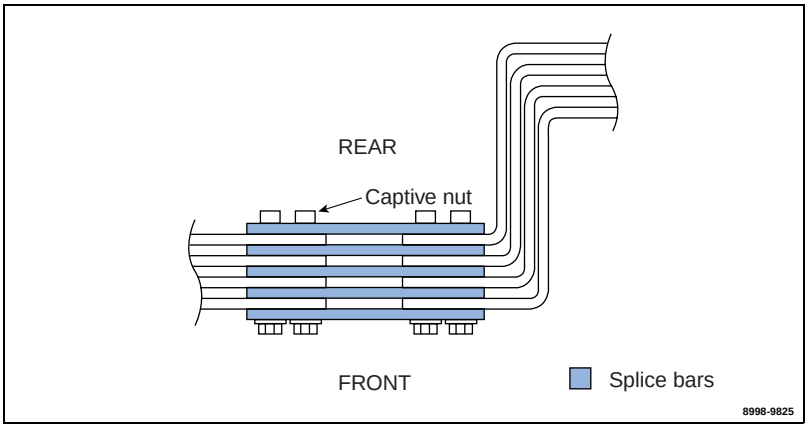

Figure 28: Splicing Offset Horizontal Bus

© 2001 Schneider Electric All Rights Reserved

Conductor Entry

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, BURN, OR EXPLOSION

- This equipment must be installed and serviced only by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Replace all devices, doors, and covers before turning on power to this equipment.

Failure to follow these instructions will result in death or serious injury.

Conduit entry space is provided at the top and bottom of the MCC structure. The top plates (and closing plates in bottom, if present) are removable for convenience in wiring and cutting conduit openings). A hinged door allows access to the main lug, main circuit breaker, or main switch compartment. In some cases, the horizontal wire trough cover must be removed.

Pullboxes are available if additional wiring space is required.

Cable connection torque values are listed in Table 2 and Table 3 on page 33.

Load and Control Wiring

The top and bottom horizontal wire troughs and the vertical wire trough are convenient areas to run incoming line, load, and control wires (see Figure 29). Openings between sections permit wire to pass from one section into the next for interwiring.

Control and power wires are routed to each unit via the vertical wire trough. Grommeted wire ports must be opened to route wire to the unit. The H-shaped cut pattern is pre-scored for easy opening. Using a small knife, cut through the center tabs and complete the H-shaped slice (see Figure 30). When cutting, be sure not to damage the wires located near the grommet.

Pull-apart control terminals (see Figure 31) are mounted on a 35 mm DIN-rail located adjacent to the wiring ports toward the front of the unit. Terminate field control wiring on the removable portion of the block.

8998-9208

Figure 29: Wiring in the Top Horizontal Wire Trough

8998-9209

Figure 30: Vertical Wire Trough Grommet

8998-9849

Figure 31: Pull-apart Type Terminal Blocks

© 2001 Schneider Electric All Rights Reserved

Cable Connection Torque Values

The following tables provide main disconnect and branch feeder torque values, which apply to both aluminum and copper conductors.

Table 2: Connection Torque Values for Main Lug Compartments

Socket Size Across Flat	Torque
3/8 in.	375 lb-in. (42.21 N•m)
1/2 in.	600 lb-in. (67.79 N•m)

Table 3: Connection Torque Values for Main and Branch Feeders

Frame Size	Ampere Rating	Torque
FA	15–30 A 35–100 A	35 lb-in. (3.94 N•m) 80 lb-in. (9.00 N•m)
FC	20–30 A 40–100 A	35 lb-in. (3.94 N•m) 65 lb-in. (7.32 N•m)
KA	70–250 A	250 lb-in. (28.14 N•m)
KC	110–250 A	250 lb-in. (28.14 N•m)
LA	125–400 A	200 lb-in. (22.51 N•m)
MA	200–400 A 450–1000 A	300 lb-in. (33.76 N•m) 300 lb-in. (33.76 N•m)
PA	800–2000 A	300 lb-in. (33.76 N•m)

Component Instructional Information

Component manuals for devices such as adjustable frequency drive controllers, solid state reduced voltage starters, and programmable logic controllers are included with the OMNI-Center instruction information packet included in shipment.

Fuse Clip Location

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, BURN, OR EXPLOSION

- This equipment must be installed and serviced only by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Replace all devices, doors, and covers before turning on power to this equipment.

Failure to follow these instructions will result in death or serious injury.

Install 30 and 60 A fuse bases for the proper fuse size and class and maximum voltage in Size 1 and 2 starter units. The base pan of the switch has five sets of mounting holes for this purpose. Mount the lower fuse base in the proper mounting holes (see Figure 32). Additional clips and bases may be required if changing fuse class.

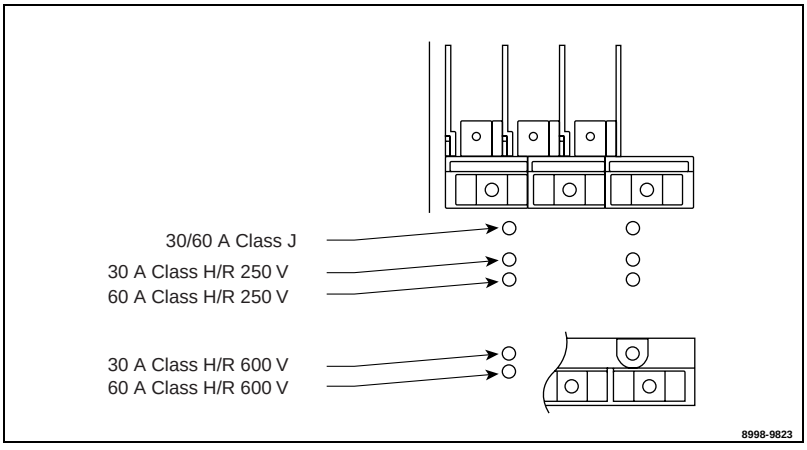

Figure 32: Size 1 and 2 Fuse Clip Location

NOTE: For Form II Class C fuse spacing, contact your Schneider Canada representative.

© 2001 Schneider Electric All Rights Reserved

Connecting the MCC Cabling System

CAUTION

HAZARD OF EQUIPMENT DAMAGE

Do not use excessive force when making cabling connections. Connections are keyed to ensure that pins are properly aligned.

Failure to follow this instruction can result in equipment damage.

Units within OMNI-Centers are connected at the factory, using a UL 498 Listed 600 V cabling system. The cabling system is constructed of molded PVC material using five 22 AWG conductors.

The type of connection to the cabling system is determined by the OMNI-Center Enhanced protocol chosen (MODBUS PLUS®, Profibus®, or DeviceNet®). For a MODBUS PLUS network, see “Direct Cable Connection” on page 36. For a Profibus network, see “Direct Cable Connection” on page 39. For a DeviceNet network, see “Direct Cable Connection” on page 42.

Network Cabling

Factory supplied network cabling is installed in accordance with UL 845 procedures and practices, and routed in the bottom horizontal wireway.

Each OMNI-Center is equipped with a dedicated communication cable area within each vertical wireway. Route the communication cable so that it is separate from all other cabling, such as control, power, and network cables. Verify that network cabling is separated from power conductors either by a barrier or a minimum space of 0.25 in. (6 mm).

In order to make direct connections to Class 2 or Class CM systems, install Class 2 or Class CM wiring so that it is separated from power conductors either by a barrier or a minimum space of 0.25 in. (6 mm). Route power conductors in the top horizontal wireway for maximum separation.

External network cabling must comply with Class 2 or Class CM practices under the provisions of NEC Articles 725 and 800.

Cables Between Shipping Splits

To connect the trunk line cables between shipping splits:

1. Align the keyway and plug the male end of the trunk cable to the female end of the next trunk cable.
2. Screw the coupling ring until it is hand-tight.
3. Repeat this process until all shipping splits are connected.

Load Cables

It is recommended to route all load cables in the top horizontal wireway to keep them isolated from the communications cabling. If you route the load cables in the bottom horizontal wireway, make sure to maintain a 0.25-in. (6 mm) distance between the communications cabling and all other cabling.

MODBUS PLUS® Communications Network

There are three primary ways to connect the MODBUS PLUS communications network: via bridges/repeaters, programmable logic controllers (PLCs), or a direct cable connection. Follow the applicable instructions below to make the cabling connections for MODBUS PLUS in your Model 6 OMNI-Center.

Bridges/Repeaters

The MODBUS PLUS communications network may be isolated from the portion of the network that is outside the MCC through a bridge or repeater device. The device is typically mounted in a 9-inch (229 mm) MCC unit and wired at the factory. Depending on the number of connected nodes, you may require multiple MODBUS PLUS networks and devices (maximum nodes per network is thirty-two). Schneider Electric recommends installing and operating one of the bridges/repeaters listed in Table 4.

© 2001 Schneider Electric All Rights Reserved

Table 4: Recommended Bridges/Repeaters for MODBUS PLUS

Manufacturer	Bridge/Repeater No.	Reference Material
Schneider Automation	Repeater: NW-RR85-001	GM-MBPL-001 Planning & Installation Guide
Schneider Automation	Isolator: NW-BP85-002	GM-MBPL-001 Planning & Installation Guide

Follow the general steps below to connect the MODBUS PLUS network to a bridge/repeater. Consult the reference manual for your particular bridge/repeater for specific installation and configuration instructions:

1. Provide control power to the bridge device, if not provided by the MCC.
2. Connect the incoming communications cable to the customer side of the bridge/repeater.
3. Read and understand the instructions contained in the reference material for your device. Follow the installation and configuration instructions contained in that material to complete the setup of the bridge/repeater.

Grounding

If a Programmable Logic Controller (PLC) and/or repeater is provided with your OMNI-Center, grounding is done at the factory. If not, the MCC network is supplied ungrounded and you will need to ground it at only one point, either a personal computer (PC), PLC, or repeater.

Refer to the MODICON MODBUS PLUS Network Planning/Installation Guide, document # 890USE10000, for detailed grounding procedures (see the “Square D Literature List” on page 11).

Terminating Resistors

In order for the MODBUS PLUS communications network to operate properly, terminating resistors are required on each end of the network. See “Appendix B—OMNI-Center Cabling Replacement Parts” on page 96 for a list of available terminating resistors. If your OMNI-Center is shipped with a bridge, repeater, and/or PLC, external terminal blocks (MCT485) are included with shipment.

Programmable Logic Controllers (PLCs)

You can use OMNI-Center field connection cabling to connect MODBUS PLUS communications directly to the MODBUS PLUS port of a Schneider Electric PLC, such as Quantum, Premium, Momentum, or Compact. Use the following procedure:

1. Select the appropriate length of cable from “Appendix B—OMNI-Center Cabling Replacement Parts” on page 96.

   You may connect multiple cables together to achieve the optimum length.
2. Connect the cables you chose in step 1 to one end of the OMNI-Center cabling trunk line.
3. Using cable #5000129-134, connect the other end of the cable assembly to the MODBUS port on the PLC.

© 2001 Schneider Electric All Rights Reserved

Direct Cable Connection

Follow the steps below to connect a cable directly to the MODBUS PLUS network via the MCC custom cable.

1. Determine which end (male or female) of the MCC cabling you will attach to your cable.

   NOTE: The female field attachable is part # 5000129-91, and the male field attachable is part # 5000129-93. See Figure 33 on page 37 for details.
2. Strip back the communication cabling insulation.
3. Use the following table to match the field cabling communications terminations with MCC color coding.

Field Connection Termination	5-Pin Female/Male
Pin # 1	Shield
Pin # 2	Not used
Pin # 3	Not used
Pin # 4	White
Pin # 5 (Center pin)	Green/Blue

4. Screw the correct wire color to the pin number listed in the table above.

Cable Type

For cabling external to the MCC, use the guidelines in Tables 5 and 6 below to determine the part number of the cable you will need to use.

Table 5: MODBUS PLUS Drop Cables

Length of Cable	MODICON Catalog Number
8 ft (2.4 m)	990NAD219 10
20 ft (6 m)	990NAD219 30

Table 6: MODBUS PLUS Trunk Cables

Length of Cable	MODICON Catalog Number
100 ft (30.5 m)	490NAA271 01
500 ft (152.5 m)	490NAA271 02
1000 ft (305 m)	490NAA271 03
1500 ft (457 m)	490NAA271 04
5000 ft (1525 m)	490NAA271 05
Belden YM29650, Belden YQ29258, or equivalent	

© 2001 Schneider Electric All Rights Reserved

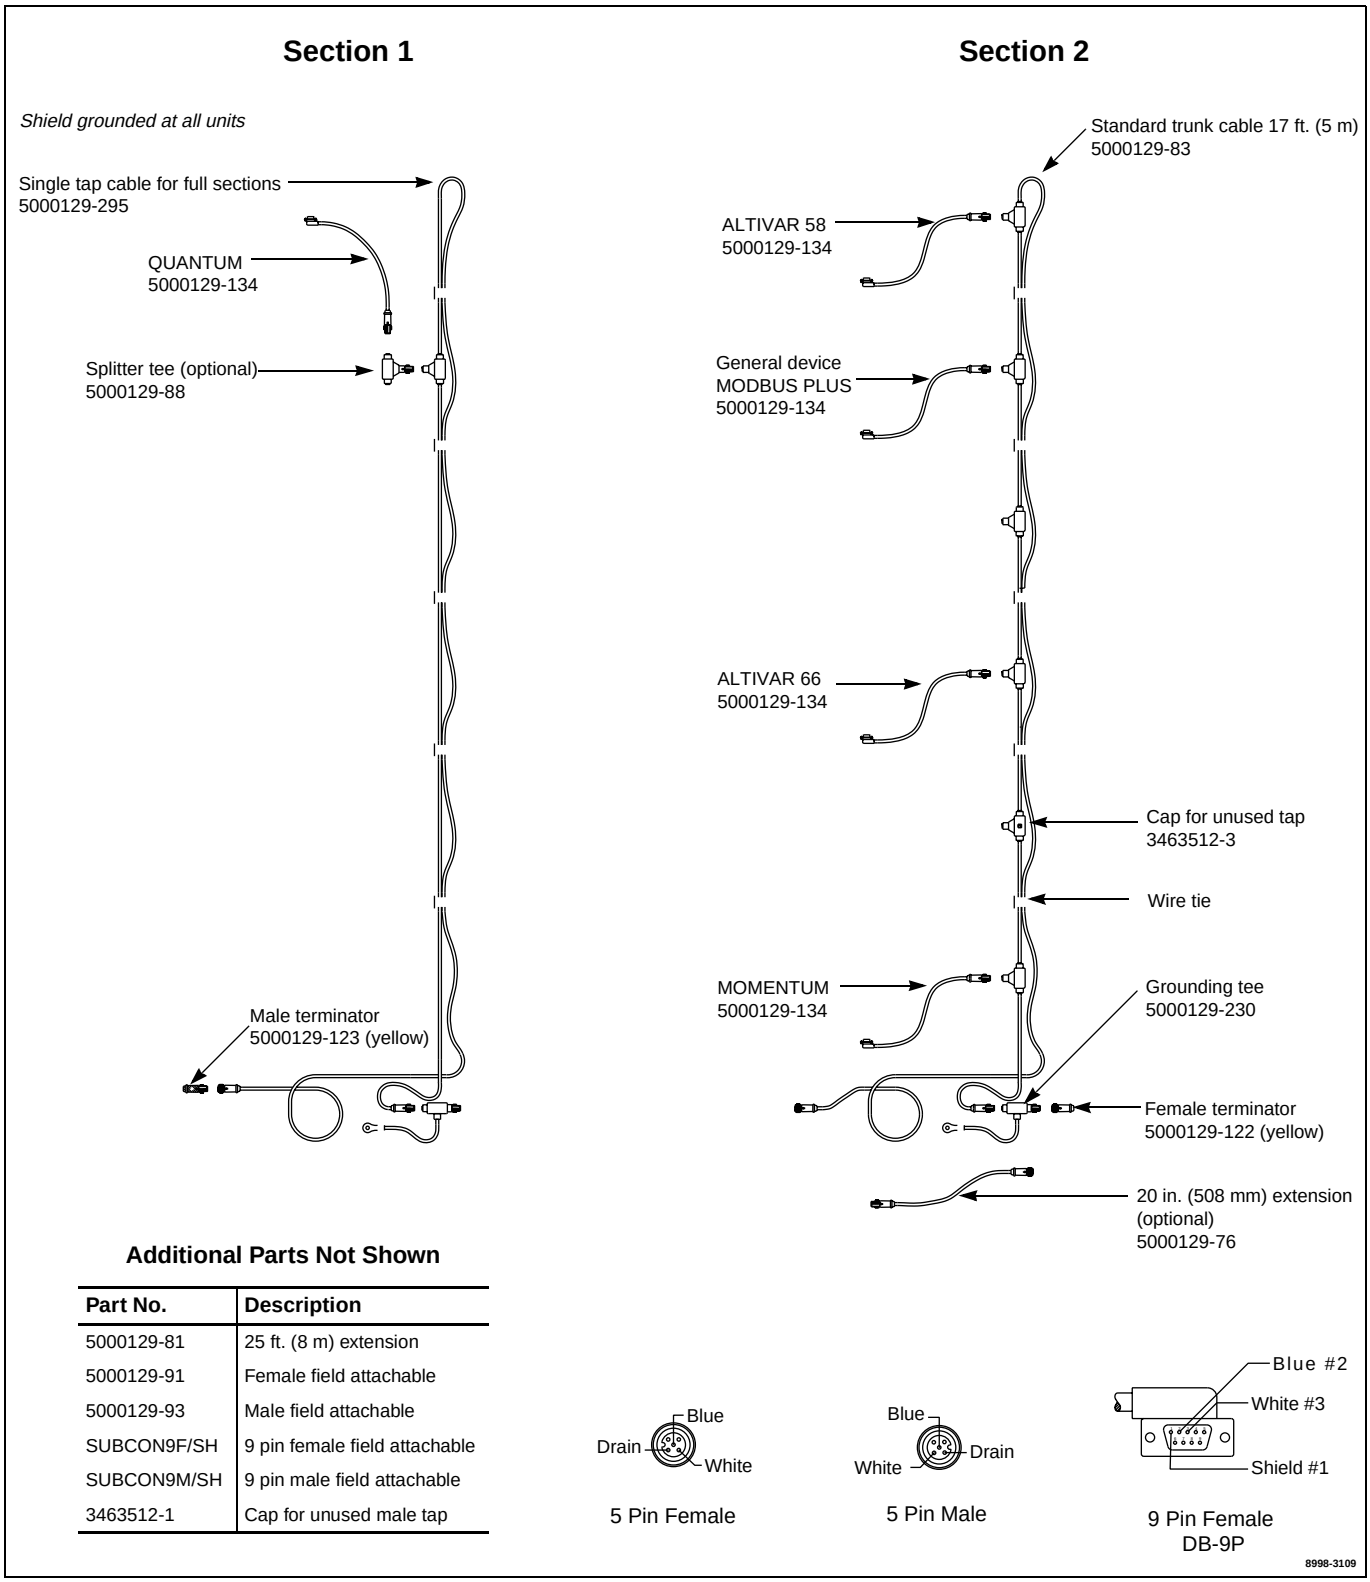

Additional Parts Not Shown

Part No.	Description
5000129-81	25 ft. (8 m) extension
5000129-91	Female field attachable
5000129-93	Male field attachable
SUBCON9F/SH	9 pin female field attachable
SUBCON9M/SH	9 pin male field attachable
3463512-1	Cap for unused male tap

Figure 33: Typical Cabling for MODBUS PLUS

© 2001 Schneider Electric All Rights Reserved

Profibus® Communications Network

There are three primary ways to connect the Profibus communications network: via bridges/repeaters, programmable logic controllers (PLCs), or a direct cable connection. Follow the applicable instructions below to make the cabling connections for Profibus in your OMNI-Center.

Bridges/Repeaters

The Profibus communications network in the MCC may be isolated from the rest of the network through a bridge or repeater device. The device is typically mounted in a 9-inch (229 mm) MCC unit and wired at the factory. Depending on the number of connected nodes, you may require multiple Profibus networks and devices (maximum nodes per network is thirty-two). Schneider Electric recommends installing and operating the following repeater:

Table 7: Recommended Repeater for Profibus

Manufacturer	Bridge/Repeater No.	Reference Material
Siemens	Repeater: 6ES7-972-0AA01-0XA0	Order No. 2-112 Installation Guide for Profibus-DP/FMS

Follow the general steps below to connect the Profibus network to a bridge/repeater. Consult the reference manual for your particular bridge/repeater for specific installation and configuration instructions:

1. Provide control power to the bridge device, if not provided by the MCC.
2. Connect the incoming communications cable to the customer side of the bridge/repeater.
3. Read and understand the instructions contained in the reference material for your device. Follow the installation and configuration instructions contained in that material to complete the setup of the bridge/repeater.

Grounding

If a Programmable Logic Controller (PLC) and/or repeater is provided with your OMNI-Center, grounding is done at the factory. If not, the MCC network is supplied ungrounded and you will need to ground it at only one point, either a personal computer (PC), PLC, or repeater, as follows:

1. Use the ground connection to attach one end of a ground wire; attach the other end to a nearby grounding rod that meets all electrical specifications required for an earth ground.
2. Use the shortest possible length of #8-gauge copper , or equivalne tbraided cable, to make the connection.
3. Verify that a good ground connection is achieved by removing the existing paint. Attach with bolts, washers, and nuts as necessary.
4. Follow the grounding guidelines providd by the manufacturer of your PC, PLC, or repeater.

Terminating Resistors

In order for the Profibus communications network to operate properly, terminating resistors are required on each end of the network. See “Appendix B—OMNI-Center Cabling Replacement Parts” on page 96 for a list of available terminating resistors. If your OMNI-Center is shipped with a bridge, repeater, and/or PLC, external terminal blocks (MCT485) are included with shipment.

© 2001 Schneider Electric All Rights Reserved

Programmable Logic Controllers (PLCs)

Profibus communications may connect directly to a Siemens PLC.

Schneider Electric Quantum PLCs contain a Profibus communication card (# 140CRP81100). To interface this card with a Profibus network, use OMNI-Center field connection cabling and follow the steps below:

1. Select the appropriate length of cable from “Appendix A—Typical Specifications” on page 93. You may connect multiple cables together to achieve the optimum length.
2. Connect the cables you chose in step 1 to one end of the OMNI-Center cabling trunk line.
3. Connect the other end of the cable assembly to the Profibus port on the PLC using cable #5000129-135.

Direct Cable Connection

Follow the steps below to connect a cable directly to the Profibus network via the MCC custom cable.

1. Determine which end (male or female) of the MCC cabling you will attach to your cable.
   NOTE: The female field attachable is part # 5000129-91, and the male field attachable is part # 5000129-93.
2. Strip back the communication cabling insulation.
3. Use the following table to match the field cabling communications terminations with MCC color coding.

Field Connection Termination	5-Pin Female/Male
Pin # 1	Shield
Pin # 2	Not used
Pin # 3	Not used
Pin # 4	White
Pin # 5 (Center pin)	Green/Blue

4. Screw the correct wire color to the pin number listed above.

Cable Length

The data transfer rate you choose will determine the maximum network length for Profibus. In order for the devices to communicate properly, they must all support the chosen data transfer rate. Use the following table to determine the maximum segment length.

Table 8: Profibus Maximum Network Length

Data Transfer Rate	Maximum Segment Length★
9.6 kb/s	3937 ft (1200 m)
19.2 kb/s	3937 ft (1200 m)
45.45 kb/s	3937 ft (1200 m)
93.75 kb/s	3937 ft (1200 m)
187.5 kb/s	3281 ft (1000 m)
500 kb/s	1312 ft (400 m)
1500 kb/s	656 ft (200 m)
3000 kb/s	328 ft (100 m)
6000 kb/s	328 ft (100 m)
12000 kb/s	328 ft (100 m)

★ Each MCC section counts as 50 ft. (15.2 m)

© 2001 Schneider Electric All Rights Reserved

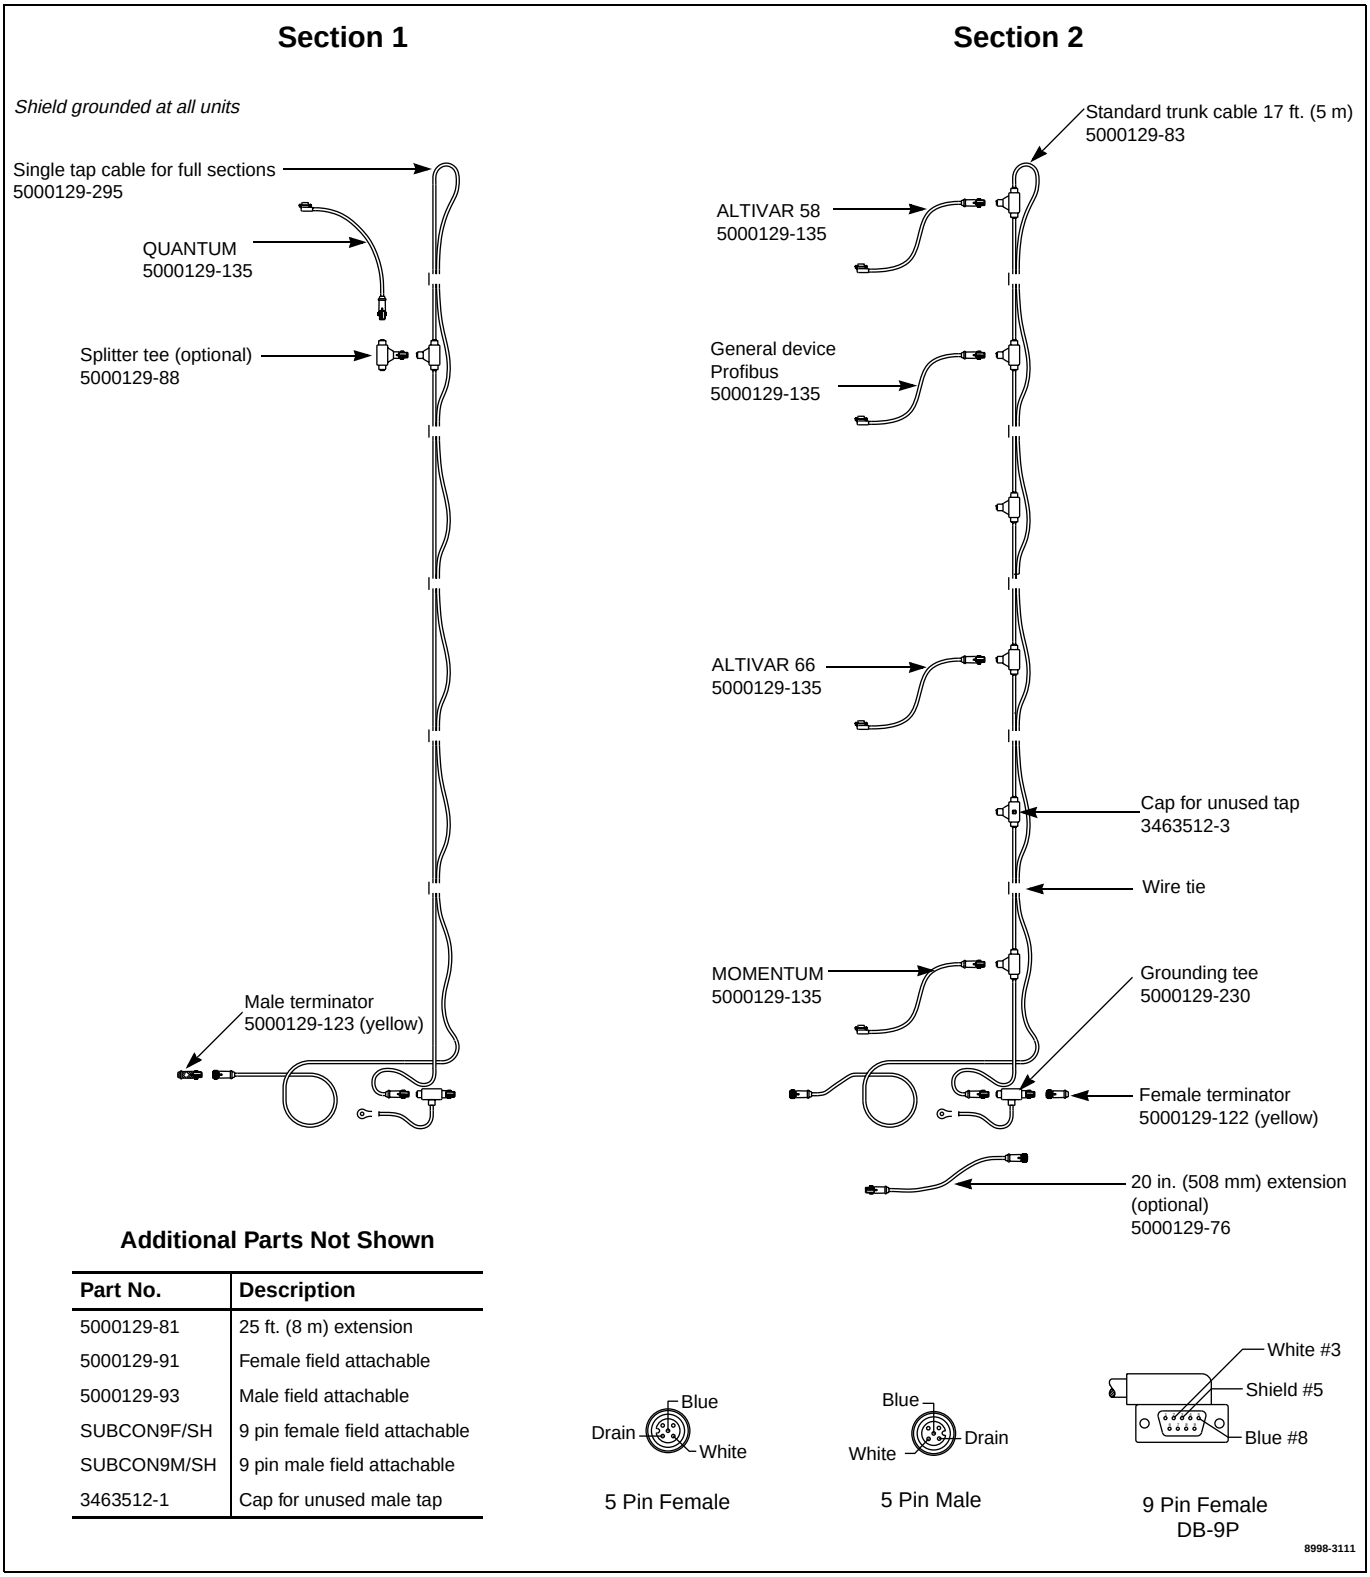

Additional Parts Not Shown

Part No.	Description
5000129-81	25 ft. (8 m) extension
5000129-91	Female field attachable
5000129-93	Male field attachable
SUBCON9F/SH	9 pin female field attachable
SUBCON9M/SH	9 pin male field attachable
3463512-1	Cap for unused male tap

Figure 34: Typical Cabling for Profibus

© 2001 Schneider Electric All Rights Reserved

DeviceNet® Communications Network

There are three primary ways to connect the DeviceNet communications network: via bridges/repeaters, programmable logic controllers (PLCs), or a direct cable connection. Follow the applicable instructions below to make the cabling connections for DeviceNet in your OMNI-Center.

Bridges/Repeaters

The DeviceNet communications network in the MCC may be isolated from the rest of the network through a bridge or repeater device. The device is typically mounted in a 9-inch (229 mm) MCC unit and wired at the factory. Depending on the number of connected nodes, you may require multiple DeviceNet networks and devices (maximum nodes per network is thirty-two). Schneider Electric recommends installing and operating the following bridge/repeater:

Table 9: Recommended Repeater for DeviceNet

Manufacturer	Bridge/Repeater No.	Reference Material
DeviceNet Western Reserve Controls	WRC-CANX-DIN-DN-C7	DN-6.7.2 DeviceNet System Overview Manual DN Western Reserve Controls Catalog, Volume B

Follow the general steps below to connect the DeviceNet network to a bridge/repeater. Consult the reference manual for your particular bridge/repeater for specific installation and configuration instructions:

1. Provide control power to the bridge device, if not provided by the MCC.
2. Connect the incoming communications cable to the customer side of the bridge/repeater.
3. Read and understand the instructions contained in the reference material for your device. Follow the installation and configuration instructions contained in that material to complete the setup of the bridge/repeater.

Grounding

If a Programmable Logic Controller (PLC) and/or repeater is provided with your OMNI-Center, grounding is done at the factory. If not, the MCC network is supplied ungrounded and you will need to ground it at only one point, either a personal computer (PC), PLC, or repeater.

Follow the steps below to ground the DeviceNet system:

1. Use a #8 AWG wire that has a maximum length of 10 ft (3 m) to connect the network shield and drain wire to an earth ground.
2. Connect the DC ground of the power supply to the ground connections made in step 1.

Terminating Resistors

In order for the DeviceNet communications network to operate properly, terminating resistors are required on each end of the network. See “Appendix B—OMNI-Center Cabling Replacement Parts” on page 96 for a list of available terminating resistors. If your OMNI-Center is shipped with a bridge, repeater, and/or PLC, external terminal blocks (MCT485) are included with shipment.

© 2001 Schneider Electric All Rights Reserved

Programmable Logic Controllers (PLCs)

Using OMNI-Center field connection cabling, you may connect DeviceNet communications directly to an Allen Bradley PLC. Follow these steps:

1. Select the appropriate length of cable from “Appendix B—OMNI-Center Cabling Replacement Parts” on page 96. You can connect multiple cables together to achieve the optimum length.
2. Connect the cables you chose in step 1 to one end of the OMNI-Center cabling trunk line.
3. Connect the other end of the cable assembly to the DeviceNet port of the PLC, using cable #5000129-75.

Direct Cable Connection

Follow the steps below to connect a cable directly to the DeviceNet network via the MCC custom cable.

1. Determine which end (male or female) of the MCC cabling you will attach to your cable.

   NOTE: The female field attachable is part # 5000129-91, and the male field attachable is part # 5000129-93.
2. Strip back the communication cabling insulation.
3. Use the following table to match the field cabling communications terminations with MCC color coding.

Field Connection Termination	5-Pin Female/Male
Pin # 1	Shield
Pin # 2	Red
Pin # 3	Black
Pin # 4	White
Pin # 5 (Center pin)	Green/Blue

Cable Type

Cabling external to the MCC should meet all of the following specifications.

Five (5) Conductors:

- Two (2) for 24 Vdc
- Two (2) for Controller Area Network (CAN)
- One (1) shield

Thick Cable (Generally used as the trunk line for a network)

- 8 A at 24 Vdc (maximum)
- Jacket material—gray PVC
- Outside diameter—0.48 in (12.2 mm)
- 65% coverage tinned copper-braid shield
- Data pair—#18 AWG 19 x 36 tinned and stranded copper conductors
- Power pair—#15 AWG 19 x 34 tinned and stranded copper conductors
- Drain wire—#18 AWG 19 x 34 tinned copper stranded drain wire
- Belden 3082A or equivalent

© 2001 Schneider Electric All Rights Reserved

Thin Cable (Generally used as the drop line that connects devices to the trunk line)

- 3 A at 24 Vdc in trunk line (maximum)
- Jacket material—yellow CPE
- Outside diameter—0.27 in (6.9 mm)
- 65% coverage tinned copper-braid shield
- Data pair—#24 AWG 19 x 36 tinned and stranded copper conductors
- Power pair—#22 AWG 19 x 34 tinned and stranded copper conductors
- Drain wire—#22 AWG 19 x 34 tinned copper stranded drain wire
- Beldon 3084A or equivalent

Cable Length

The data transfer rate and cable type you choose determine the maximum network length. In order for the devices to communicate properly, they must all support the chosen data transfer rate. Use the following table to determine the maximum segment length.

Table 10: DeviceNet Maximum Network Length

Transmission Speed	Thick (Distance)	Thin (Distance)
500 kbaud	328 ft (100 m)	128 ft (39 m)
250 kbaud	820 ft (250 m)	256 ft (78 m)
125 kbaud	1640 ft (500 m)	512 ft (156 m)
Each MCC section counts as 50 ft (15.2 m)		

© 2001 Schneider Electric All Rights Reserved

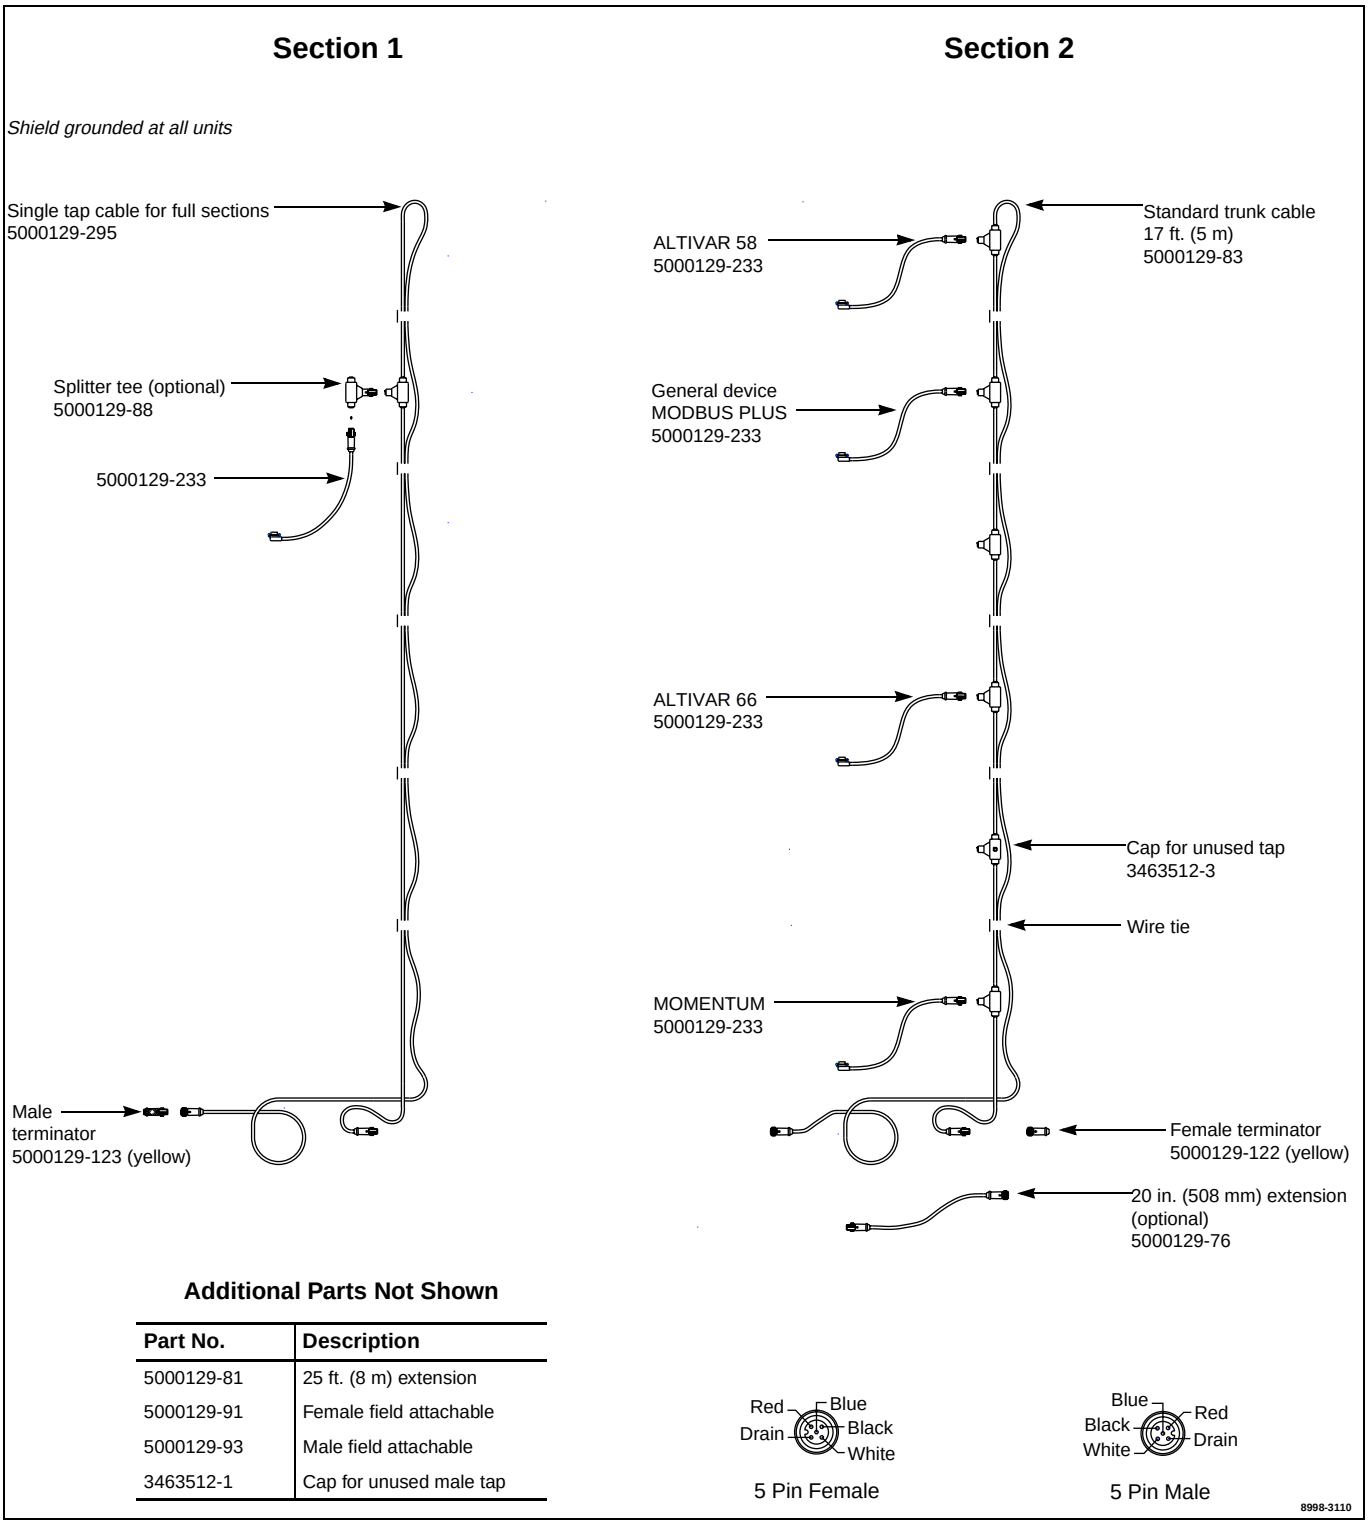

Additional Parts Not Shown

Part No.	Description
5000129-81	25 ft. (8 m) extension
5000129-91	Female field attachable
5000129-93	Male field attachable
3463512-1	Cap for unused male tap

Figure 35: Typical Cabling for DeviceNet

© 2001 Schneider Electric All Rights Reserved

SECTION 5—OPERATION

This section contains pre-operation checklists, energizing procedures, and remote and local programming procedures for MOTOR LOGIC PLUS™, POWERLOGIC® Power Meter, POWERLOGIC® Circuit Monitor, ALTIVAR™ 58, ALTIVAR™ 66, and ALTISTART® 46.

Pre-operation Checklists

To verify that the OMNI-Center is operating properly, complete both of the following checklists before energizing the equipment:

MCC Structure

- ❑ Complete the maintenance procedures beginning on page 65 and continuing up to “Insulation Test” on page 72. This initial maintenance is necessary to detect any shipping damage or loose connections. Do not energize the MCC until initial maintenance is complete.

  NOTE: The following maintenance procedures are not necessary before energizing the MCC for the first time: Control Unit Removal, Stab Assemblies, Starter Contacts and Barriers/Insulators.
- ❑ Perform an insulation test on the MCC (see “Insulation Test” on page 72).
- ❑ If the MCC is equipped with ground fault protection, properly adjust and test the ground fault protective device before energizing.
- ❑ Remove all blocks or other temporary holding means from the electrical devices.
- ❑ Remove any secondary shunt bars from the current transformers. Do not operate a current transformer with its secondary shunt bars open-circuited.
- ❑ Manually exercise all switches, circuit breakers, and other operating mechanisms to ensure that they are properly aligned and operate freely.
- ❑ Electrically exercise all electrically-operated switches, circuit breakers, and other mechanisms (but not under load) to ensure that the devices operate properly. This may require an auxiliary source of control power.
- ❑ Check the timers for the proper interval and contact operation.
- ❑ Set the MOTOR LOGIC PLUS™ overload setting to the maximum service factor amperage of the motor to ensure that the proper overload protection is provided. MOTOR LOGIC PLUS overload relays are set at the lowest setting at the factory.
- ❑ Verify that all load and remote control connections have been made and that they agree with the wiring diagrams provided.
- ❑ Verify that all ground connections are made properly.
- ❑ Install the covers and close the doors; verify that they are all properly tightened.

© 2001 Schneider Electric All Rights Reserved

OMNI-Center Communications with MODBUS PLUS

Before energizing the equipment, check the items below to verify that the OMNI-Center network cabling is set up and connected properly.

CAUTION

HAZARD OF EQUIPMENT DAMAGE

Do not use excessive force when making cabling connections. Connections are keyed to ensure that pins are properly aligned.

Failure to follow this instruction can result in equipment damage.

Cabling Connections

- ❑ Verify that the network length without a repeater is less than 1500 feet (457 m). Note that each vertical section counts as 50 feet (15 m). Refer to the MODBUS PLUS Network Planning and Installation Guide, # 890USE10300, for details (see “Square D Literature List” on page 11).
- ❑ Make sure that the MODBUS PLUS network has no more than 31 nodes.
- ❑ Verify that the MCC cables are connected between shipping splits. See “Cables Between Shipping Splits” on page 34 for instructions.
- ❑ Verify that each device tap cable is properly connected to the main trunk line.
- ❑ Verify that all network connections are secure.
- ❑ Verify that a capacitively coupled, grounded tap is installed between each vertical section. Make sure that the green grounding wire has been connected to the bottom horizontal grounding bar of the MCC.
- ❑ Verify that each device tap cable is properly connected to the main trunk line.
- ❑ Verify that terminating resistors are installed on each end of the network.Terminators are available for the OMNI-Center cabling system (see “Appendix B—OMNI-Center Cabling Replacement Parts” on page 96).

Communications Setup

- ❑ Verify that all devices have been assigned correct addresses. In MCCs, devices are assigned addresses from 2–32, unless the customer specifies otherwise. Potential addresses beyond this range are supported on a device-specific basis.

PC/PLC Connections

- ❑ Make sure that proper connections have been made to the MODBUS PLUS port of the master device (PC or PLC).

Software

NOTE: Software is required for communication with your Model 6 OMNI-Center MCC intelligent components. For example, Concept, MODSOFT™, or Proworx software, all manufactured by Schneider Automation, may be used to integrate the OMNI-Center components into your system. Your specific system requirements determine the correct software for your OMNI-Center.

© 2001 Schneider Electric All Rights Reserved

OMNI-Center Communications with Profibus

CAUTION

HAZARD OF EQUIPMENT DAMAGE

Do not use excessive force when making cabling connections. Connections are keyed to ensure that pins are properly aligned.

Failure to follow this instruction can result in equipment damage.

To verify that the OMNI-Center Profibus networking and cabling are working properly, check the items below before energizing the equipment:

Cabling Connections

- ❑ Verify that the network length without a repeater is less than 1500 feet. Note that each vertical section counts as 50 feet. Refer to the Profibus Guideline: Installation Guideline for Profibus-DP/FMS (manufactured by Siemens, order # 2-112) for details.

  NOTE: Schneider Automation supplies Profibus Application Notes with information about how to integrate Momentum I/O bases with a Profibus system.
- ❑ Make sure that the Profibus network has no more than 31 nodes.
- ❑ Verify that the MCC cables are connected between shipping splits. See “Cables Between Shipping Splits” on page 34 for instructions.
- ❑ Verify that each device tap cable is properly connected to the main trunk line.
- ❑ Verify that all network connections are secure.
- ❑ Verify that a capacitively coupled, grounded tap is installed between each vertical section. Make sure that the green grounding wire has been connected to the bottom horizontal grounding bar of the MCC.
- ❑ Verify that each device tap cable is properly connected to the main trunk line.
- ❑ Verify that terminating resistors are installed on each end of the network.Terminators are available for the OMNI-Center cabling system (see “Appendix B—OMNI-Center Cabling Replacement Parts” on page 96).

Communications Setup

- ❑ Verify that all devices have been assigned correct addresses. In MCCs, devices are assigned addresses from 2–32, unless the customer specifies otherwise. Potential addresses beyond this range are supported on a device-specific basis.

PC/PLC Connections

- ❑ Make sure that the proper baud rate is being used for communications between your master and slave devices. The baud rate is software selectable, from 9600 to 12000 baud.
- ❑ Test the communications port of the master device (PC or PLC).

Software

NOTE: Software is required for communication with your Model 6 OMNI-Center MCC intelligent components. You may configure the Profibus network using Profibus Configuration software. Modules are addressed with 3X registers for inputs and 4X registers for outputs. Users, integrators, or Square D Industrial Applications Group (IAT) may write a MODSOFT™ program that will monitor Profibus fault bits.Your specific system requirements determine the correct software for your OMNI-Center.

© 2001 Schneider Electric All Rights Reserved

OMNI-Center Communications with DeviceNet

CAUTION

HAZARD OF EQUIPMENT DAMAGE

Do not use excessive force when making cabling connections. Connections are keyed to ensure that pins are properly aligned.

Failure to follow this instruction can result in equipment damage.

To verify that the OMNI-Center DeviceNet networking and cabling are working properly, check the items below before energizing the equipment:

Cabling Connections

- ❑ Verify that the network length without a repeater is less than 1500 feet. Note that each vertical section counts as 50 feet. Refer to the DeviceNet Cable System Planning and Installation Manual (# DN-6.7.2) or the DeviceNet System Overview Manual (# DN) for detailed DeviceNet network planning. Both of these manuals are available from Allen-Bradley.

  NOTE: Schneider Automation supplies DeviceNet Application Notes with information about how to integrate Momentum I/O bases into a DeviceNet system.
- ❑ Make sure that the DeviceNet network has no more than 31 nodes.
- ❑ Verify that the MCC cables are connected between shipping splits. See “Cables Between Shipping Splits” on page 34 for instructions.
- ❑ Verify that each device tap cable is properly connected to the main trunk line.
- ❑ Verify that all network connections are secure.
- ❑ Verify that grounding has been done properly (see “DeviceNet® Communications Network” on page 41).
- ❑ Verify that you have a 24 Vdc power supply.
- ❑ Verify that terminating resistors are installed on each end of the network.Terminators are available for the OMNI-Center cabling system (see “Appendix B—OMNI-Center Cabling Replacement Parts” on page 96).

Communications Setup

- ❑ Verify that all devices have been assigned correct addresses. In MCCs, devices are assigned addresses from 2–32, unless the customer specifies otherwise. Node #1 is reserved for the master device (PC or PLC). Potential addresses beyond this range are supported on a device-specific basis.

PC/PLC Connections

- ❑ Make sure that the proper communications protocol is being used. DeviceNet supports data rates of 125 kbaud, 250 kbaud, and 500 kbaud.
- ❑ Test the communications port of the master device (PC or PLC).

Software

NOTE: Software is required for communication with your Model 6 OMNI-Center MCC intelligent components. Your specific system requirements determine the correct software for your OMNI-Center.

© 2001 Schneider Electric All Rights Reserved

Energizing the MCC

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, BURN, OR EXPLOSION

- This equipment must be installed and serviced only by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Replace all devices, doors, and covers before turning on power to this equipment.
- Review the “Pre-operation Checklists” beginning on page 45, and verify that all items check out.

Failure to follow these instructions will result in death or serious injury.

To energize the MCC:

1. Review the “Pre-operation Checklists” on page 45 before energizing.
2. Turn off all downstream loads, including distribution equipment and other devices that are remote from the MCC.
3. Verify that all barriers, doors, and covers are closed before energizing the equipment.
4. Energize the equipment in sequence, starting with the main devices, the feeder devices next, and then the motor starter devices.
5. With all barriers in place and all unit doors closed and latched, turn on the devices with a firm, positive motion.
6. After all disconnect devices are closed, you may energize loads such as lighting circuits, starters, contactors, heaters, and motors.

© 2001 Schneider Electric All Rights Reserved

MOTOR LOGIC PLUS™ Solid State Overload Relay (SSOLR)

The MOTOR LOGIC PLUS Solid State Overload Relay (SSOLR) is used with the following starters:

- Full Voltage Non-Reversing (FVNR)
- Full Voltage Reversing (FVR)
- Reduced Voltage Auto Transformer (RVAT)
- Part winding
- Two speed
- Wye-delta open transition and wye-delta closed transition

Refer to Square D bulletin # 30072-013-98A and # 30072-013-102C (see "Square D Literature List" on page 11) for more information about the MOTOR LOGIC PLUS SSOLR.

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, BURN, OR EXPLOSION

- Turn off all power supplying this equipment before working on or inside the Motor Control Center.
- Use a properly rated voltage sensing device to confirm that all power is off. Control units must be de-energized before performing maintenance on the MCC.
- The unit disconnect switch must be locked in the "off" position before working on equipment.

Failure to follow these instructions will result in death or serious injury.

Local Programming

Local programming is performed for setpoint programming and error readout purposes. Verify that the display is unlocked (the default setting), and disconnect all power before performing the steps below to accomplish local programming:

1. Connect a 9 V supply to the "P" and "G" terminals using the supplied connector, part # 80445-519-50 (see Figure 36 on page 51).
2. Turn the "Mode Select" switch to the parameter you are programming. Refer to bulletin # 30072-013-98_ (see "Square D Literature List" on page 11) for a list of parameters.
3. Press and hold the "Reset/Program" button.

   NOTE: The display will not illuminate for local programming if the "Mode Select" switch is in the "Run" position.
4. Turn the "Display/Program" dial to the desired setting as shown on the LED display.
5. Release the "Reset/Program" button.
6. Turn the "Mode Select" switch back to the "Run" position.
7. Disconnect the 9 V supply and its connector.

Error messages are displayed on the 3-digit LED display when harmful conditions are detected. Table 11 contains a list of the error message codes and their definitions.

© 2001 Schneider Electric All Rights Reserved

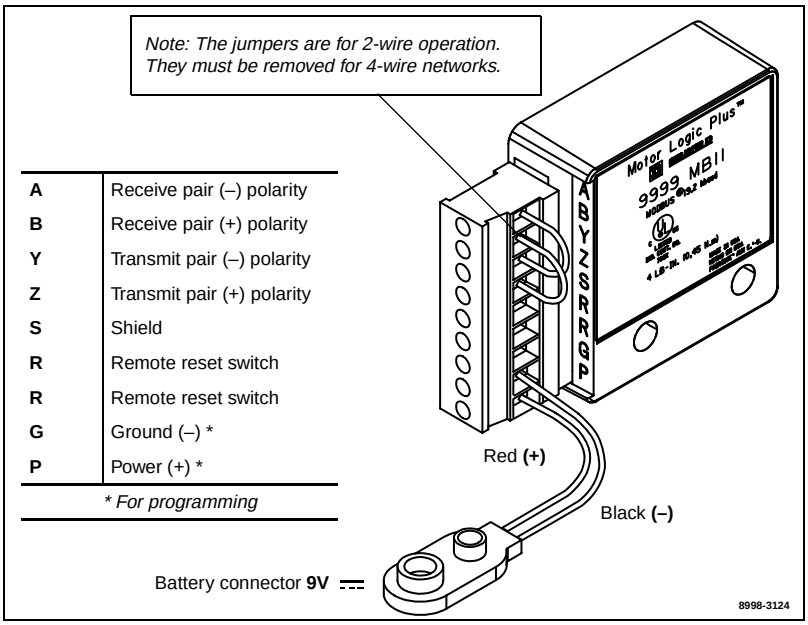

Figure 36: MOTOR LOGIC PLUS Communication Module Terminals

Table 11: Local Error Display

Displayed Message	Meaning
oc	Tripped on over current
SP	Tripped on single phasing
ub	Tripped on voltage or current unbalance
uC	Tripped on under current
cF	Tripped on contactor failure
GrF	Tripped on ground fault
HI	Tripped on high voltage
Lo	Tripped on low voltage
rP	Incoming phases have been reversed
oFF	A stop command was issued from a remote source

Remote Programming

Remote programming is performed for setpoint programming and data acquisition purposes. Follow the steps below to remotely configure the MOTOR LOGIC PLUS overload:

1. Stop the overload by sending code “02” to the command register (C6H).
2. If network programming has not been enabled, send code “05” to the command register.
3. Program the appropriate parameter. See Table 12 for a register map with a list of parameters. For more detailed information, refer to bulletin # 30072-013-102_. See Table 14 and Table 15 to determine the location and addressing of parameters within the MOTOR LOGIC PLUS register map.
4. Restart the overload by using code “01.”

© 2001 Schneider Electric All Rights Reserved

Table 12: MOTOR LOGIC PLUS™ Address Descriptions

Operation	Address		Code	Description	Notes
	RAM	Relative★			
Read only (all registers are 16-bit words)	A0	1A0	VOLTAV	Average voltage L–L	V~
	A2	1A1	IAVE	Raw average current	A (x100, x10, x1), multiplied by scale factor
	A4	1A2	VUB	Voltage unbalance	0–100%
	A6	1A3	IUB	Current unbalance	0–100%
	A8	1A4	PFANGLE	Power factor angle	Degrees
	AA	1A5	CAPTY	Thermal capacity remaining	0–100%
	AC	1A6	GFC	Ground fault current	A (x100, x10, x1), multiplied by scale factor
	AE	1A7	ERCODE/ TRIPRN	Real time error (RTE) & trip indicator (TI)	8-bit nibble-coded RTE; 8-bit coded TI
	B0	1A8	FH	Fault history	Fault order: 4th, 3rd, 2nd, Last
	B2	1A9	PID	Manufacture year/model & scale	8-bit year; 8-bit ID & scale
	B4	1AA	VA-C	Line voltage A–C	V~
	B6	1AB	VB-C	Line voltage B–C	V~
	B8	1AC	VA-B	Line voltage A–B	V~
	BA	1AD	IC	Raw current phase C	A (x100, x10, x1), multiplied by scale factor
	BC	1AE	IB	Raw current phase B	A (x100, x10, x1), multiplied by scale factor
	BE	1AF	IA	Raw current phase A	A (x100, x10, x1), multiplied by scale factor
	C0	1Bo	RD1	Remaining restart delay RD1	
	C2	1B1	RD2	Remaining restart delay RD2	
	C4	1B2	RD3	Remaining restart delay RD3	

★ Required for POWERLOGIC software.

© 2001 Schneider Electric All Rights Reserved

Table 12: MOTOR LOGIC PLUS™ Address Descriptions (Continued)

Operation	Address		Code	Description	Notes
	RAM	Relative★			
Read/write (all registers are 16-bit words)	C6	1B3	COMLINE	Command line code (address C6H)	see Table 13 (write only)
	C8	1B4	Scale	POWERLOGIC® scale parameter (read only)	0, 1, 2; 16-bit signed word (2's complement, read only)
	CA	1B5	LV	Low voltage threshold	170 V~ to HV (600 V~ model; 450 V~ a HV)
	CC	1B6	HV	High voltage threshold	LV to 528 V~ (600 V~ model; LV to 660 V~)
	CE	1B7	VUB	Voltage unbalance threshold	2–15%, or 999 (off)
	D0	1B8	MULT	Effective turns ratio	Determined by model
	D2	1B9	OC	Overcurrent threshold	Current range of SSOLR
	D4	1BA	UC	Undercurrent threshold	0.5 x OC Min. to OC Max., Off
	D6	1BB	CUB	Current unbalance threshold	2–25%, or 999 (off)
	D8	1BC	TC	Overcurrent trip class	5, J5, 10, J10, 15, J15, 20, J20, 30, J30 *(J = Jam protection is enabled)*
	DA	1BD	RD1	Rapid cycle timer	2–500 s
	DC	1BE	RD2	Restart delay RD2	2–500 min.
	DE	1BF	RD3	Restart delay RD3	2–500 min.
	E0	1C0	#RU	Restarts after UC	0, 1, 2, 3, 4, A
	E2	1C1	#RF	Number of restarts	0, 1, oc1, 2, oc2, 3, oc3, 4, oc4, A, ocA *(0 = manual, A = continuous, oc = automatic restart after RD2 expires)*
	E4	1C2	UCTD	Undercurrent trip delay	2–60 s
	E6	1C3	GF	Ground fault threshold	0.15 x OC Min. to 0.2 x OC Max., Off
	E8	1C4	ADDR	RS-485 slave address	01–99

★ Required for POWERLOGIC software.

© 2001 Schneider Electric All Rights Reserved

Table 13: Command Line Codes

Code	Command
01H	Start/reset
02H	Stop
03H	Display lock
04H	Display unlock
05H	Network program enable
06H	Network program disable
07H	Network watchdog enable★
08H	Network watchdog disable★

★ The network watchdog feature (when enabled) disables the MOTOR LOGIC PLUS SSOLR when the device does not receive a valid communication within a 10 s period.

Table 14: Read Only Registers

RAM Address	Relative Address★	Code	Description	Notes
A0	1A0	VOLTAV	Average voltage L-L	Volts
A2	1A1	IAVE	Raw average current	A (x100, x10, x1), multiplied by scale factor
A4	1A2	VUB★★	Voltage unbalance	0–100%
A6	1A3	IUB★★	Current balance	0–100%
A8	1A4	PFANGLE★★	Power factor angle	Degrees
AA	1A5	CAPTY★★	Thermal capacity remaining	0–100%
AC	1A6	GFC★★	Ground fault current	A (x100, x10, x1), multiplied by scale factor
AE	1A7	ERCODE/ TRIPRN	Bit-real time errors & trip indicator	**Bit #** / **TRIPRN** / **ERCODE**
				Bit 0 / Fault lockout / Low voltage
				Bit 1 / Remote stop / High voltage
				Bit 2 / Contactor failure / Unbalance voltage
				Bit 3 / Under current / Under current
				Bit 4 / Over current / Phase reversal
				Bit 5 / Ground fault / Unbalance current
				Bit 6 / Current unbalance / Single phase voltage > 25%
				Bit 7 / Current single phase > 50% unbalance / Single phase current > 50%

★ Must be used with POWERLOGIC software
★★ Can only be viewed via network

© 2001 Schneider Electric All Rights Reserved

Table 14: Read Only Registers (Continued)

RAM Address	Relative Address★	Code	Description	Notes	
B0	1A8	FH★★	NIBBLE_CODED -4 fault history	The four-fault history is based on the following scheme: 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1, where bits 1–4 = Last fault, bits 5–8 = 2nd last fault, bits 9–12 = 3rd last fault, & bits 13–16 = 4th last fault. These four bits indicate a hex value that corresponds to the following faults:	
				01	High voltage
				02	Low voltage
				03	N/A
				04	Contactor failure
				05	Phase reversal
				06	Single phase
				07	Ground fault
				08	Current unbalance
				09	Remote off command
				10	Overcurrent
				11	Undercurren t
B2	1A9	PID★★	Manufacture year, month, product type/scale	8-bit year, 4-bit month, 4-bit I/O & scale	
B4	1AA	VA-C	Line voltage A–C	Volts	
B6	1AB	VB-C	Line voltage B–C	Volts	
B8	1AC	VA-B	Line voltage A–B	Volts	
BA	1AD	IC	Raw current phase C	A (x100, x10, x1), multiplied by scale factor	
BC	1AE	IB	Raw current phase B	A (x100, x10, x1), multiplied by scale factor	
BE	1AF	IA	Raw current phase A	A (x100, x10, x1), multiplied by scale factor	
C0	1B0	RD1★★	Remaining restart delay RD1	Seconds	
C2	1B1	RD2★★	Remaining restart delay RD2	Seconds	
C4	1B2	RD3★★	Remaining restart delay RD3	Seconds	

★ Must be used with POWERLOGIC software
★★ Can only be viewed via network

© 2001 Schneider Electric All Rights Reserved

Table 15: Read/Write Registers

RAM Address	Relative Address	Code	Description	Range	Default	
C6	1B3	COM-LINE	Command Line★	Reset/run/ stop, display lock, network configuration enable	**MOTOR LOGIC PLUS Command Register (C6 hex)**	
					01H	Start/reset
					02H	Stop
					03H	Display lock
					04H	Display unlock
					05H	Network program enable
					06H	Network program disable
C8	1B4	Scale	POWERLOGIC scale parameter	0, 1, 1–2; 16-bit signed word (2's complement, read only)	Model dependent	
CA	1B5	LV	Low voltage threshold	170 V (450 V★) - HV setting	435	
CC	1B6	HV	High voltage threshold	LV setting - 528 V (660 V★)	500	
CE	1B7	VUB	Voltage unbalance threshold	2–15% or 999%	5%	
D0	1B8	MULT	CT/turns effective ratio	1 or 10–200	1	
D2	1B9	OC	Overcurrent threshold	OL current range	Min. rating	
D4	1BA	UC	Undercurrent threshold	0.5 x OC Min. to OC Max., Off	0.8 x OC Min.	
D6	1BB	CUB	Current unbalance threshold	2–25% or 999%	6%	
D8	1BC	TC	Overcurrent trip class	5, J5, 10, J10, 15, J15, 20, J20, 30, J30 *(J = Jam protection is enabled)*	5	5 decimal
					J5	133 decimal
					10	10 decimal
					J10	138 decimal
					15	15 decimal
					J15	143 decimal
					20	20 decimal
					J20	148 decimal
					30	30 decimal
					J30	158 decimal
DA	1BD	RD1	Rapid cycle timer	2–500 seconds	10	
DC	1BE	RD2	Restart delay all faults except undercurrent	2–500 minutes	8	

★ Can only be viewed via network

© 2001 Schneider Electric All Rights Reserved

Table 15: Read/Write Registers (Continued)

RAM Address	Relative Address	Code	Description	Range	Default	
DE	1BF	RD3	Restart delay after undercurrent	2–500 minutes	20	
E0	1C0	#RU	# Restarts after undercurrent	0, 1, 2, 3, 4, A (Automatic)	**RU Values**	
					8.1	0–4 in decimal
					8.2	A = 255 decimal
E2	1C1	#RF	# Restarts all faults except undercurrent	0, 1, oc1, 2, oc2, 3, oc3, 4, oc4, A, ocA *(0 = manual, A = continuous, oc = automatic restart after RD2 expires)*	**RF Values**	
					0	1 decimal
					1	2 decimal
					oc1	3 decimal
					2	4 decimal
					oc2	5 decimal
					3	6 decimal
					oc3	7 decimal
					4	8 decimal
					oc4	9 decimal
					A	10 decimal
					ocA	11 decimal
E4	1C2	UCTD	Undercurrent trip delay	2–60 seconds	5	
E6	1C3	GF	Ground fault current threshold	(0.4) AOL current range or Off	0.15 x Min.	
E8	1C4	ADDR	RS-485 slave address	01–99	1	

★ Can only be viewed via network

POWER LOGIC® Power Meter

Instructions for performing local and remote programming for the Power Meter are contained in bulletin # 3020IM9503 R6/98 (see “Square D Literature List” on page 11).

POWER LOGIC® Circuit Monitor

Instructions for performing local and remote programming for the Circuit Monitor 2000 are contained in bulletin # 3020IM9807 (see “Square D Literature List” on page 11).

ALTIVAR™ 58

To accomplish local setpoint programming and fault readout for the ALTIVAR™ 58, refer to bulletin # VVDED397047US R7/00 (see“Square D Literature List” on page 11).

To perform remote setpoint programming and fault readout, refer to bulletin # VVDED397054US (see “Square D Literature List” on page 11).

For ALTIVAR™ 58 hardware troubleshooting, refer to Square D instruction bulletin # VVDED397048US R4/99 (see “Square D Literature List” on page 11).

See Table 14 on page 54 and Table 15 on page 56 to determine the location and addressing of parameters within the ALTIVAR™ 58 register map.

© 2001 Schneider Electric All Rights Reserved

ALTIVAR™ 66

Refer to bulletin # VD0C06A305_ for instructions on performing local programming for ALTIVAR™ 66 (see “Square D Literature List” on page 11).

For information regarding remote programming and parameters for the ALTIVAR™ 66, refer to Square D instruction bulletin # VD0C06S308 (see “Square D Literature List” on page 11).

ALTISTART® 46

The ALTISTART 46 is factory set to operate without adjustment along with many applications. At the factory, the ALTISTART 46 is set up with the following parameters:

Protocol	Address	Speed	Format	Parity
MODBUS RTU	Customer defined	19,200 baud	8 data bits, 1 stop bit	Even

Two switches on the back of the keypad provide three levels of access to the parameters. Each can be set to prevent adjustment of the parameters, as is the case when shipped from the factory. The parameters are locked at the factory to avoid accidental modification. To adjust parameters, you must first remove the communications module from the front of the unit door, and then change the dip switch settings.

Table 16: ALTISTART 46 Function Index Table

Description	Type	Characteristics	Code	Address★
Return to factory settings	C	Active on positive edge	CMD, INT	W4060, D
Control loop	F	Select closed loop (torque control) open loop (voltage regulation)	CLP	W4035, 0
	C	Run command	CMD, RUN	W4060, 5
	A	Acceleration ramp time	ACC	W4043
	A	Initial torque during acceleration	TQ0	W4037
	A	Max. torque during acceleration	TLI	W4036
	A	Limit current	ILT	W4039
	A	Boost level	BST	W4028
Start	A	Start time too long	TLS	W4033
	A	Stator loss compensation	LSC	W4027
	D	Controller ready	ETA, RDY	W4061, 1
	D	Steady state	ETA, 8	W4061, 8
	D	Short-circuited	ETA, 9	W4061, 9
	D	Current limited	ETA, LIM	W4061, D
	D	Acceleration phase	ETA, B	W4061, B
	C	Freewheel stop command	CMD, CAL	W4060, 8
	C	Decelerated stop command	CMD, CAD	W4060, 7
	C	Braked stop command	CMD, CAF	W4060, 6
	C	Control motor deceleration in cascade	DMC	W4060, 3
Stop	A	Decel: deceleration ramp slope	DEC	W4044
	A	final torque during deceleration	EDC	W4038
	A	Braking: braking current	BRC	W4041
	A	adjustment of braking time	EBA	W4042
	D	Stop phase	ETA, A	W4061, A

Types: C=Command F=Configuration A=Adjustment D=Display

★When using MODBUS protocol, add 1 to the address.

© 2001 Schneider Electric All Rights Reserved

Table 16: ALTISTART 46 Function Index Table (Continued)

Description	Type	Characteristics	Code	Address★
Motor protection	C	Reset thermal state	CMD, RTH	W4060, A
	A	Trip threshold (underload)	TLS	W4031
	A	Motor nominal current	In	W4026
	F	Motor thermal protection	THP	W4034
	D	Motor thermal state	LTH	W4064
Controller protection	F, A	Trip current threshold	OIL	W4040
Mains supply	F	Default assignment of phase rotation	PHR	W4032
	D	Phase rotation state	PHE	W4065
	D	No mains supply	ETA, E	W4061, E
	D	Mains supply frequency	ETA, F	W4061, F
Measurements	D	Current	LCR	W4062
	D	Cos (φ) motor power factor	COS	W4067
	D	Torque	LTR	W4063
	D	Elapsed time meter	TFR	W4068
	D	Reset elapsed time meter	TRE	W4060, C
Special operation	F	Test on low power motors	SST	W4035, 5
	C	Cascade motor operation	CSC	W4035, 6
I/O management	F	Assignment of logic input LI	LI	W4022
	F	Assignment of logic output LO1	LO1	W4023
	F	Assignment of logic output LO2	LO2	W4035, 3
	F	Assignment of analog output AO	AO	W4024
	A	Analog output scale	ASC	W4025
	F	Analog output range	AO1	W4035, 4
	F	Assignment of relay R1	R1	W4035, 2
	D	State of I/O: Logic input LI	LIO	W4066
	D	Logic output LO1		W4066, 1
	D	Logic output LO2		W4066, 2
	D	Relay R1		W4066, 3
	D	Relay R2		W4066, 4
	D	Vigithem		W4066, 5
	D	Logic input LI_RUN		W4066, 6
	D	Logic input LI_STOP		W4066, 7
	D	Operating duty switch		W4066, 8
	D	Value of analog output AO	SAO	W4070
Communication & terminal block management	C	Assignment of online commands	DLI	W4060, 1
	C	Store adjustments in EEPROM	MRE	W4060, E
	C	Recall adjustments from EEPROM	RRE	W4060, F
	F	Product address	ADR	W2290
	F	Protocol	PRO	W2291
	F	Transmission speed	SPD	W2292
	F	Character format	FOR	W2293
	D	In local/line mode	LOC	W4061, 0
	D	Stopped after request via terminal block	ETA, 3	W4061, 3
	D	Local control	FLO	W4061, 5

Types: C=Command F=Configuration A=Adjustment D=Display

★When using MODBUS protocol, add 1 to the address.

© 2001 Schneider Electric All Rights Reserved

Table 16: ALTISTART 46 Function Index Table (Continued)

Description	Type	Characteristics	Code	Address★
Fault and alarm management	C	External fault command	EFL	W4060, 2
	C	Controller reset command	RST	W4060, 0
	C	No time out SLF	NTO	W4060, 4
	F	Automatic reset	ARS	W4035, 1
	D	Controller faulted	FAI	W4061, 2
	D	Communication check inhibited	NTO	W4061
	D	Current threshold alarm		W4061, 7
	D	Motor thermal alarm	OVL	W4061, C
	D	Internal fault	INF	W4069, 1
	D	Short-circuit fault	OCF	W4069, 2
	D	Phase inversion fault	PIF	W4069, 3
	D	Serial link fault	SLF	W4069, 5
	D	External fault	ETF	W4069, 6
	D	Start too long fault	STF	W4069, 7
	D	Mains failure and start request fault	USF	W4069, 8
	D	Phase fault	PHF	W4069, 9
	D	Controller thermal fault	OHF	W4069, A
	D	Locked rotor in steady state fault	LRF	W4069, B
	D	Motor thermal overload fault	OLF	W4069, C
	D	Mains frequency fault	FRF	W4069, D
	D	Underload fault	ULF	W4069, F
	D	Time before starting alarm	TBS	W4071, 0
Fault history	D	Fault order	PTR	W4090
	D	Fault register repetition	DFT	W4091
	D	Time counter repetition		W4092

Types: C=Command F=Configuration A=Adjustment D=Display

★When using MODBUS protocol, add 1 to the address.

Table 17: ALTISTART 46 Function Index Table by Address

Address★	Description	Type	Characteristics	Code
W2290	Communication & terminal block management	F	Product address	ADR
W2291	Communication & terminal block management	F	Protocol	PRO
W2292	Communication & terminal block management	F	Transmission speed	SPD
W2293	Communication & terminal block management	F	Character format	FOR
W4022	I/O management	F	Assignment of logic input LI	LI
W4023	I/O management	F	Assignment of logic output LO1	LO1
W4024	I/O management	F	Assignment of analog output AO	AO
W4025	I/O management	A	Analog output scale	ASC
W4026	Motor protection	A	Motor nominal current	In
W4027	Start	A	Stator loss compensation	LSC
W4028	Start	A	Boost level	BST
W4031	Motor protection	A	Trip threshold (underload)	TLS

Types: C=Command F=Configuration A=Adjustment D=Display

★When using MODBUS protocol, add 1 to the address.

© 2001 Schneider Electric All Rights Reserved

Table 17: ALTISTART 46 Function Index Table by Address (Continued)

Address★	Description	Type	Characteristics	Code
W4032	Mains supply	F	Default assignment of phase rotation	PHR
W4033	Start	A	Start time too long	TLS
W4034	Motor protection	F	Motor thermal protection	THP
W4035, 0	Control loop	F	Select closed loop (torque control) open loop (voltage regulation)	CLP
W4035, 1	Fault & alarm management	F	Automatic reset	ARS
W4035, 2	I/O management	F	Assignment of relay R1	R1
W4035, 3	I/O management	F	Assignment of logic output LO2	LO2
W4035, 4	I/O management	F	Analog output range	AO1
W4035, 5	Special operation	F	Test on low power motors	SST
W4035, 6	Special operation	C	Cascade motor operation	CSC
W4036	Start	A	Maximum torque during acceleration	TLI
W4037	Start	A	Initial torque during acceleration	TQ0
W4038	Stop	A	Decel: final torque during deceleration	EDC
W4039	Start	A	Limit current	ILT
W4040	Controller protection	F, A	Trip current threshold	OIL
W4041	Stop	A	Braking: braking current	BRC
W4042	Stop	A	Braking: adjustment of braking time	EBA
W4043	Start	A	Acceleration ramp time	ACC
W4044	Stop	A	Decel: deceleration ramp slope	DEC
W4060, 0	Fault & alarm management	C	Controller reset command	RST
W4060, 1	Communication & terminal block management	C	Assignment of online commands	DLI
W4060, 2	Fault & alarm management	C	External fault command	EFL
W4060, 3	Stop	C	Control motor deceleration in cascade	DMC
W4060, 4	Fault & alarm management	C	No time out SLF	NTO
W4060, 5	Start	C	Run command	CMD, RUN
W4060, 6	Stop	C	Braked stop command	CMD, CAF
W4060, 7	Stop	C	Decelerated stop command	CMD, CAD
W4060, 8	Stop	C	Freewheel stop command	CMD, CAL
W4060, A	Motor protection	C	Reset thermal state	CMD, RTH
W4060, C	Measurements	D	Reset elapsed time meter	TRE
W4060, D	Return to factory settings	C	Active on positive edge	CMD, INT
W4060, E	Communication & terminal block management	C	Store adjustments in EEPROM	MRE
W4060, F	Communication & terminal block management	C	Recall adjustments from EEPROM	RRE
W4061	Fault & alarm management	D	Communication check inhibited	NTO

Types: C=Command F=Configuration A=Adjustment D=Display

★When using MODBUS protocol, add 1 to the address.

© 2001 Schneider Electric All Rights Reserved

Table 17: ALTISTART 46 Function Index Table by Address (Continued)

Address★	Description	Type	Characteristics	Code
W4061, 0	Communication & terminal block management	D	In local/line mode	LOC
W4061, 1	Start	D	Controller ready	ETA, RDY
W4061, 2	Fault & alarm management	D	Controller faulted	FAI
W4061, 3	Communication & terminal block management	D	Stopped after request via terminal block	ETA, 3
W4061, 5	Communication & terminal block management	D	Local control	FLO
W4061, 7	Fault & alarm management	D	Current threshold alarm	
W4061, 8	Start	D	Steady state	ETA, 8
W4061, 9	Start	D	Short-circuited	ETA, 9
W4061, A	Stop	D	Stop phase	ETA, A
W4061, B	Start	D	Acceleration phase	ETA, B
W4061, C	Fault & alarm management	D	Motor thermal alarm	OVL
W4061, D	Start	D	Current threshold	ETA, LIM
W4061, E	Mains supply	D	No mains supply	ETA, E
W4061, F	Mains supply	D	Mains supply frequency	ETA, F
W4062	Measurements	D	Current	LCR
W4063	Measurements	D	Torque	LTR
W4064	Motor protection	D	Motor thermal state	LTH
W4065	Mains supply	D	Phase rotation state	PHE
W4066	I/O management	D	State of I/O: Logic input LI	LIO
W4066, 1	I/O management	D	Logic output LO1	
W4066, 2	I/O management	D	Logic output LO2	
W4066, 3	I/O management	D	Relay R1	
W4066, 4	I/O management	D	Relay R2	
W4066, 5	I/O management	D	Vigithem	
W4066, 6	I/O management	D	Logic input LI_RUN	
W4066, 7	I/O management	D	Logic input LI_STOP	
W4066, 8	I/O management	D	Operating duty switch	
W4067	Measurements	D	Cos (φ) motor power factor	COS
W4068	Measurements	D	Elapsed time meter	TFR
W4069, 1	Fault & alarm management	D	Internal fault	INF
W4069, 2	Fault & alarm management	D	Short-circuit fault	OCF
W4069, 3	Fault & alarm management	D	Phase inversion fault	PIF
W4069, 5	Fault & alarm management	D	Serial link fault	SLF
W4069, 6	Fault & alarm management	D	External fault	ETF
W4069, 7	Fault & alarm management	D	Start too long fault	STF
W4069, 8	Fault & alarm management	D	Mains failure and start request fault	USF
W4069, 9	Fault & alarm management	D	Phase fault	PHF
W4069, A	Fault & alarm management	D	Controller thermal fault	OHF
W4069, B	Fault & alarm management	D	Locked rotor in steady state fault	LRF
W4069, C	Fault & alarm management	D	Motor thermal overload fault	OLF
W4069, D	Fault & alarm management	D	Mains frequency fault	FRF

Types: C=Command F=Configuration A=Adjustment D=Display

★When using MODBUS protocol, add 1 to the address.

© 2001 Schneider Electric All Rights Reserved

Table 17: ALTISTART 46 Function Index Table by Address (Continued)

Address★	Description	Type	Characteristics	Code
W4069, F	Fault & alarm management	D	Underload fault	ULF
W4070	I/O management	D	Value of analog output AO	SAO
W4071, 0	Fault & alarm management	D	Time before starting alarm	TBS
W4090	Fault history	D	Fault order	PTR
W4091	Fault history	D	Fault register repetition	DFT
W4092	Fault history	D	Time counter repetition	

Types: C=Command F=Configuration A=Adjustment D=Display

★When using MODBUS protocol, add 1 to the address.

© 2001 Schneider Electric All Rights Reserved

© 2001 Schneider Electric All Rights Reserved

SECTION 6—MAINTENANCE

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, BURN, OR EXPLOSION

- This equipment must be installed and serviced only by qualified electrical personnel.
- Qualified electrical personnel must perform work in accordance with all applicable national and local electric codes.
- Perform such work only after reading and understanding all of the instructions contained in this bulletin.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Beware of potential hazards, wear personal protective equipment, and take adequate safety precautions.
- Before performing visual inspections, tests, or maintenance on the equipment, disconnect all sources of electric power. Assume that all circuits are live until they have been completely de-energized, tested, locked out, and/or tagged out. Pay particular attention to the design of the power system. Consider all sources of power, including the possibility of backfeeding.
- Replace all devices, doors, and covers before turning on power to this equipment.

Failure to follow these instructions will result in death or serious injury.

Before energizing any new MCC equipment, perform the maintenance described in this section. Perform regular maintenance at least annually, or more frequently if indicated by service conditions and your established maintenance policy. Also perform maintenance following any service, electrical fault, or unusual occurrence.

Enclosure

Examine the interior and exterior of the MCC for moisture, oil, or other foreign material. Eliminate all foreign material and clean the MCC.

Clean the interior and exterior of the MCC with a vacuum cleaner. ***Do not use compressed air; it will redistribute contaminants to other surfaces.*** Check the enclosure for damage that might reduce electrical clearances.

Examine the finish of the enclosure. Touch up the paint if necessary. Replace any badly corroded or damaged enclosure parts.

Bus Bars and Incoming Line Compartments

Perform maintenance of bus and incoming line lug connections at least annually, or more frequently if indicated by service conditions and your established maintenance policy. Follow the steps below at the time of installation to locate and tighten any connections that may have loosened during shipment and handling:

1. Remove the top and bottom horizontal wire trough covers in each section.
2. Expose the bus and bus connections by removing the two-piece bus barrier in each section.
3. Examine all bus bars and connectors. Replace any parts that are badly discolored, corroded, or pitted. Also replace parts subjected to excessive temperatures.
4. Check, and tighten if necessary, all bolts at the bus connection points indicated by a hexagon in Figure 37. Although one specific type of compartment or bus is shown in Figure 37, perform this maintenance on all bolted connections. Refer to Table 18 for torque values.

Table 18: Bus Connection Torque Values

Bolted Connection Location	Torque range
Horizontal bus (all locations)	68–70 lb-ft (92.29–94.54 N•m)
Splice bars – 0.375 in. diameter bolts	31–32 lb-ft (41.64–43.33 N•m)
Horizontal ground bus (all locations)	5–6 lb-ft (6.75–8.44 N•m)

⚠ CAUTION

HAZARD OF EQUIPMENT DAMAGE

- Never brush or use sandpaper on the bus; doing so will remove plating and cause oxidation. Use a cleaning fluid approved for such use. Do not use cleaning fluid on insulators.
- Do not attempt to clean bus bars or connectors that are damaged in any way. Replace them with new parts.

Failure to follow these instructions can result in injury or equipment damage.

© 2001 Schneider Electric All Rights Reserved

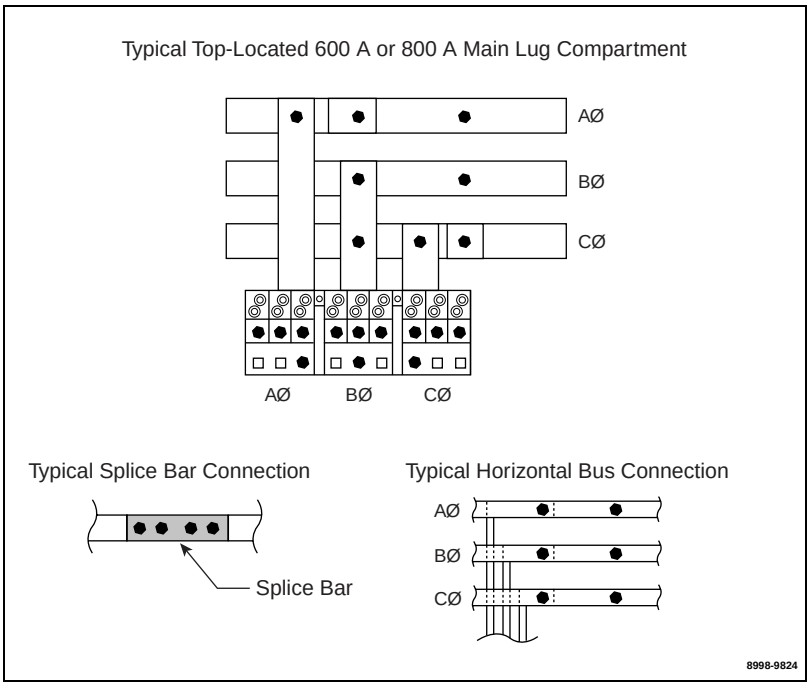

Figure 37: Typical Bus Connection Points

5. Check, and tighten if required, all main lug, circuit breaker or fusible switch set screws holding incoming conductors in main lugs (see Figure 38). Using a torque wrench and a 3/8 in. allen bit, torque the lug set screws to the appropriate value (see “Cable Connection Torque Values” on page 33).
6. Inspect all insulators, braces, and barriers; replace any that show signs of arcing damage, tracking, excessive heat, or cracking.

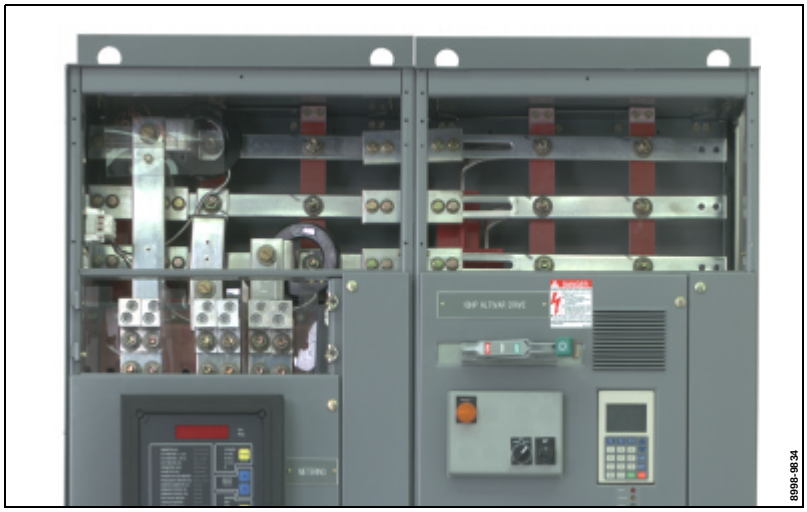

Figure 38: Top-located Main Lug Compartment

© 2001 Schneider Electric All Rights Reserved

Control Unit Maintenance

⚠DANGER

HAZARD OF ELECTRIC SHOCK, BURN, OR EXPLOSION

- This equipment must be installed and serviced only by qualified electrical personnel.
- Qualified electrical personnel must perform work in accordance with all applicable national and local electric codes.
- Perform such work only after reading and understanding all of the instructions contained in this bulletin.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Beware of potential hazards, wear personal protective equipment, and take adequate safety precautions.
- Before performing visual inspections, tests, or maintenance on the equipment, disconnect all sources of electric power. Assume that all circuits are live until they have been completely de-energized, tested, locked out, and/or tagged out. Pay particular attention to the design of the power system. Consider all sources of power, including the possibility of backfeeding.
- Replace all devices, doors, and covers before turning on power to this equipment.

Failure to follow these instructions will result in death or serious injury.

Perform maintenance on control units at least annually, or more frequently if indicated by service conditions and your established maintenance policy. During installation, locate and tighten any connections that have become loose during shipment and handling, using the following procedures. If the control unit is being removed from the MCC for maintenance, begin with “Control Unit Removal” below. If maintenance is performed with the control unit installed, begin with “Circuit Breaker or Disconnect Switch” on page 70.

© 2001 Schneider Electric All Rights Reserved

Control Unit Removal

8998-9832

Figure 39: Operating Mechanism in the *Off* Position

8998-9850

Figure 40: Loosening Captive Quarter-turn Fasteners

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, BURN, OR EXPLOSION

- Do not attempt to remove the unit from the structure with the disconnect in the *on* position.
- The control unit is interlocked with the MCC structure to prevent the unit from being withdrawn while the disconnect is in the *on* position. Do not attempt to override the mechanism-to-structure interlock.

Failure to follow these instructions will result in death or serious injury.

The Model 6 MCC is designed for convenient and quick control unit removal and replacement. Follow these steps to remove control units:

1. Move the operating mechanism to the *off* position (see Figure 39).

   NOTE: To clear the door cutout on the circuit breaker disconnect units, fully press the handle operator while opening the door.
2. Loosen the captive quarter-turn fasteners (see Figure 40) on the door and open it. Use a properly rated voltmeter to check for live circuits. De-energize any voltage sources.
3. Release the lock-in device located at the bottom front of the unit (when supplied) by turning the screw on the front of the device until the locking pawl is parallel to the bottom of the unit (see Figure 41).
4. Disconnect the power wiring from the starter terminals or, if provided, the power terminal blocks. Tag the terminations for re-installation (see Figure 42).

   Remove the top portion of the pull-apart control terminal blocks to which field wiring is connected.
5. Push the power leads and the top portion of the control pull-apart terminal blocks through the wiring port and into the vertical wire trough (see Figure 43).

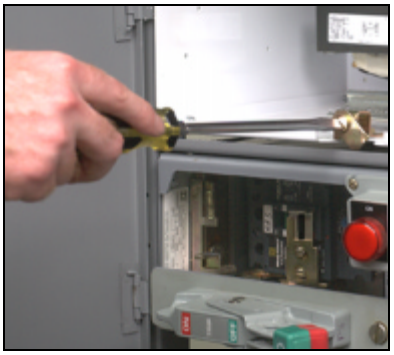

8998-9847

Figure 41: Releasing the Lock-in Device (when supplied)

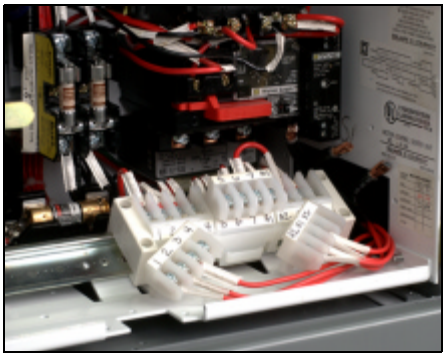

8998-9838

Figure 42: Disconnected Terminal Blocks

8998-9217

Figure 43: Power Leads and Top of Terminal Blocks Fed through Wiring Port

6. When applicable, unscrew the OMNI-Center tap cable from the OMNI-Center trunk line cabling. Feed the tap cable through the wiring port and into the starter unit.

© 2001 Schneider Electric All Rights Reserved

Figure 44: Pulling the Twin Handle Cam Mechanism Forward

Figure 45: Operating the Mechanism-to-Structure Interlock

7. Pull forward on the twin handle cam mechanism located at the top front of the unit to rack the unit partially out of the structure (see Figure 44). This action disconnects the power stabs from the vertical bus. Continue pulling forward until the handles are fully extended.
8. The operating mechanism-to-structure interlock prevents the control unit from being withdrawn or inserted with the handle in the *on* position (see Figure 45).
9. If the withdrawn unit is left in the structure, use appropriate lock-out procedures to avoid re-loading by non-authorized personnel (see Figure 46).
10. Remove the control unit from the structure for servicing. In units with a full bottom plate, additional accessibility to the components and wiring can be achieved by folding the bottom plate down. To do so, lean the unit on its back, remove the two front screws, and fold the bottom plate down (see Figure 47).
11. If necessary, the door can be taken off its hinges without removing the unit. To do so, drive the hinge pins out of the hinge collars, using a small flat-bladed screwdriver or small punch (see Figure 48). Remove the bottom hinge pin first.
12. When reinstalling the hinge pin, make certain that the hooked end is fully engaged into the hinge collar.

Figure 46: Locked Out Device
Standard Model 6 MCC shown

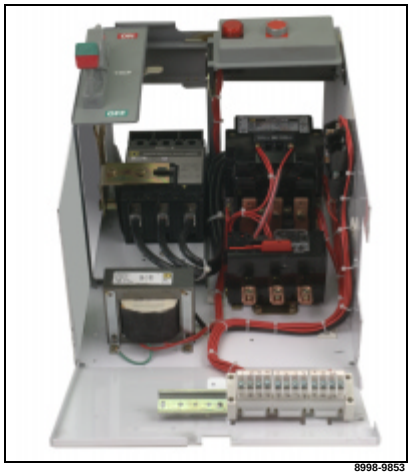

Figure 47: Control Unit Bottom Plate Folded Down

Figure 48: Driving Out Hinge Pin
Standard Model 6 MCC shown

© 2001 Schneider Electric All Rights Reserved

Tests and Maintenance Performed with the Control Unit Removed

CAUTION

HAZARD OF EQUIPMENT DAMAGE

Do not remove the protective lubricant from the stabs. If additional lubricant is required, order Square D electrical joint compound #PJC-7201.

Failure to follow this instruction can result in equipment damage.

Once the control unit is removed, perform the following tests and maintenance:

Stab Assemblies—Inspect the stab assemblies (see Figure 49) for signs of arcing or overheating. Replace the disconnect assembly immediately if overheating has occurred. For replacement disconnect assemblies, see “Section 10—Circuit Breaker and Fusible Switch Selection” on page 91.

NOTE: If the stab assembly is badly pitted, the vertical bus may also need to be replaced.

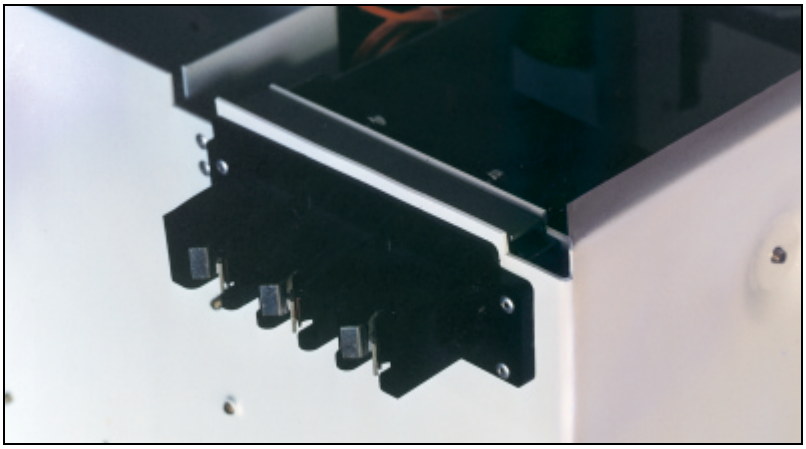

8998-9245

Figure 49: Stab Assembly

Circuit Breaker or Disconnect Switch—Check the circuit breaker or disconnect switch for proper operation. Inspect switch blades; if evidence of arcing or excessive heat is present, replace the switch assembly. Exercise the push-to-trip feature on the circuit breakers.

Operator Mechanism—Check for proper operation of the operator mechanism. Test for proper *on*, *off*, *trip*, and *reset* positions (see Figure 50 on page 71). Check for proper door interlock operation.

NOTE: Fusible switch operator mechanisms do not have “trip” or “reset” positions.

Fuses—Inspect all fuses and fuse clips (see Figure 51 on page 71). Replace any parts showing signs of overheating or arcing.

© 2001 Schneider Electric All Rights Reserved

Starter Contacts—Check the starter contacts (see Figure 52). Replace any that are badly worn or pitted. (See the contactor instruction bulletin included with the original shipment.)

8998-9224

Figure 50: Operator Mechanism in the Tripped Position

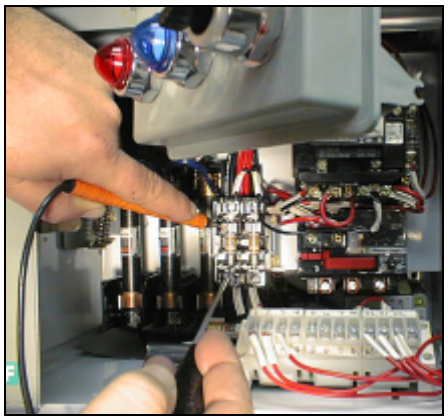
8998-98127

Figure 51: Inspecting Fuses

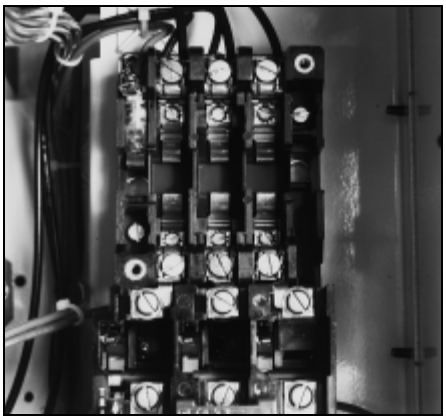
8998-9226

Figure 52: Starter Contacts

Control Devices—Check for proper operation of starters, relays, timers, and other control devices (see Figure 53).

Overload Relay—For melting alloy and bimetallic types (when supplied), manually trip the overload relay to ensure proper operation. Check that the thermal unit is the proper size for the application. Refer to the thermal unit selection tables on the inside of the vertical wire trough doors.

Wiring and Electrical Connections—Check all electrical connections; tighten them if necessary (see Figure 54). Also inspect all power and control wiring, replacing any wire that has worn insulation or shows signs of overheating or cracking.

8998-3122

Figure 53: Control Devices

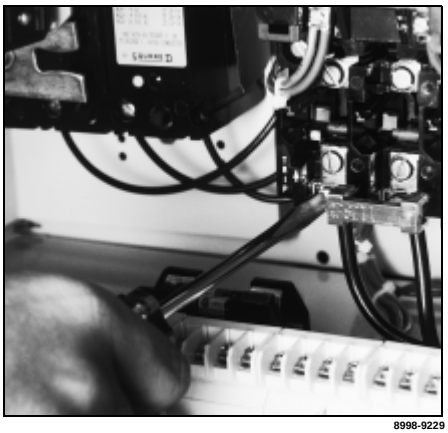
8998-9229

Figure 54: Tightening Electrical Connections

© 2001 Schneider Electric All Rights Reserved

8998-9845

Figure 55: Manual Bus Shutter

⚠DANGER

HAZARD OF ELECTRIC SHOCK, BURN, OR EXPLOSION

- This equipment must be installed and serviced only by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Replace all devices, doors, and covers before turning on power to this equipment.

Failure to follow these instructions will result in death or serious injury.

⚠CAUTION

HAZARD OF EQUIPMENT DAMAGE

- Do not use a megohmmeter on solid state devices, capacitor units, or any devices that are not designed to withstand megohmmeter voltage.
- Disconnect all solid state devices before performing megohmmeter tests on the MCC.

Failure to follow these instructions can result in injury or equipment damage.

Starter Interlocks—Check the mechanical interlocks on reversing, multi-speed, or reduced voltage starters.

Barriers/Insulators—Inspect all insulators, braces, and barriers (see Figure 55); replace any that show signs of arcing damage, tracking, excessive heat, or cracking.

Special Units—Follow the manufacturer's recommended maintenance procedures for special units (e.g. drives, soft starts, and automatic transfer switches).

Reassembly

To reassemble the MCC after testing and maintenance, follow the steps below:

1. Reinstall all units by reversing steps 1–11 in "Control Unit Removal" on page 68 for unit replacement.
2. Replace all barriers and cover plates and close and fasten all doors.

Insulation Test

Before an MCC is re-energized (after installation or regular maintenance), take resistance measurements. Use an insulation tester (megohmmeter) with a potential of 500–1000 V.

Take readings between each phase and from each phase to ground, with the branch disconnects *off* and *on*. Make sure the main disconnect is *off* during all insulation tests.

Readings from a megohm meter with all disconnects *off* will typically be 5–20 megohms. On new equipment that has been stored in a damp area, lower readings may occur during start-up. If the readings are below one megohm, a few branch units may be energized to help dry out the MCC. If additional readings are above one megohm, additional units may be energized. After the equipment has been in operation for 48 hours, readings should be in the 5–20 megohm range.

When megohm meter readings are taken with the disconnects *on* (except for the main), disconnect all devices completing circuits between phases or between phases and neutral (e.g., control transformers). Although readings may be slightly different, observe the one megohm lower limit during start-up.

Record all megohm meter readings on the "Section 9—Insulation Resistance Log" chart on page 89. Any sudden change in resistance values (even within the acceptable range) may indicate potential insulation failure. Early detection and replacement of faulty insulating components helps avoid equipment damage.

If megohm meter readings are below 5 megohms (one megohm during start-up) consult your local Square D field office.

Re-energize the equipment in sequence, starting with the main devices, the feeder devices next, and then the motor starter devices.
(See "Energizing the MCC" on page 49).

© 2001 Schneider Electric All Rights Reserved

Maintenance After a Fault Has Occurred

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, BURN, OR EXPLOSION

- This equipment must be installed and serviced only by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm that power is off.
- Replace all devices, doors, and covers before turning on the power to this equipment.

Failure to follow these instructions will result in death or serious injury.

8998-9214

Figure 56: Operating the Door Interlock Defeat Mechanism

Excessive currents occurring during a fault may result in structure, component, bus, or conductor damage. This damage is caused by mechanical distortion, thermal damage, metal deposits, or smoke from fault currents. After a fault, locate and correct the cause of the fault. Inspect all equipment and make any necessary repairs or replacements before putting the equipment into service again. Make sure all replacement parts are rated properly and are suitable for the application. If in doubt, consult your local Square D field office.

After any fault, perform all maintenance procedures, starting on page 65 and continuing to “Insulation Test” on page 72. Also perform the following procedures after a fault:

1. If the fault occurred downstream from the MCC, perform the appropriate maintenance on all equipment involved.
2. Examine the enclosure. External evidence of enclosure damage usually indicates damage within. Extensive damage requires replacement of the enclosure parts and the enclosed equipment.
3. Replace any parts that are damaged or deformed. Pay particular attention to door hinges and door closing hardware. Inspect the area around any damaged units (both inside and out) for displaced parts from the damaged unit. See **Enclosure** on page 65.
4. Examine bus bars and incoming line compartments; tighten all electrical connections to their proper torques. Replace any deformed bus bars or connectors, as well as any showing signs of arcing damage. Inspect all insulators for cracks or burn marks; replace any displaying these characteristics.
5. Follow the maintenance procedures for control units. Begin with “Control Unit Maintenance” on page 67, and continue to “Insulation Test” on page 72. Also perform the steps listed below:
   a. Examine the disconnect means for evidence of possible damage. Ensure that the operator mechanism properly turns the disconnect *on* and *off*. Exercise the *push-to-trip* feature on circuit breakers. Make sure that the operator mechanism properly resets the circuit breaker.
   b. Check that the door interlock keeps the unit door from opening while the disconnect is in the *on* position.
      NOTE: If the unit door must be opened while the unit is energized, authorized personnel must operate an interlock defeat mechanism (see Figure 56).
   c. Inspect the motor starters for damage. Replace contacts and contact springs if the contacts are welded or show heat damage. If deterioration extends beyond the contacts, replace the entire contactor or starter.
   d. Replace the complete overload relay if the thermal units are burned out, or if any indications of arcing or burning are present on the relay.
   e. Inspect all fuses and fuse clips. Replace all fuses in a set, even if only one or two are open-circuited.
   f. Check all conductors and other devices within the units for signs of damage.
6. Complete an insulation test (see “Insulation Test” on page 72) before placing the MCC back into service.
7. Complete the “Pre-operation Checklists” on page 45.
8. Re-energize the equipment. See “Energizing the MCC” on page 49.

© 2001 Schneider Electric All Rights Reserved

© 2001 Schneider Electric All Rights Reserved

SECTION 7—EXPANSION

The modular design of MCCs permits easy expansion to keep pace with an expanding electrical system.

When space is available in the existing MCC, starter units can easily be added. When no more starter unit mounting space is available, vertical sections can be added to provide additional space.

Starter units may be rearranged or replaced with larger units. In most cases, a Size 2 starter unit can replace a Size 1 starter with no change in mounting space.

Ordering Information

When ordering additional MCC equipment, include the following information:

- Type of equipment being supplied
- Supply voltage, frequency, system type
- NEMA/EEMAC enclosure type
- Enclosure finish
- Control circuit voltage and frequency
- Optional control circuit components required (control transformers, push buttons, pilot lights, selector switches, etc.)
- Special features
- The factory order number of the original MCC (the number is stamped into the structure nameplate on the vertical wire trough door; the unit label inside each control unit also contains the factory order number)

When ordering new vertical sections, also provide the following information:

- Horizontal and vertical bus capacity, material, and plating
- Bus bracing (or available fault current)
- Enclosure dimensions

Installing Additional MCC Units

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, BURN, OR EXPLOSION

- This equipment must be installed and serviced only by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Replace all devices, doors, and covers before turning on power to this equipment.

Failure to follow these instructions will result in death or serious injury.

1. Position the mid-shelf (Item A, Figure 57 on page 76) in the appropriate area of the structure.
2. Place the mounting foot (Item B) of the shelf into the mounting pan slots (Item C). Secure the shelf on the left and right with flat head screws, (Item D, Detail A).
3. Install the hinge leaves (Detail A, Item E) into the hinge slots (Item G), which are on the structure corner channel. With hex head screws (Item H), fasten the hinge leaves to the structure corner channel.

© 2001 Schneider Electric All Rights Reserved

4. Install quarter turn fastener receptacles (Item J) into the bracket slots (Item K) and fasten with hex head screws (Detail B, Item H).

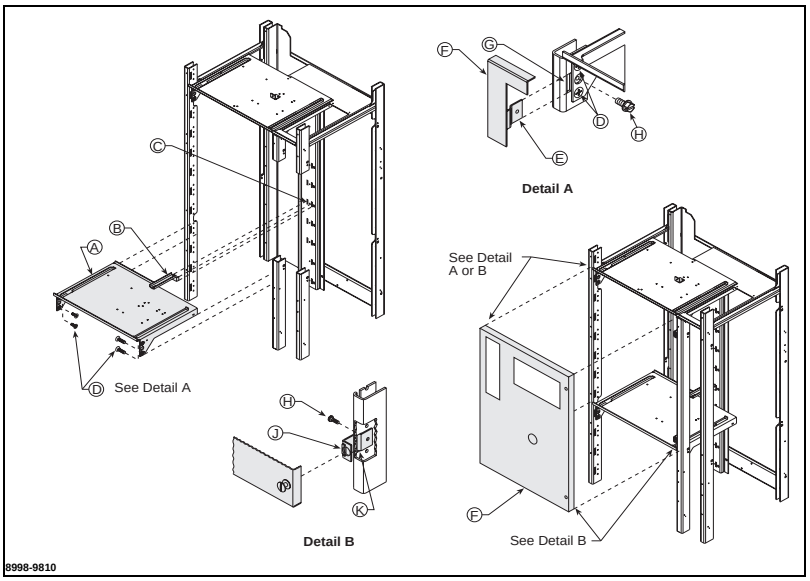

Figure 57: Shelf and Door Installation

5. Locate the vertical wire trough grommet (see Figure 58) nearest the bottom of the control unit. Cut the grommet following the instructions on the grommet. See the second paragraph under “Load and Control Wiring” on page 32.
6. Remove the manual bus shutter(s) (see Figure 59) to make room for the new control unit; slide out the top bus shutter.
7. Make certain that the twin handles of the cam mechanism unit are extended fully forward (see Figure 60). Guide the control unit onto the hanging rails and slide the unit in until the twin handles engage the cam stud located on the support shelf.
8. Press the handles inward until they are flush with the face of the MCC.

   NOTE: COMPAC™ 6 units do not have the twin handle cam mechanism.

Figure 58: Cutting the Vertical Wire Trough Grommet (when supplied)

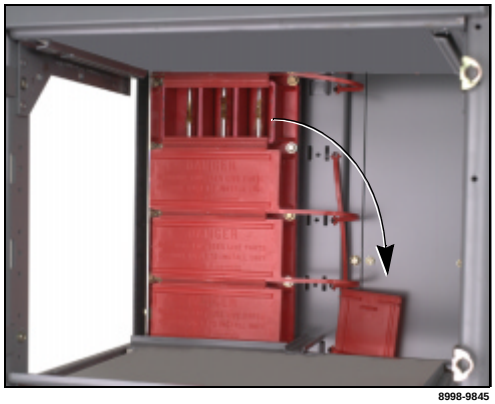

Figure 59: Removing the Manual Bus Shutter

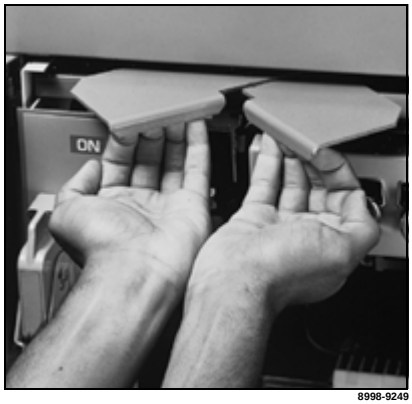

Figure 60: Pulling the Twin Handles of the Cam Mechanism Forward

© 2001 Schneider Electric All Rights Reserved

9. Turn the screw on the control unit lock-in panel (when supplied) located at the bottom front of the control unit (see Figure 61), until the lock-in pawl is latched to the support shelf below the control unit.
10. Pull the power leads from the vertical wire trough through the grommet and into the control unit. Connect them to the power terminals in the control unit (see Figure 62).

    NOTE: To provide additional working clearance, grasp the control station plate on the right side and pull gently, allowing it to hinge open. (See Figure 63).
11. Pull the control leads from the vertical wire trough through the grommet and connect them to the terminals of the top (removable) portion of the control pull-apart terminal blocks (see Figure 63).
12. Close the unit door and secure the quarter-turn fasteners.

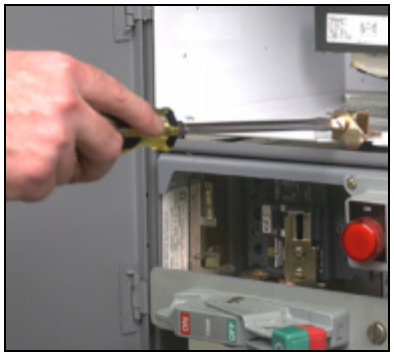

8998-9847

Figure 61: Tightening the Control Unit Lock-in Device (when supplied)

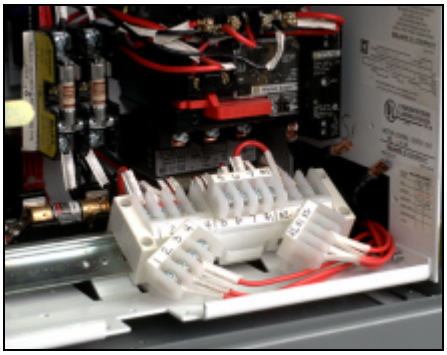

8998-9838

Figure 62: Power Leads Connected to Power Terminals

8998-9849

Figure 63: Connecting Control Leads to the Terminal Blocks

© 2001 Schneider Electric All Rights Reserved

© 2001 Schneider Electric All Rights Reserved

SECTION 8—TROUBLESHOOTING

The following table lists problems encountered with MCCs, their causes, and remedies. This table is of a general nature and covers only the main causes of problems.

General MCC Troubleshooting

Misapplication of a device can result in serious problems; however, rather than list this cause repeatedly below, note that misapplication is a major cause of motor control problems and must always be questioned when a device is not functioning properly.

Actual physical damage or broken parts can usually be quickly located and replaced. Damage caused by water or flood conditions requires special treatment. Contact your local Square D/Schneider Canada field office.

.

⚠DANGER

HAZARD OF ELECTRIC SHOCK, BURN, OR EXPLOSION

- This equipment must be installed and serviced only by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Replace all devices, doors, and covers before turning on power to this equipment.

Failure to follow these instructions will result in death or serious injury.

Table 19: Motor Control Center Troubleshooting Chart

Part	Problem	Cause	Remedy
CONTACTS	Contact Chatter (see Noisy Magnet also)	1. Poor contact in the control circuit.	1. Replace the contact device or use a holding circuit interlock (3-wire control).
		2. Low voltage.	2. Check the coil terminal voltage and voltage dips during starting.
	Welding or Freezing	1. Abnormal inrush of current.	1. Check for grounds, shorts, or excessive motor load current, or use larger contactor.
		2. Rapid jogging.	2. Install a larger device rated for jogging service.
		3. Insufficient tip pressure.	3. Replace contacts and springs. check contact carrier for deformation or damage.
		4. Low voltage which prevents the magnet from sealing.	4. Check the coil terminal voltage and voltage dips during starting.
		5. Foreign matter prevents the contacts from closing.	5. Clean the contacts with an environmentally safe (CFC-free) contact cleaner.
		6. Short circuit or ground fault.	6. Remove the fault. Ensure that the fuse and circuit breaker sizes are correct.
	Short Trip Life or Overheating or Trips	1. Filing or dressing.	1. Do not file the silver tips; rough spots or discoloration do not harm tips or impair their efficiency.
		2. Interrupting excessively high currents.	2. Install a larger device or check for grounds, shorts, or excessive motor currents.
		3. Excessive jogging.	3. Install a larger device rated for jogging service.
		4. Weak tip pressure.	4. Replace contacts and springs; check the contact carrier for deformation or damage.
		5. Dirt or foreign matter on the contact surface.	5. Clean contacts with an environmentally safe (CFC-free) contact cleaner. Reduce the entry of foreign matter into the enclosure.
		6. Short circuit or ground fault.	6. Remove the fault; ensure that the fuse and circuit breaker sizes are correct.
		7. Loose connection in the power circuit.	7. Clear and tighten the connection.
		8. Sustained overload.	8. Check for excessive motor load current or install a larger device.

© 2001 Schneider Electric All Rights Reserved

Table 19: Motor Control Center Troubleshooting Chart (Continued)

Part	Problem	Cause	Remedy
COILS	Open Circuit	Mechanical damage.	Replace the coil; handle and store replacement coils carefully.
	Overheated Coil	1. Overvoltage or high ambient temperature.	1. Check the coil terminal voltage. It should not exceed 110% of the coil rating.
		2. Incorrect coil.	2. Install the correct coil.
		3. Shorted turns caused by mechanical damage or corrosion.	3. Replace the coil.
		4. Undervoltage; failure of the magnet to seal in.	4. Check the coil terminal voltage. It should be at least 85% of the coil rating.
		5. Dirt or rust on the pole faces.	5. Clean the pole faces.
		6. Mechanical obstruction.	6. With power *off*, check for free movement of the contact and armature assembly.
MOTOR LOGIC OVERLOAD RELAYS	Overload relay trips on start-up (after more than 3 seconds).	1. Load is too heavy for motor horsepower.	1. Remove excessive motor load or resize motor.
		2. Wrong overload trip class selected for application.	2. Use Trip Class 20 overload relay instead of Trip Class 10.
		3. Incorrect overload FLA setting.	3. Set FLA adjustment according to motor full-load current.
		4. Use of electronic DC injection brake.	4. Do not use electronic DC injection brakes with solid-state overload relay.
	Overload relay trips on start-up (in less than 3 seconds).	1. Motor branch circuit fuse blown.	1. Replace blown motor branch circuit fuse(s).
		2. Loose motor branch circuit.	2. Tighten motor branch circuit connection.
		3. Motor circuit is not 3-phase.	3. Select different type of overload relay for non 3-phase applications.
		4. Voltage unbalance on feeder.	4. Correct voltage unbalance in feeder.
		5. Motor winding damage in one or more windings.	5. Check motor winding impedance. Rewind if necessary.
		6. Phase loss in primary of wye-delta or delta-wye transformer.	6. Replace blown fuses or tighten connections.
		7. One or more load lead(s) is not routed through relay window or is routed in opposite direction.	7. Pass each load lead through its respective window in the same direction.
		8. Number of load lead passes are different.	8. Each load lead must be looped the same number of passes.
	Overload relay trips while running normally.	1. Load is too heavy for motor horsepower.	1. Remove excessive motor load or resize motor.
		2. Incorrect overload FLA setting.	2. Set FLA adjustment according to motor full-load current.
		3. Use of electronic DC injection brake.	3. Do not use electronic DC injection brakes with solid-state overload relay.
		4. Incorrect overload FLA setting. (Multiple pass applications.)	4. Recalculate FLA adjustment and set according to motor full-load current and number of looped passes.

© 2001 Schneider Electric All Rights Reserved

Table 19: Motor Control Center Troubleshooting Chart (Continued))

Part	Problem	Cause	Remedy
MAGNETIC AND MECHANICAL PARTS	Noisy Magnet	1. Broken shading coil.	1. Replace the magnet and armature.
		2. Dirt or rust on magnet faces.	2. Clean the magnet with a clean, dry cloth.
		3. Low voltage.	3. Check the coil terminal voltage and voltage dips during starting.
	Failure To Pick Up and Seal	1. No control voltage.	1. Check the control circuit wiring for a loose connection or poor contact continuity.
		2. Low voltage.	2. Check for the proper coil terminal voltage and voltage dips during starting.
		3. Mechanical obstruction.	3. With the power off, check for free movement of the contact and armature assembly.
		4. Open or overheated coil.	4. Replace the coil.
		5. Wrong coil.	5. Replace the coil.
	Failure To Drop Out	1. Gummy substance on the pole faces.	1. Clean the pole faces with a clean, dry cloth.
		2. Voltage not removed.	2. Check the coil terminal voltage and the control circuit.
		3. Worn or corroded parts causing binding.	3. Replace the parts.
		4. Residual magnetism due to the lack of an air gap in the magnet path.	4. Replace the magnet and armature.
		5. Welded contacts.	5. See **CONTACTS**–Welding or Freezing on page 79.
PNEUMATIC TIMERS	Erratic Timing	Foreign matter in the valve.	Replace the complete timing head, or return the timer to the factory for repair and adjustment.
	Contacts Do Not Operate	1. Maladjustment of the actuating screw.	1. Adjust according to the instructions in the service bulletin.
		2. Worn or broken parts in the snap switch.	2. Replace the snap switch.
LIMIT SWITCHES	Broken Parts	Overtravel of the actuator.	Use a resilient actuator, or operate within the tolerance of the device.
MANUAL STARTERS	Failure To Reset	Latching mechanism worn or broken.	Replace the starter.

ALTISTART® 46

If there is a communication failure, use the keypad to read fault information. Follow the steps below to install and use the keypad.

1. Remove serial link module # VW3G46301 by removing the screw on the front of the module.
2. Place the module at the bottom of the unit.
3. Install serial link module # VW3A16104 (provided in shipment) in the location of the previous serial link module. Screw the module into place.
4. Refer to the ALTISTART 46 instruction bulletin # 80438-069-01_ (see “Square D Literature List” on page 11).

© 2001 Schneider Electric All Rights Reserved

OMNI-Center Enhanced: MODBUS PLUS Troubleshooting

Use the following checklists and wiring diagram to troubleshoot problems in your OMNI-Center.

Installation/Media Verification

- ❑ Obtain a physical drawing of the network with nodes. If the drawing is unavailable, walk through the system and create one.
- ❑ Check that the number of nodes on your OMNI-Center does not exceed recommendations.
- ❑ Visually inspect network cabling for cuts or abrasions.
- ❑ Verify that terminating resistors are correctly installed. Each end of the network must be terminated.
- ❑ Verify that all cabling connections are secure.
- ❑ Make sure that there is at least 10 ft (3 m) of cable between each vertical section. This is accomplished through use of the factory installed OMNI-cable.

Troubleshooting Tips

- ❑ Determine the type of problem as soon as possible: device, media, or software.
- ❑ Isolate the problem: Remove sections of the network one at a time to reduce the network to the smallest size that still has the problem.
- ❑ Verify that node addresses are set correctly.
- ❑ If a specific OMNI-Center component is not functioning properly, consult the troubleshooting section of the reference material for that component (see “Square D Literature List” on page 11).

© 2001 Schneider Electric All Rights Reserved

Figure 64: Typical Schematic for MODBUS PLUS Communications to a MODICON PLC System (not drawn to scale)

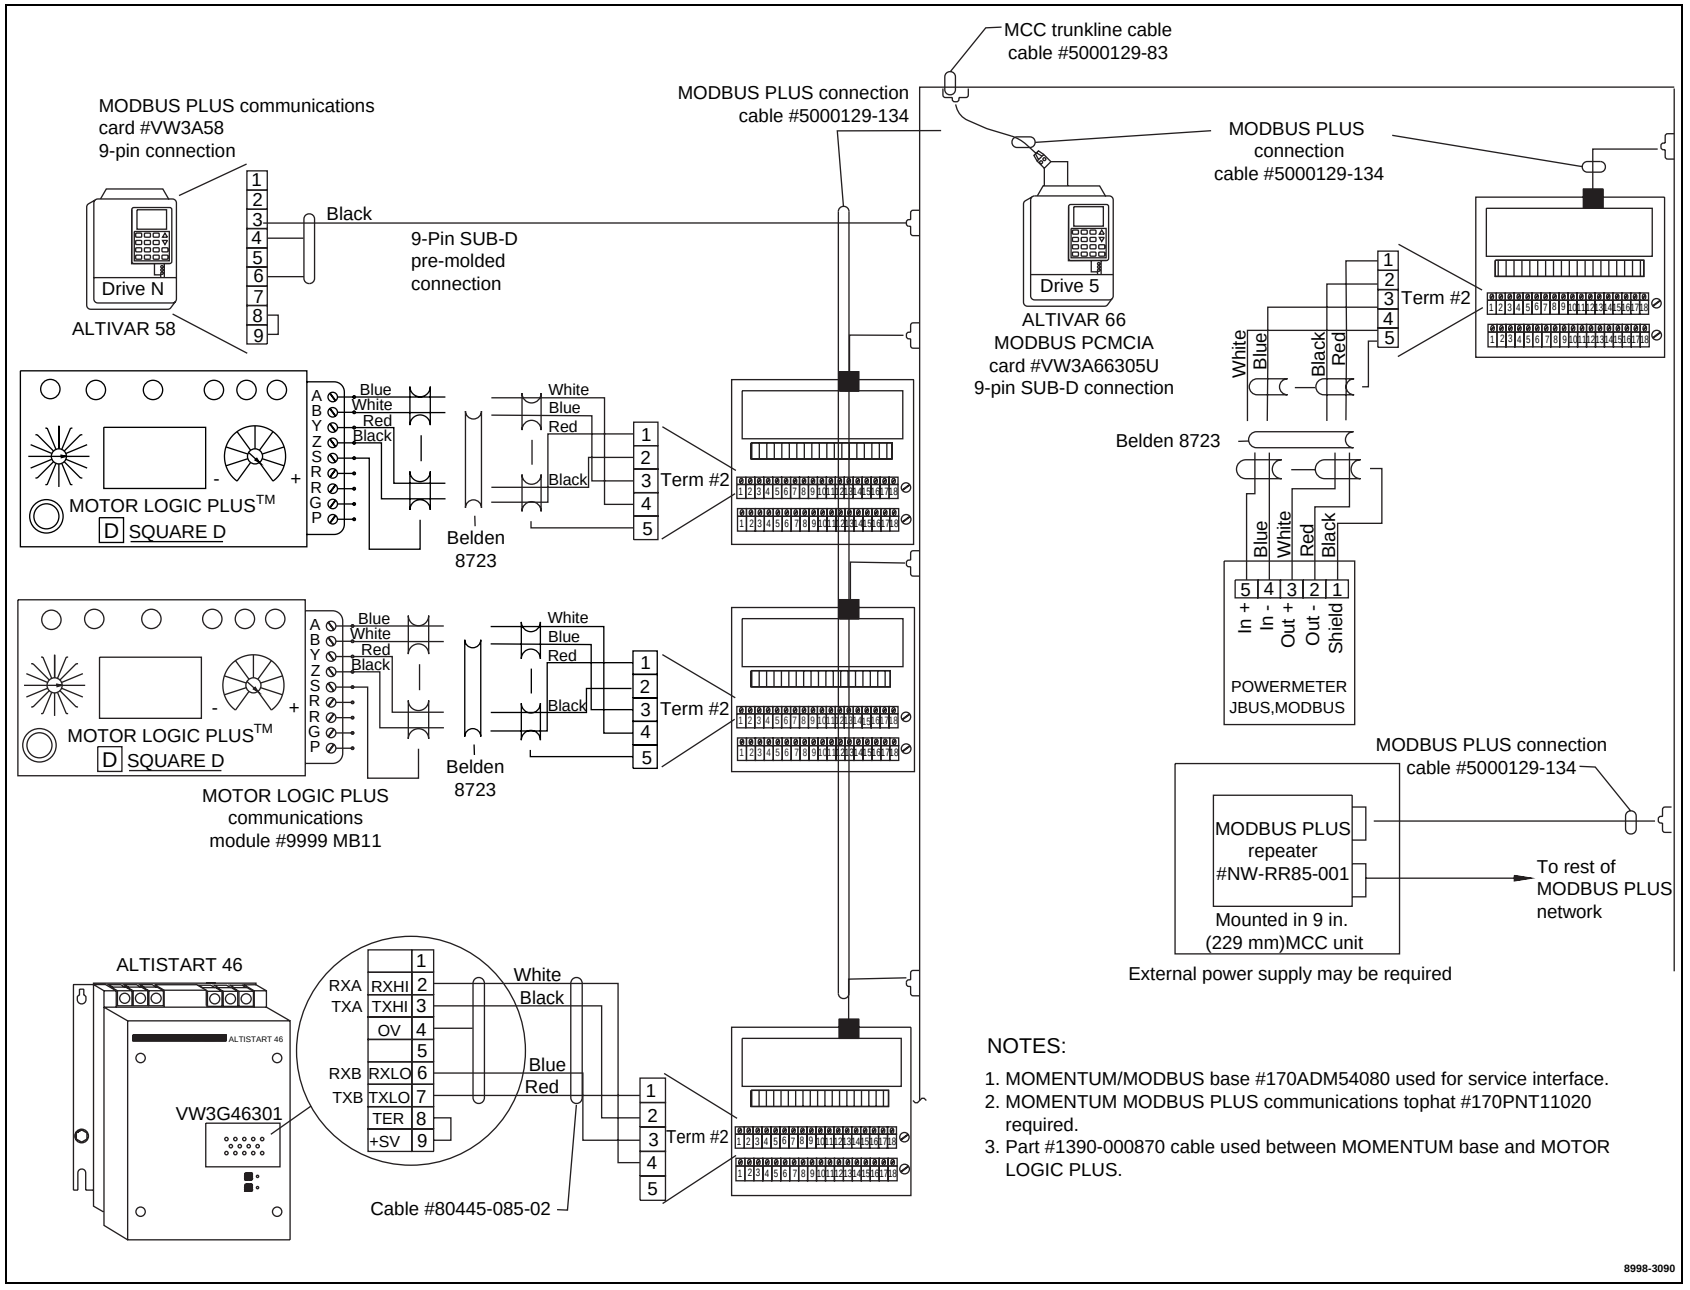

© 2001 Schneider Electric All Rights Reserved

OMNI-Center Enhanced: Profibus® Troubleshooting

Use the following checklists and wiring diagram to troubleshoot problems in your OMNI-Center.

Installation/Media Verification

- ❑ Obtain a physical drawing of the network with nodes. If the drawing is unavailable, walk through the system and create one.
- ❑ Check that the number of nodes on your OMNI-Center does not exceed recommendations.
- ❑ Visually inspect network cabling for cuts or abrasions.
- ❑ Verify that terminating resistors are correctly installed. Each end of the network must be terminated.
- ❑ Verify that all cabling connections are secure.
- ❑ Make sure that the cable shield is connected at both ends of the network. If a potential difference occurs between grounding points, an equalization current can flow through a shield connected at both ends. In this case, install an additional potential equalization line.

  NOTE: See your Profibus installation manual to find installation instructions for an equalization line.
- ❑ The MODICON ".gsd" file is required to identify the MODBUS/Momentum base # 170ADM54080 within a Profibus network. This file is available through Schneider Automation, and can be downloaded from www.modicon.com.

Troubleshooting Tips

- ❑ Determine the type of problem as soon as possible: device, media, or software.
- ❑ Isolate the problem: Remove sections of the network one at a time to reduce the network to the smallest size that still has the problem.
- ❑ Verify that node addresses are set correctly.
- ❑ Verify that baud rates are set correctly for devices (refer to the applicable device reference material for these rates).
- ❑ If a specific OMNI-Center component is not functioning properly, consult the troubleshooting section of the reference material for that component (see "Square D Literature List" on page 11).

© 2001 Schneider Electric All Rights Reserved

Figure 65: Typical Schematic for Profibus Communication to a MODICON PLC System (not drawn to scale)

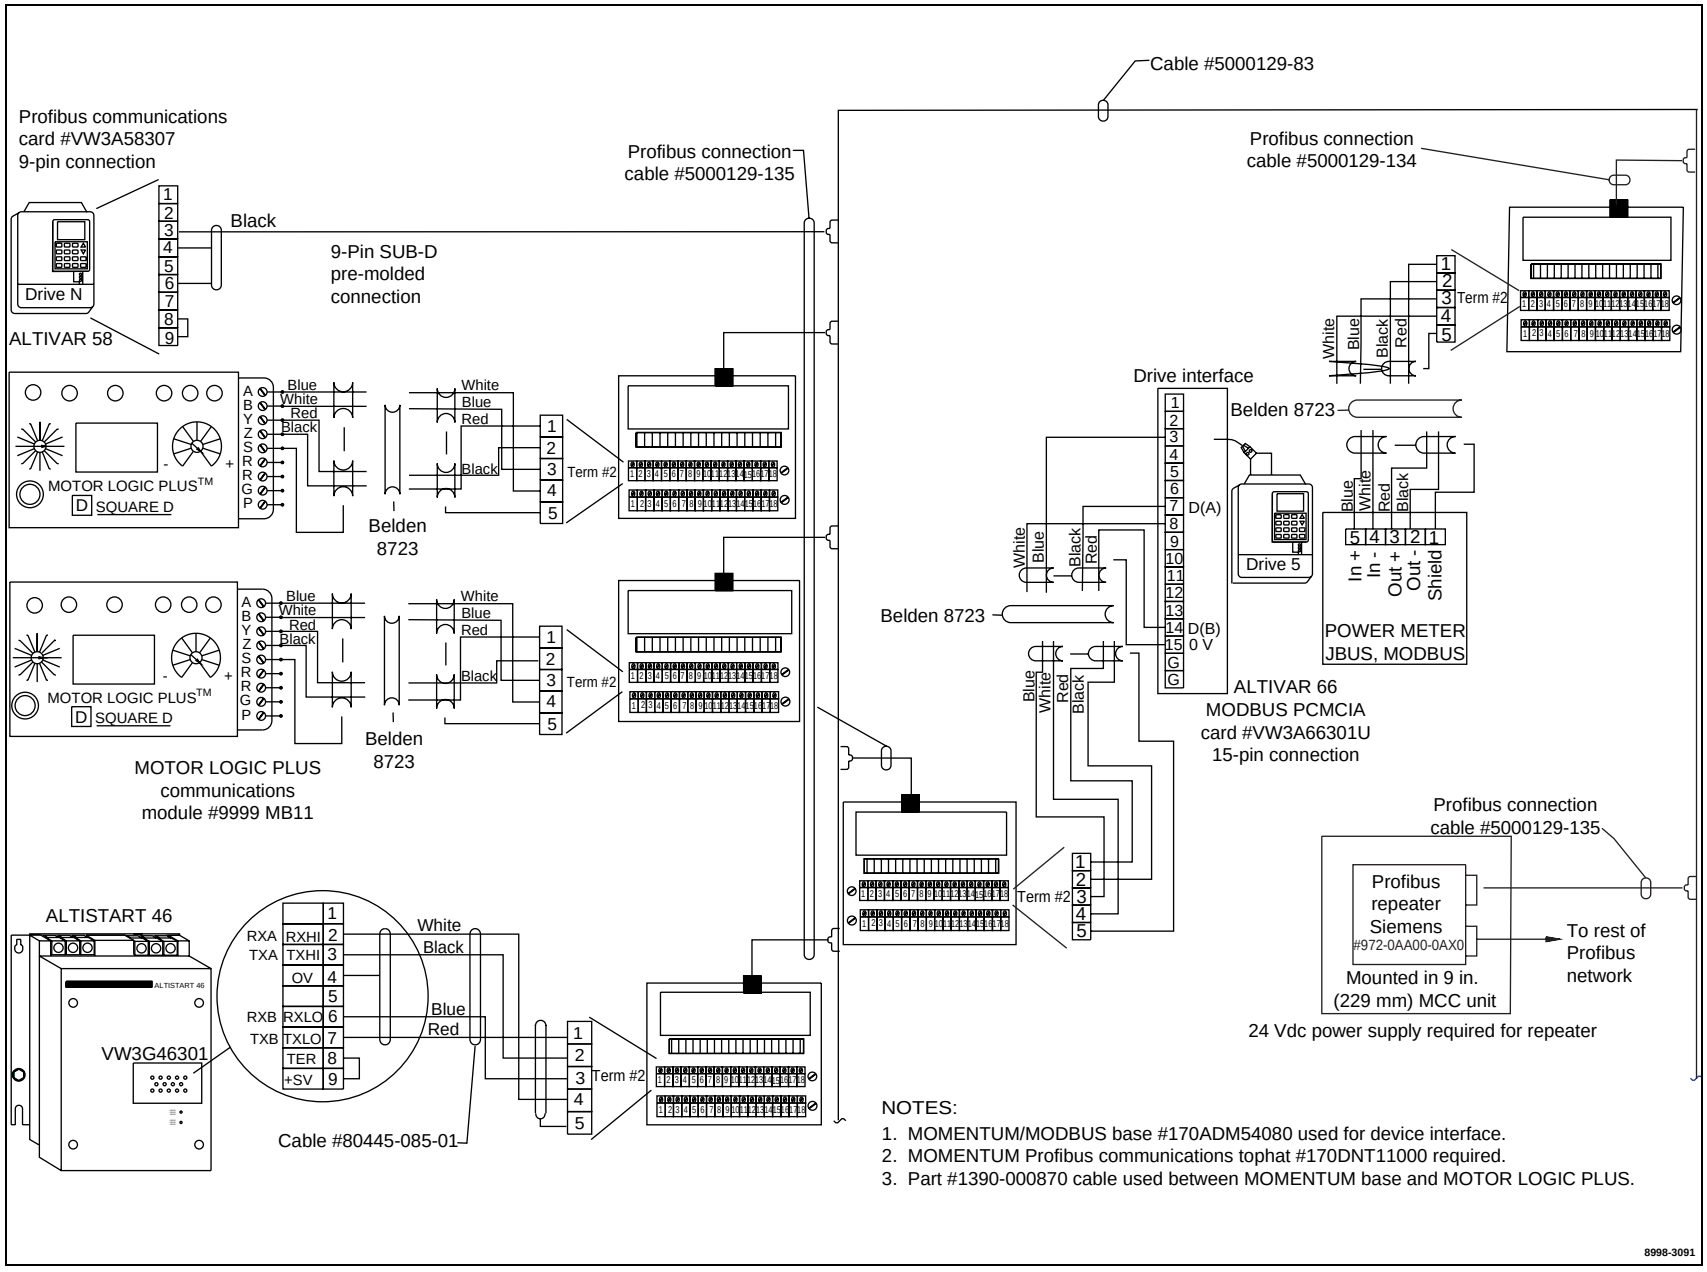

© 2001 Schneider Electric All Rights Reserved

OMNI-Center Enhanced: DeviceNet® Troubleshooting

Use the following checklists and wiring diagram to troubleshoot problems in your OMNI-Center.

Installation/Media Verification

- ❑ Obtain a physical drawing of the network with nodes. If the drawing is unavailable, walk through the system and create one.
- ❑ Check that the number of nodes on your OMNI-Center does not exceed recommendations.
- ❑ Visually inspect network cabling for cuts or abrasions.
- ❑ Verify that terminating resistors are correctly installed. Each end of the network must be terminated. To verify resistor connection, disconnect the power supply and measure the resistance across Can-H and Can-L (blue and white wires). This measurement should be approximately 60 ohms.
- ❑ Check the DeviceNet system grounding. It should be grounded at only one location, typically at the DeviceNet power supply. See “DeviceNet® Communications Network” on page 41 for grounding instructions.
- ❑ Verify that all cabling connections are secure.
- ❑ The MODICON “.eds” file is required to identify the MODBUS/Momentum base # 170ADM54080 within a DeviceNet network. This file is available through Schneider Automation, and can be downloaded from www.modicon.com.

Power Supply Requirements

- ❑ DeviceNet requires a 24 Vdc power supply. When system applications require multiple power supplies, the V+ connection breaks between the network segments in the MCC.

  NOTE: The 24 Vdc network power for DeviceNet must be dedicated for the DeviceNet network only.
- ❑ Measure the 24 V supply at the middle and ends of the network. Make sure the length conforms to the power drop requirements in your DeviceNet manual.

Troubleshooting Tips

- ❑ Determine the type of problem as soon as possible: device, media, or software.
- ❑ Isolate the problem: Remove sections of the network one at a time to reduce the network to the smallest size that still has the problem.
- ❑ Verify that node addresses are set correctly.
- ❑ Verify that baud rates are set correctly for devices (refer to the applicable device reference material for these rates).
- ❑ Verify that the Momentum I/O base has been setup properly (see “DeviceNet® Communications Network” on page 41).
- ❑ If a specific OMNI-Center component is not functioning properly, consult the troubleshooting section of the reference material for that component (see “Square D Literature List” on page 11).

© 2001 Schneider Electric All Rights Reserved

Figure 66: Typical Schematic for DeviceNet Communications to an SLC-500 PLC System (not drawn to scale)

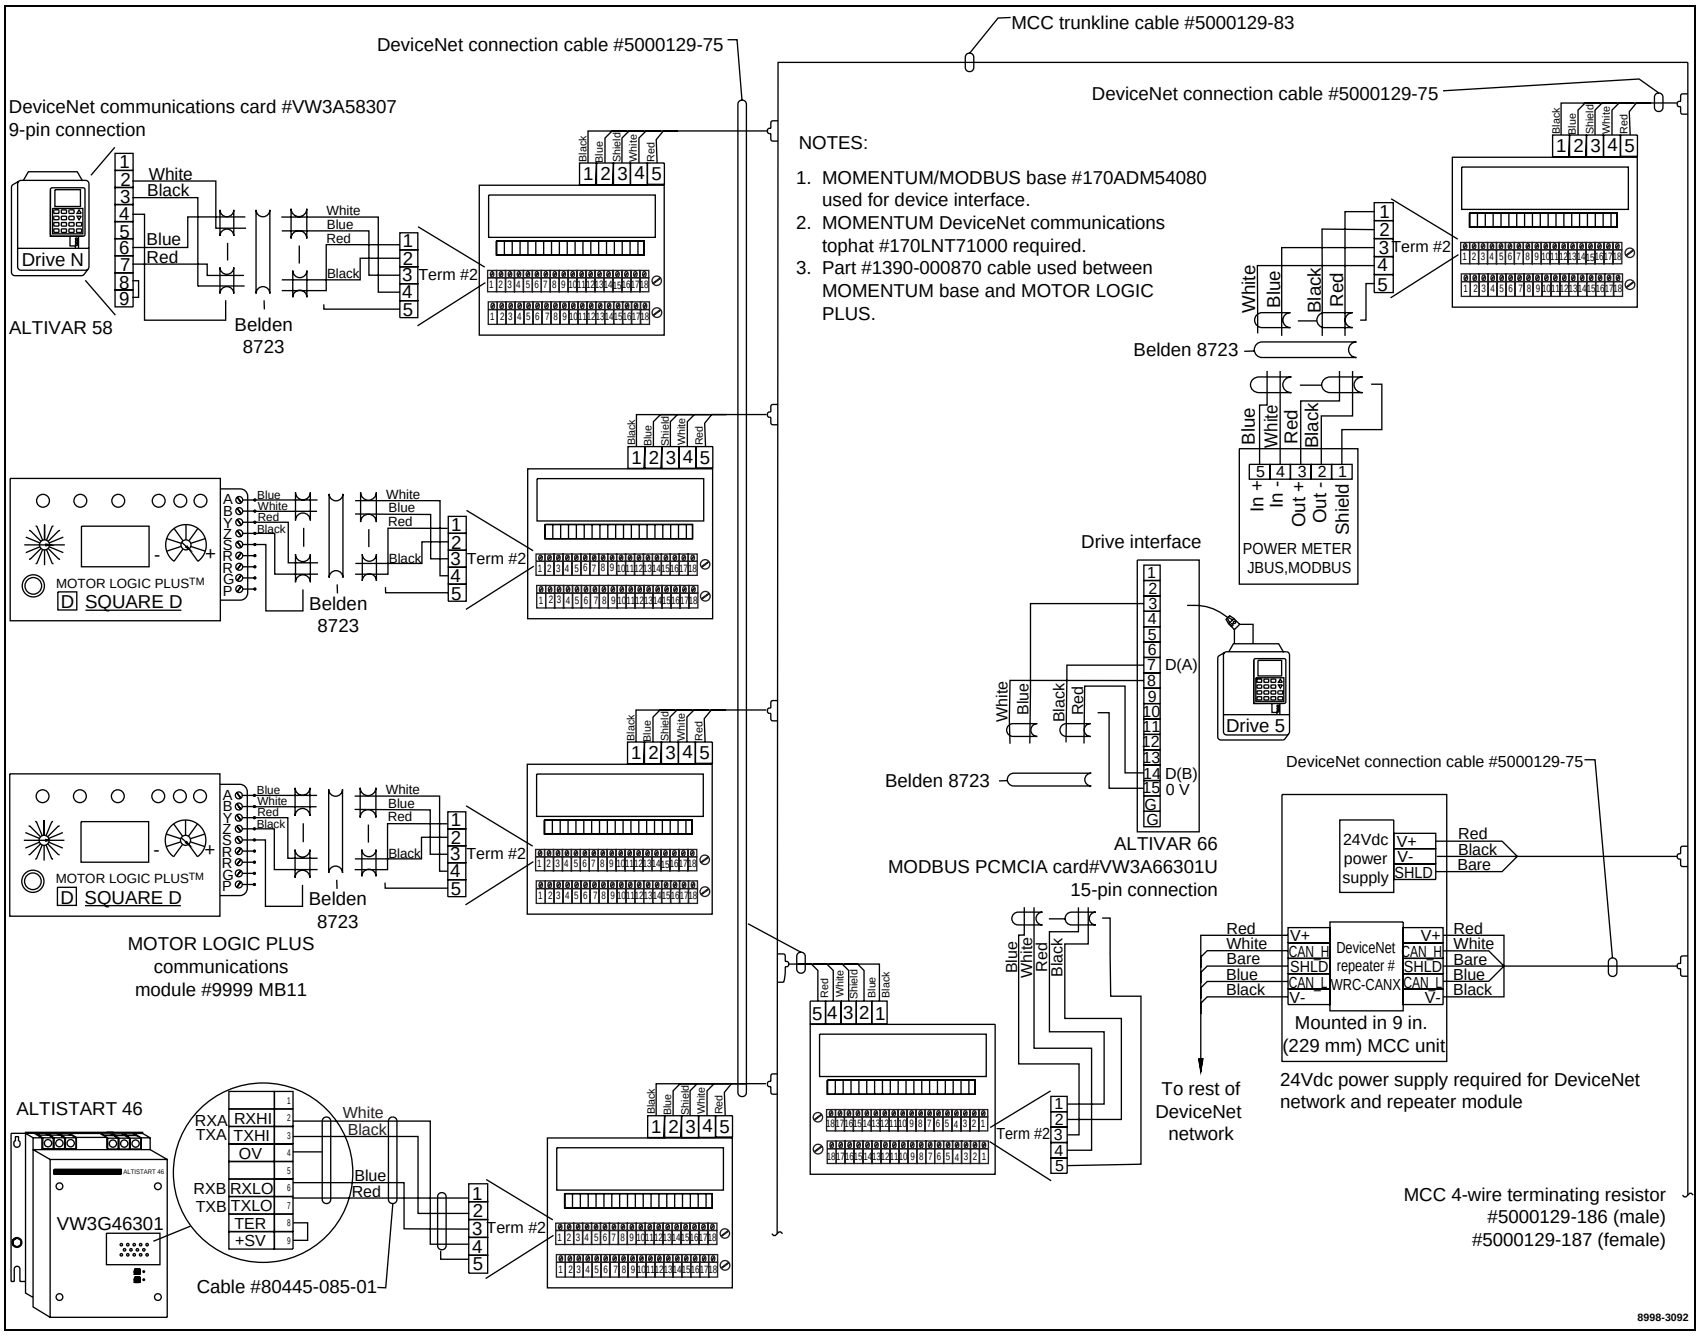

© 2001 Schneider Electric All Rights Reserved

© 2001 Schneider Electric All Rights Reserved

SECTION 9—INSULATION RESISTANCE LOG

⚠ DANGER

HAZARD OF ELECTRIC SHOCK, BURN, OR EXPLOSION

- This equipment must be installed and serviced only by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Replace all devices, doors, and covers before turning on power to this equipment.
- Follow the instructions in "Insulation Test" on page 72.

Failure to follow these instructions will result in death or serious injury.

	Phase-To-Phase			Phase-To-Ground		
All Disconnects Open						
Date	**A-B**	**B-C**	**C-A**	**A-ground**	**B-ground**	**C-ground**
All Disconnects Closed						
Date	**A-B**	**B-C**	**C-A**	**A-ground**	**B-ground**	**C-ground**

© 2001 Schneider Electric All Rights Reserved

© 2001 Schneider Electric All Rights Reserved

SECTION 10—CIRCUIT BREAKER AND FUSIBLE SWITCH SELECTION

Square D recommends replacing the entire disconnect assembly instead of replacing a circuit breaker or switch. The disconnect assembly includes the operating mechanism and the appropriate circuit breaker or switch. Replacing the entire assembly requires only the removal of four screws, a procedure that is much simpler and quicker than replacing an individual circuit breaker or switch. Always use replacement devices of the same type and rating as the device being removed. Using a different type of disconnect or one with a different rating may alter the short circuit ratings of the motor control center.

NEMA/EEMAC SIZE 1–4 combination starters with MAG-GARD® magnetic only circuit breakers,
NEMA/EEMAC Size 5 combination starters with KA frame (250 A maximum) MAG-GARD magnetic only circuit breakers

To replace this circuit breaker:	Order this disconnect assembly:	To replace this circuit breaker:	Order this disconnect assembly:
FAP3600311M	M6DSAMG003M11	FAP3610018M	M6DSAMG100M18
FAP3600712M	M6DSAMG007M12	KAP3625025M	M6DSAMG250M25
FAP3601513M	M6DSAMG015M13	KAP3625029M	M6DSAMG250M29
FAP3603015M	M6DSAMG030M15	KAP3625031M	M6DSAMG250M31
FAP3605016M	M6DSAMG050M16		

NOTE: See page 92 for modifications.

NEMA/EEMAC SIZE 1–4 combination starters with thermal-magnetic circuit breakers,
NEMA/EEMAC Size 5 combination starters with KA frame (250 A maximum) thermal-magnetic circuit breakers,
main and branch feeder circuit breakers through 250 A. For dual-mounted circuit breaker units, contact Square D or Schneider Canada representatives.

To replace this circuit breaker:	Order this disconnect assembly:	To replace this circuit breaker:	Order this disconnect assembly:
FAP36015	M6DSATM015M	FAP36100	M6DSATM100M
FAP36020	M6DSATM020M	KAP36110	M6DSATM110M
FAP36030	M6DSATM030M	KAP36125	M6DSATM125M
FAP36040	M6DSATM040M	KAP36150	M6DSATM150M
FAP36050	M6DSATM050M	KAP36175	M6DSATM175M
FAP36060	M6DSATM060M	KAP36200	M6DSATM200M
FAP36070	M6DSATM070M	KAP36225	M6DSATM225M
FAP36080	M6DSATM080M	KAP36250	M6DSATM250M
FAP36090	M6DSATM090M		

NOTE: See page 92 for modifications.

NEMA/EEMAC SIZE 1–4 combination starters with fusible switches

To replace this size switch:	Order this disconnect assembly:	To replace this size switch:	Order this disconnect assembly:
30 A	M6DSAFS030M ①	100 A	M6DSAFS100M ②
60 A	M6DSAFS060M ①	200 A	M6DSAFS200M ②

Main and branch feeder fusible switches through 200 A

To replace this size switch:	Order this disconnect assembly:	To replace this size switch:	Order this disconnect assembly:
30 A	M6DSAFS030M ①	100 A	M6DSAFS100M ②
30 A	M6DSAFS030M ①	200 A	M6DSAAS250M ②
60 A	M6DSAFS060M ①		
60 A	M6DSAFS060M ①		

① Voltage form must be added:

U212: 0–250 V
U213: 600 V

② Does not include fuse clips.

NOTE: See page 92 for modifications.

© 2001 Schneider Electric All Rights Reserved

Replacement of the operating mechanism is not required for NEMA/EEMAC Size 5 combination starters with LA frame (400 A max.) circuit breakers, NEMA/EEMAC Size 5 combination fusible starters, NEMA/EEMAC Size 6 combination starters, main and branch circuit breakers over 250 A, or for main and branch switches over 200 A. Order a replacement circuit breaker or automatic molded case switch of the same type as the original device.

To order an FH/KH type high interrupting circuit breaker instead of the standard FA/KA type circuit breaker, add form Y532 to the disconnect assembly number.

Example: To replace an FHP36100, order an M6DSATM100M Y532.

These modifications may also be added to disconnect assemblies when required:

Y74 Single pole interlock on operating mechanism

Y301 Current limiting module (for starter units Size 1–3)

Y303 Current limiting module (for 15–100 A branch feeders)

Y312 Class R fuse clips

Y316 Class J fuse clips

Y532 High interrupting circuit breaker

U203 Disconnect for NEMA/EEMAC Type 12 units

U341 Extra high interrupting circuit breaker

© 2001 Schneider Electric All Rights Reserved

APPENDIX A—TYPICAL SPECIFICATIONS

This section includes requirements for a Model 6 OMNI-Center Enhanced MCC.

NOTE: This specification is intended for use as an addition to the Model 6 Industrial MCC typical specification.

General

A. The MCC shall be provided with a factory wired and tested communication system. I/O modules shall be located in each unit of the MCC and connected via a dedicated cabling system. Multiple control networks shall be supported, at the device level, via inter-changeable communication adapters. **As a minimum, MODBUS PLUS®, DeviceNet®, and Profibus® must be supported.**

B. Unless otherwise indicated, I/O will be 120 Vac. Control power shall be provided by individual unit control power transformers.

C. The I/O system shall feature pull-apart connectors, allowing the removal of the I/O modules without disturbing the wiring. LEDs shall be provided to indicate module and I/O status.

D. The MCC shall be Square D Model 6 OMNI-Center or its equivalent.

Communication Cabling System

A. The MCC shall employ a pre-engineered communication cabling system to interconnect units within the MCC.

B. The cabling system will be UL 498 Listed for 600V.

C. The system will be constructed of molded PVC material using five #22 AWG conductors:

- Two (2) conductors used for power (Red V+, Black Common)
- Two (2) conductors used for signal (White Data, Blue Data)
- One (1) conductor used for shield (Bare)

D. Cable assemblies will utilize 5-pole Micro-style connectors with a single keyway and comply with SAE-H1738-2 specifications.

E. Connectors are to be epoxy-coated for 500-hour salt-spray test per Mil-Std. 202F.

F. Cable coupler design shall include a vibration-resistant ratchet to prevent loosening.

G. An extended ground pin shall ensure first make/last break ground connections.

H. The cabling system shall consist of individual trunk line segments in each MCC section. A trunk/tap topology will be used. The trunk line segments are routed from the lower wire-way into each vertical section. The trunk line for sections containing plug-in vertical bus shall have six taps spaced 12 in. apart. Unused tee connectors are capped at the factory.

I. A 36-inch (3-foot) “pigtail” cable shall connect the communication device in each MCC unit to the trunk cable via a pre-engineered tap. One end of the pigtail cable terminates in a Micro-style connector and is attached to the trunk. The other end terminates at the communication device in the MCC unit.

J. Addition, removal, or rearrangement of units shall not interrupt the trunk line and shall not affect the cabling of other units attached to the trunk line.

K. Provisions for appropriate terminators and grounding shall be provided.

© 2001 Schneider Electric All Rights Reserved

Starters

A. Starter units shall employ [fusible switches/thermal magnetic circuit breakers] for short circuit protection. [Circuit breaker units 100 amps and lower shall have non-adjustable magnetic trip points to eliminate the need to adjust trip settings in the field.]

B. Starters shall have a minimum of six inputs and three outputs available for user-defined functionality. I/O modules shall be common and shall be independent of starter size or type. Starter I/O modules shall be MODICON module # 170ADM54080 or approved equivalent.

C. Unless otherwise indicated, an input for overload and control power status shall be provided (FAULT/READY).

D. Unless otherwise indicated, an input for contactor state shall be provided (CLOSED=ON/OPEN=OFF). Indication of contactor mechanical state is required for testing without connected loads and for detection of mechanically forced contactors. Current sensing switches are not acceptable.

E. Transient suppressors shall be supplied for all coils in each individual starter unit. NEMA size 3 or larger starters shall include an interposing relay to electrically isolate the starter coil from the output.

F. Starter units shall employ Square D MOTOR LOGIC PLUS™ solid state overload relay or approved equivalent (see “Overloads” below).

G. *[Optional]* A removable jumper shall be provided to allow an external emergency stop circuit to be field wired in series with the motor control circuit.

Overloads

A. All motor starters shall include fully programmable electronic overload relays. Overloads shall provide a 4.5:1 adjustment range matched to NEMA contactor sizes 00-6. Overload relays shall monitor all 3 individual phases for current and voltage.

B. Programming via network communications shall be supported. Overload relays shall connect to the I/O module within the starter unit via MODBUS RS485 communications.

C. Overloads shall include an alphanumeric LED display for local programming and diagnostic information. Local programming must be possible by applying 9 Vdc to facilitate bench programming or programming without control power available.

D. Automatic, network, electronic, and manual reset functions shall be supported.

E. The following protective functions shall be provided based on user configurable parameters:

- Overload/underload/jam
- High/low voltage
- Phase unbalance and reversal (voltage and current)
- Ground fault
- Rapid cycling

F. The overload shall provide the following user configurable parameters:

- Trip class (5, 10, 15, 20, 30)
- Command (Trip, Reset/Run, Display Lock, Network Config Enable)
- Rapid Cycle Timer (RD1)

© 2001 Schneider Electric All Rights Reserved

- Overload and Phase Unbalance Restart Delay (RD2)
- Underload Restart Delay (RD3–Dry Well Recovery Timer)
- Number of restarts after faults (Automatic Reset Mode)
- Number of restarts after Underload fault (Automatic Reset Mode)
- Underload Trip Delay

G. The overload shall provide the following diagnostic and operational information:

- Error and Trip Indicators
- Ground Fault, L1, L2, L3, and 3-Phase Average Currents
- L1-L2, L2-L3, L1-L3, and 3-Phase Average Voltages
- Voltage and Current Unbalance
- Power Factor Angle
- Thermal Capacity Remaining
- Fault History (last 4 faults)
- Product Identifier/Scale Factor
- RD1, RD2, and RD3 Timer Value

Mains and Branches

[Optional] Specified main and branch feeder units shall be equipped with a digital metering device capable of communication on the network of choice. Meters shall be Square D Power Meter Model 620 or equivalent.

Drives

Drives shall be capable of being configured for control and data acquisition over network of choice based on “General” on page 93.

Testing

All system components shall be factory-wired and -tested as a system prior to shipment. Testing shall be designed to verify system operation, and shall include as a minimum verification of the following:

1. Drawings and bill of materials
2. I/O addressing
3. Correct device operation by I/O address
4. Host communications
5. Control network interface

© 2001 Schneider Electric All Rights Reserved

APPENDIX B—OMNI-CENTER CABLING REPLACEMENT PARTS

MCC Standard Cabling Assemblies Parts List

Part #	Description	Use
3463512-1	Female threaded cap	Unused male taps all networks (approximately 2 per MCC)
3463512-3	Female threaded cap	Unused female taps all networks (approximately 4 per section)
5000129-75	5P MM DC male in-line plug 36 inches (stripped and tinned)	MODBUS unit taps (1 per unit)
5000129-76	5P MM DC female-to-male in-line assy 20 inches	Extension all networks
5000129-77	5P MM DC female-to-male in-line assy 24 inches	Extension all networks
5000129-78	5P MM DC female-to-male in-line assy 25 inches	Extension all networks
5000129-79	5P MM DC female-to-male in-line assy 30 inches	Extension all networks
5000129-80	5P MM DC female-to-male in-line assy 35 inches	Extension all networks
5000129-81	5P MM DC female-to-male in-line assy 25 feet	Field installation/special cables
5000129-83	5P MM DC F-F-F-F-F-F-F-MIL Harness assy 16 feet 2 inches (concept 2)	Main trunk cable all networks (1 per standard section)
5000129-85	5P MM DC male in-line plug 25 feet	Field installation/special cables
5000129-86	5P MM DC female plug 25 feet	Field installation/special cables
5000129-88	5P MM DC female-to-female-to-male in-line tee	Field installation/special cables
5000129-91	Female field attachable	Field installation/special cables
5000129-93	Male in-line plug field attachable (external thread)	Field installation/special cables
5000129-121	5P MM DC male in-line plug 200 feet	Field installation/special cables
5000129-122	5P MM DC male in-line terminator 121 ohms (white/blue pins)	Profibus, DeviceNet, MODBUS PLUS, MODBUS 2 wire (1 per segment)
5000129-123	5P MM DC female terminator 121 ohms (white/blue pins)	Profibus, DeviceNet, MODBUS PLUS, MODBUS 2 wire (1 per segment)
5000129-134	5P MM DC male in-line to DB-9 MODBUS PLUS assy 36 inches	MODBUS PLUS unit taps (1 per unit)
5000129-135	5P MM DC male in-line to DB-9 assy 36 inches	Profibus unit taps (1 per unit)
5000129-136	5P MM DC male in-line to DB-9 ALTIVAR 58 MODBUS assy 36 inches	MODBUS ALTIVAR 58 unit taps (1 per unit)
5000129-186	5P MM DC male in-line terminator 121 ohms (white/blue red/black pins)	MODBUS 4 wire systems (1 per segment)
5000129-187	5P MM DC female terminator 121 ohms (white/blue red/black pins)	MODBUS 4 wire systems (1 per segment)
5000129-230	5P MM DC tapping tee with shield ground wire and lug (capacitive shield break)	All networks but SERIPLEX® (1 per section)
5000129-231	5P MM DC tapping tee with shield ground wire (red wire broken) (black)	SERIPLEX (1 per power supply)
5000129-233	5P MM DC male in-line plug 36 inches (ferrules)*	DeviceNet/SERIPLEX unit taps (1 per unit)
5000129-295	5P MM DC female drop on female-to-male in-line assy 16 feet	Main trunk cable all networks (1 per full section unit)
80445-085-02	5P MM DC male in-line to DB-9 MODBUS 4 wire assy 36 inches	MODBUS 4 wire ALTISTART 46 unit taps (1 per unit)

* For 2 SERIPLEX modules, cut cable 4 inches, remove jacket, shrink tube, and splice with double ferrule # AZ5DE005.

© 2001 Schneider Electric All Rights Reserved

APPENDIX C—OMNI-CENTER CABLING SYSTEM SPECIFICATIONS

The Model 6 OMNI-Center uses a dedicated MCC network cable assembly. This cable assembly is UL498 Listed for 3 A at 600 V. The assembly is 100% dielectrically tested at a minimum of 2000 V for 1 second. The cable carries a stand-alone 600 V AWM rating (UL style 1990). The individual conductor insulation and the cable jacket are both rated for 600 V. The following table contains a summary of the cable characteristics:

Table 20: Model 6 OMNI-Center Cabling System Specifications

Parameter	Rating
Wire	Four #22 AWG (7x30 stranded) tin-plated annealed copper
Lay	4 conductors 2.5 RH lay white/red/blue/black with foam polypropylene tape 25% overlap
Conductor insulation	600 V foam high density polyethylene 27 mil minimum thickness
Jacket insulation	600 V PVC 27 mil minimum thickness
Color-code	Color-coded white/red/blue/black
Shield	100% alum/Mylar with #22 AWG drain 25% overlap
O.D.	0.31
Current rating at 60°C	3 A
Nominal inductance	120 ohms
Capacitance diagonal conductors	8 PF/ft
Capacitance conductor to all other conductors/ shield	18 PF/ft
Capacitance conductor to shield	14.5 PF/ft
Diagonal conductor impedance at 1 MHz	165 ohms
Conductor DCR at 20°C	15 ohms/1000 ft
Shield DCR at 20°C	13 ohms/1000 ft
Attenuation at 1 MHz	0.148 dB/100 ft
Diagonal conductor propagation velocity	78%
Listing/Marking	UL 1581, E 151405, AWM 600 V, CM, Class 2, CUL, CM 4/C 22, AWG 18 PF/ft
Flame test	FT-1

© 2001 Schneider Electric All Rights Reserved

APPENDIX D—TECHNICAL SUPPORT

The Model 6 OMNI-Center incorporates many Schneider Electric products within one package. Following are the Technical Support numbers for some of these products:

Device Name	Location	Technical Support No.
Motor Control Centers*	Seneca, SC: MCC Technical Assistance Group (TAG)	(888) Square D (888) 778-2733
POWERLOGIC Equipment SMS-3000 Software	LaVergne, TN: POWERLOGIC Technical Assistance	(615) 287-3400
Variable Frequency Drives Soft Starters Starters/Contactors/Overloads	Raleigh, NC: Raleigh Help Desk	(919) 266-8600
Schneider Automation Equipment & Software	North Andover, MA: Customer Central	(800) 468-5342
SERIPLEX	Raleigh, NC: SERIPLEX Technology Organization	(800) 775-9462
Industrial Application Team	Raleigh, NC	(800) 468-5342
Field Services Organization Support	Florence, KY	(800) 634-2003

* The MCC Technical Assistance Group is your first point of contact for any MCC questions.

© 2001 Schneider Electric All Rights Reserved

Square D/Schneider Electric
1990 Sandifer Blvd.
Seneca, SC 29678 USA
1-888-Square D (1-888-778-2733)
www.SquareD.com

Square D and are registered trademarks of Square D Company or related companies. All other trademarks are the intellectual property of their respective companies.

Bulletin No. 80445-109-01A January 2001